



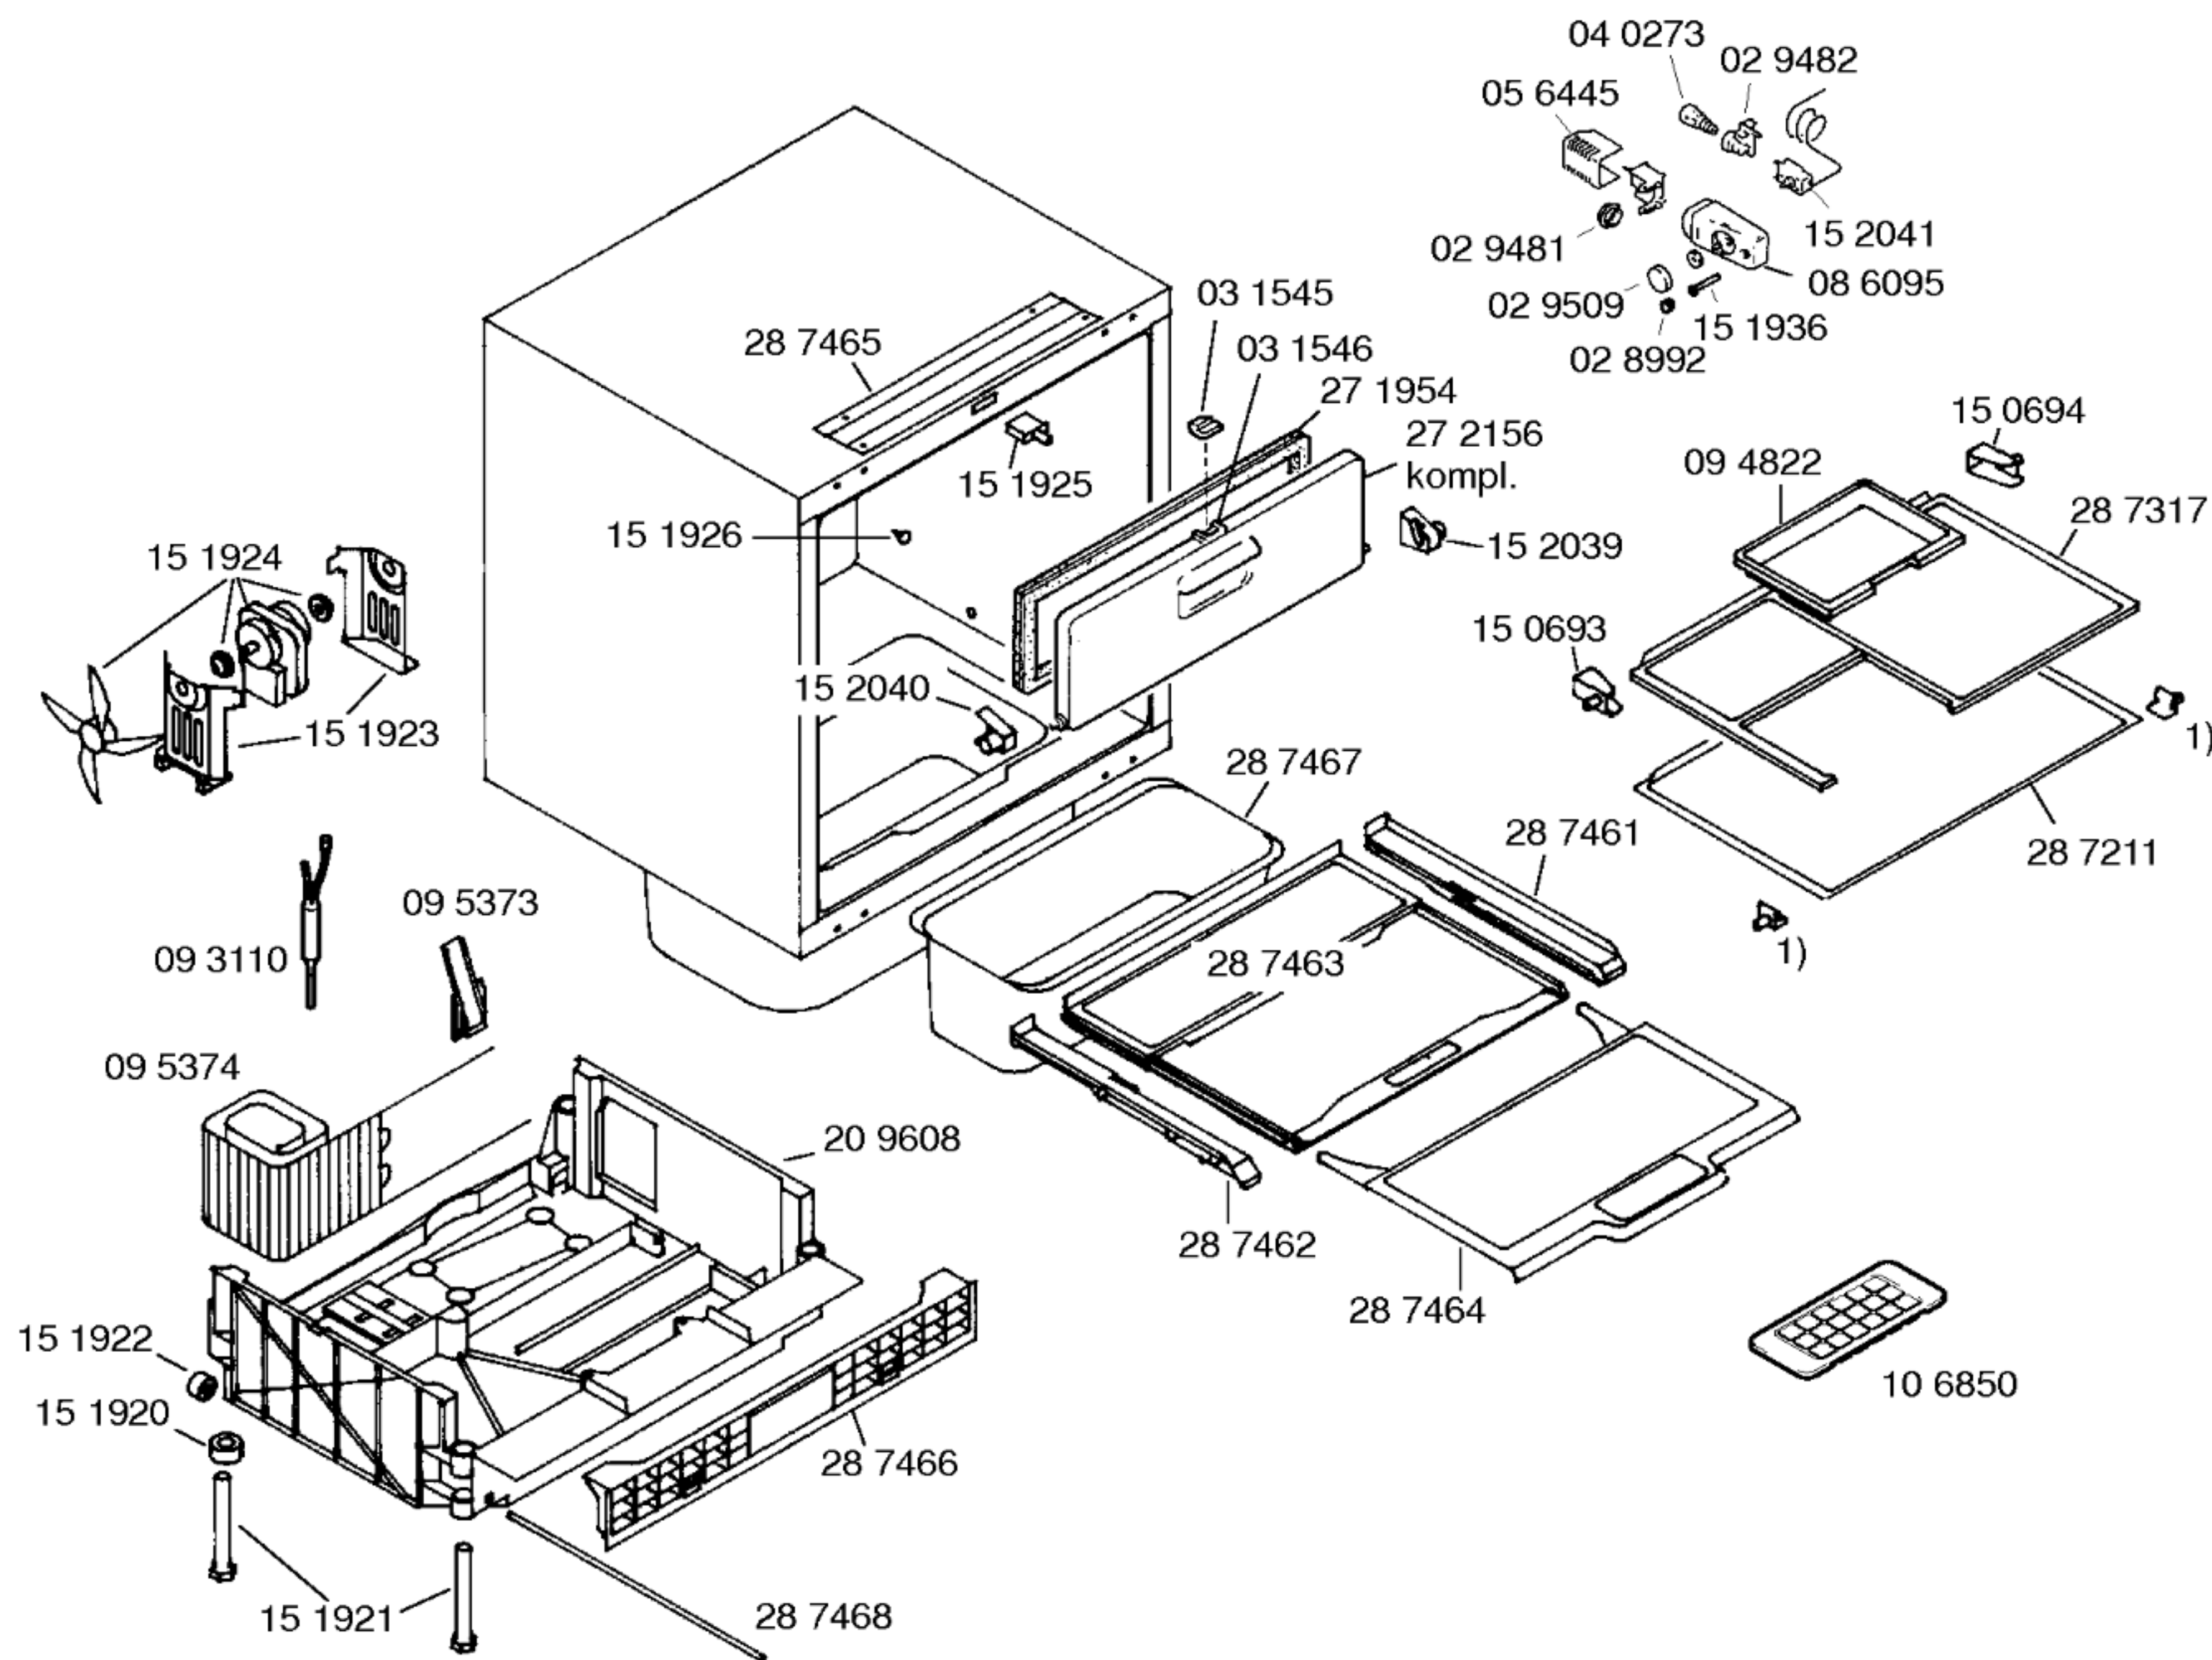


Gebrauchsanweisung
51 7443
Montageanleitung
51 7414

1) 15 0692

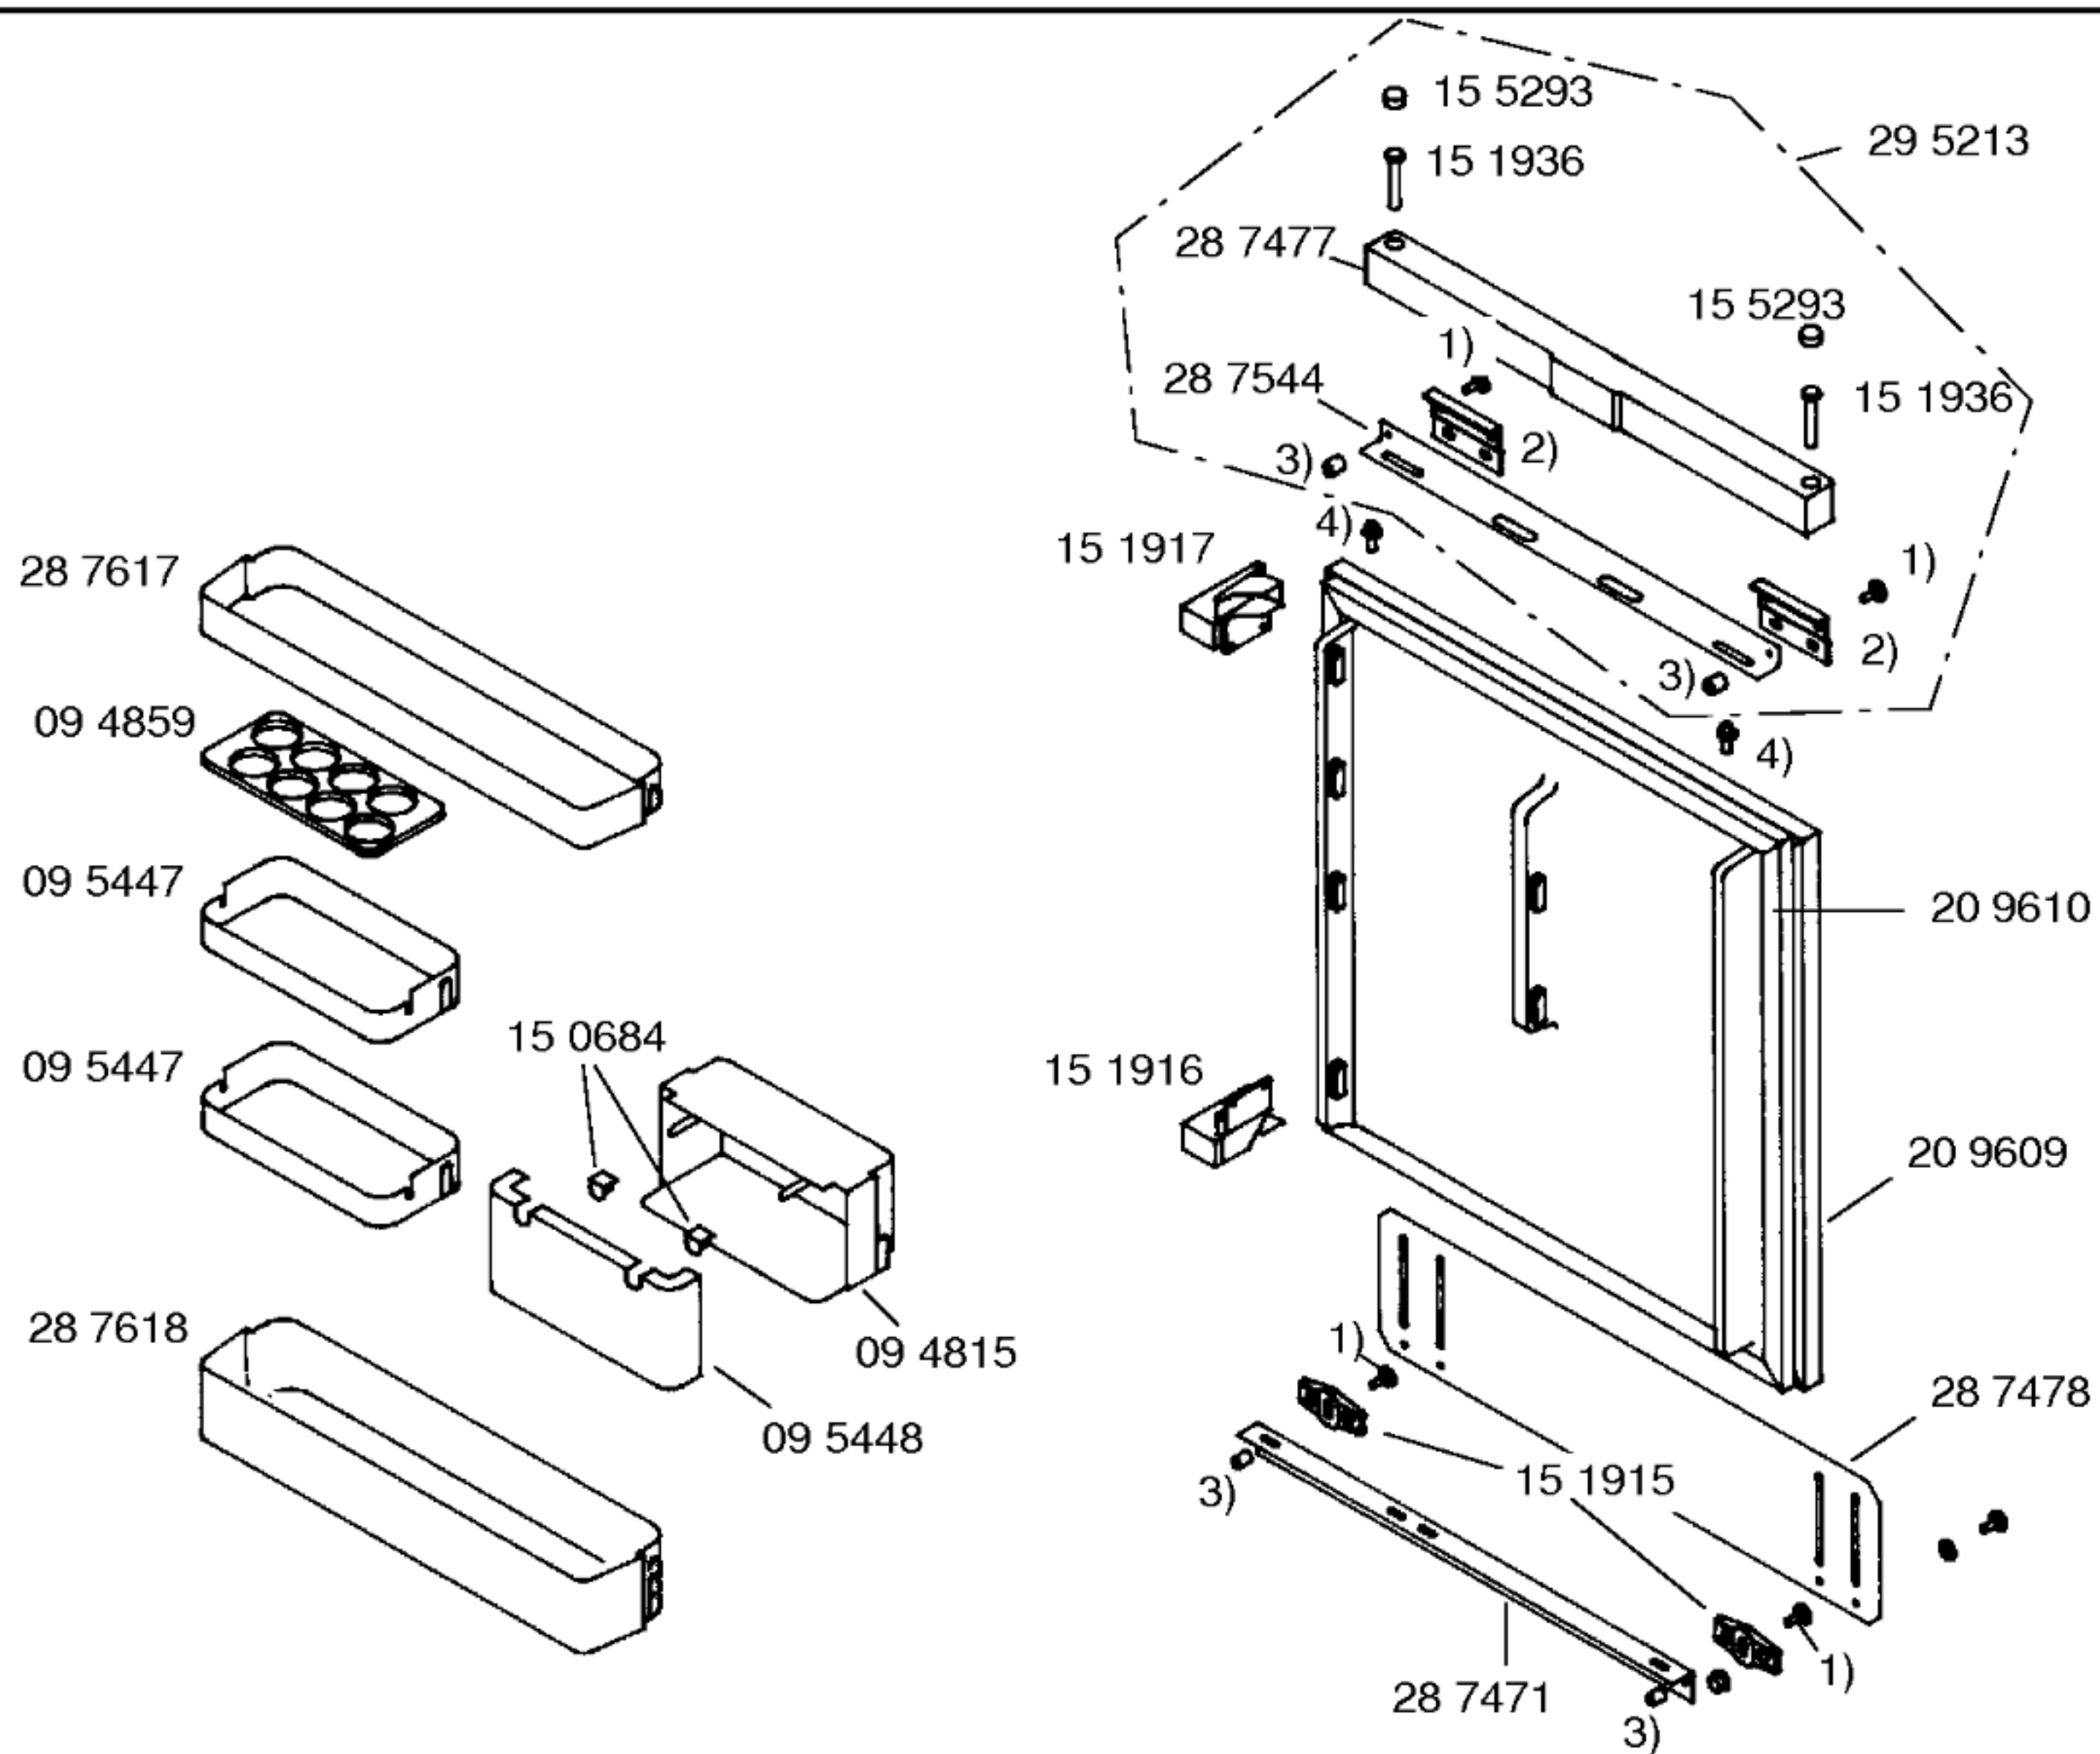

- 1) 15 1934
- 2) 15 1914
- 3) 15 1931
- 4) 15 1823

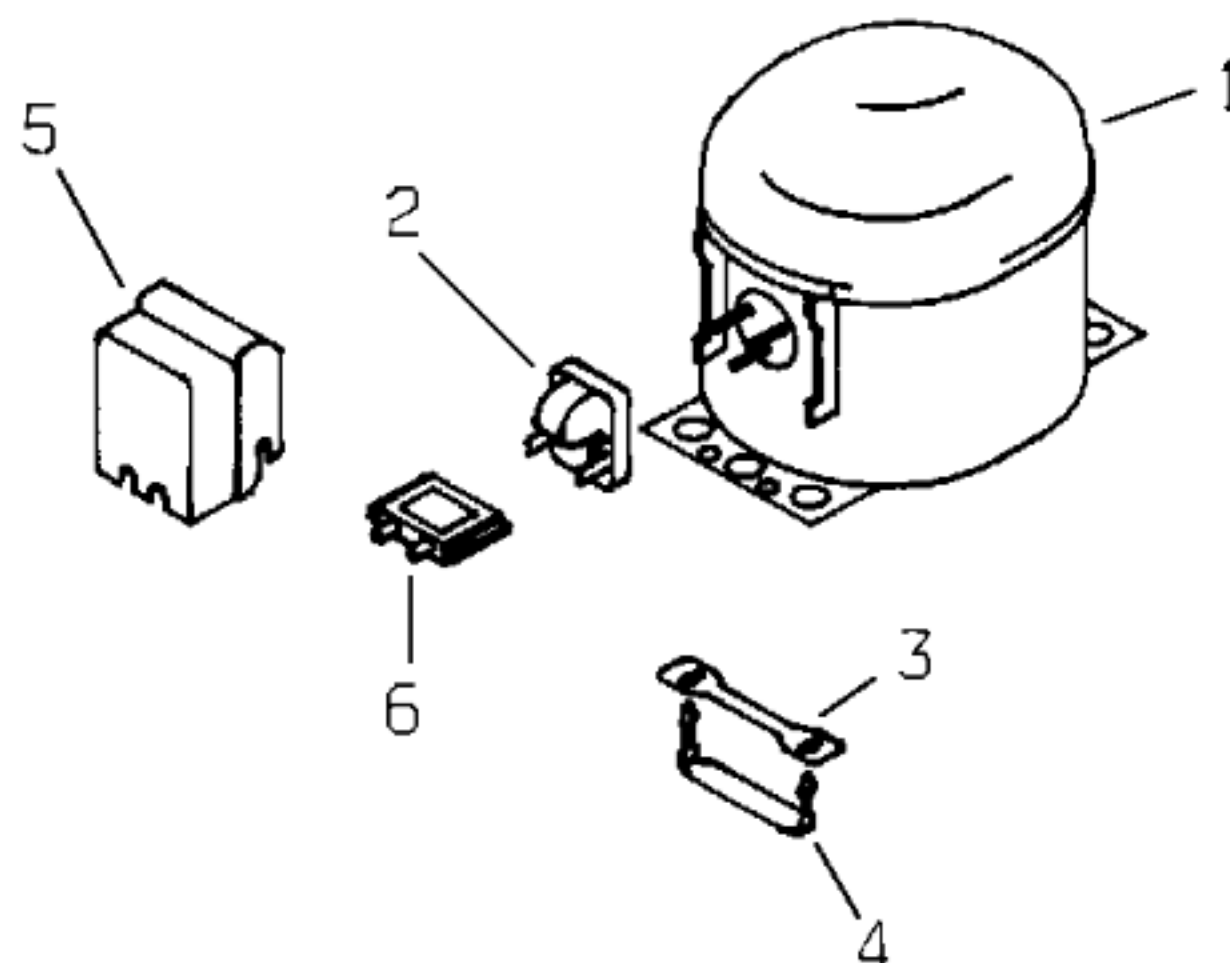

	V01	V02	
Pos.	Danfoss	Danfoss	
	TLES 4 F	TLES 7 K	
1	14 1244	14 1239	
2	15 1055	15 1055	
3	15 1919	15 1919	
4	15 1918	15 1918	
5	15 1072	15 1072	
6	15 1053	15 1053	
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	Danfoss
Typ/Type		TLES 4 F	TLES 7 K
Förderleistung/Delivery/Débit	l/h	695	1170
Anlaufstrom/Starting current/Cour de démarrage	A	7,6	7,6
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	25,7	16,5
	Hi/aux Ω	15,7	16,9
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K59	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+5	+5
Valeurs de commutation	„aus“	-28	-17
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	g	85 / R134a	28 / R600a
Anschlußwert/Conn.load/Puiss. connectée	W	70	90
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur		MES F61-10	
Widerstand/Resistance/Résistance	Ω	680	
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		