
 



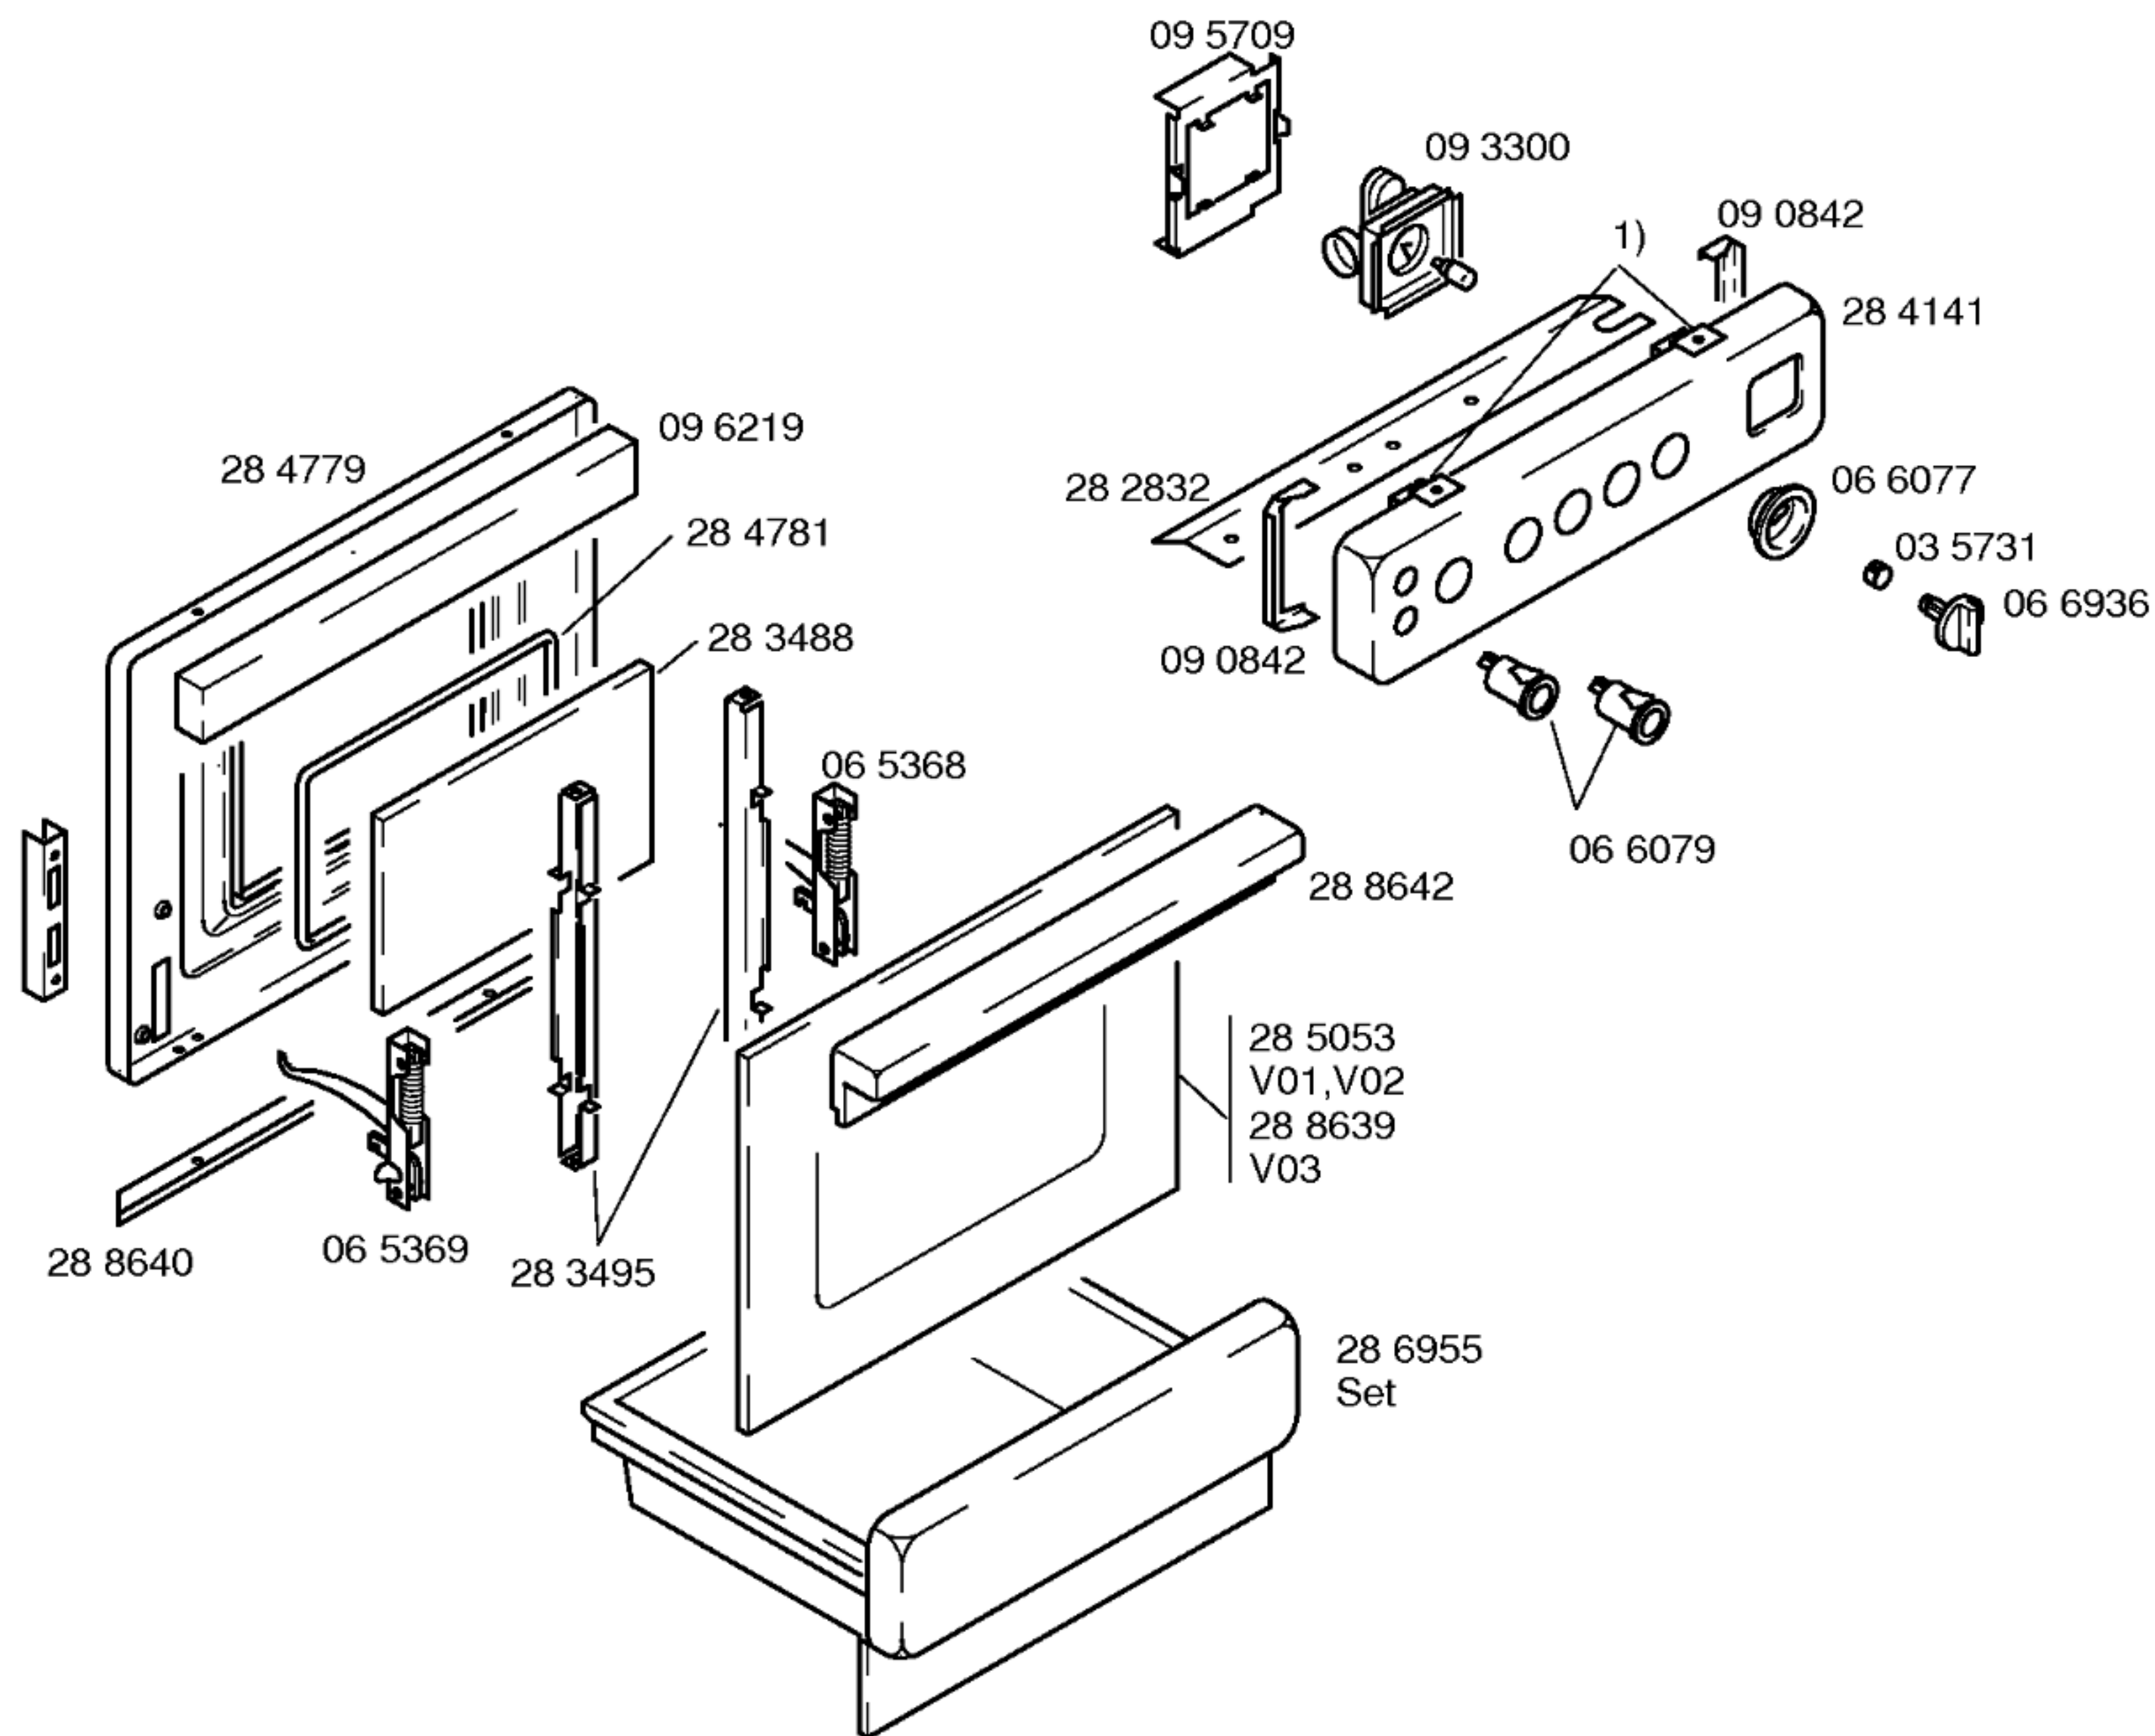


Libro de instrucciones
51 9303
(es,pt)


1) 08 9365



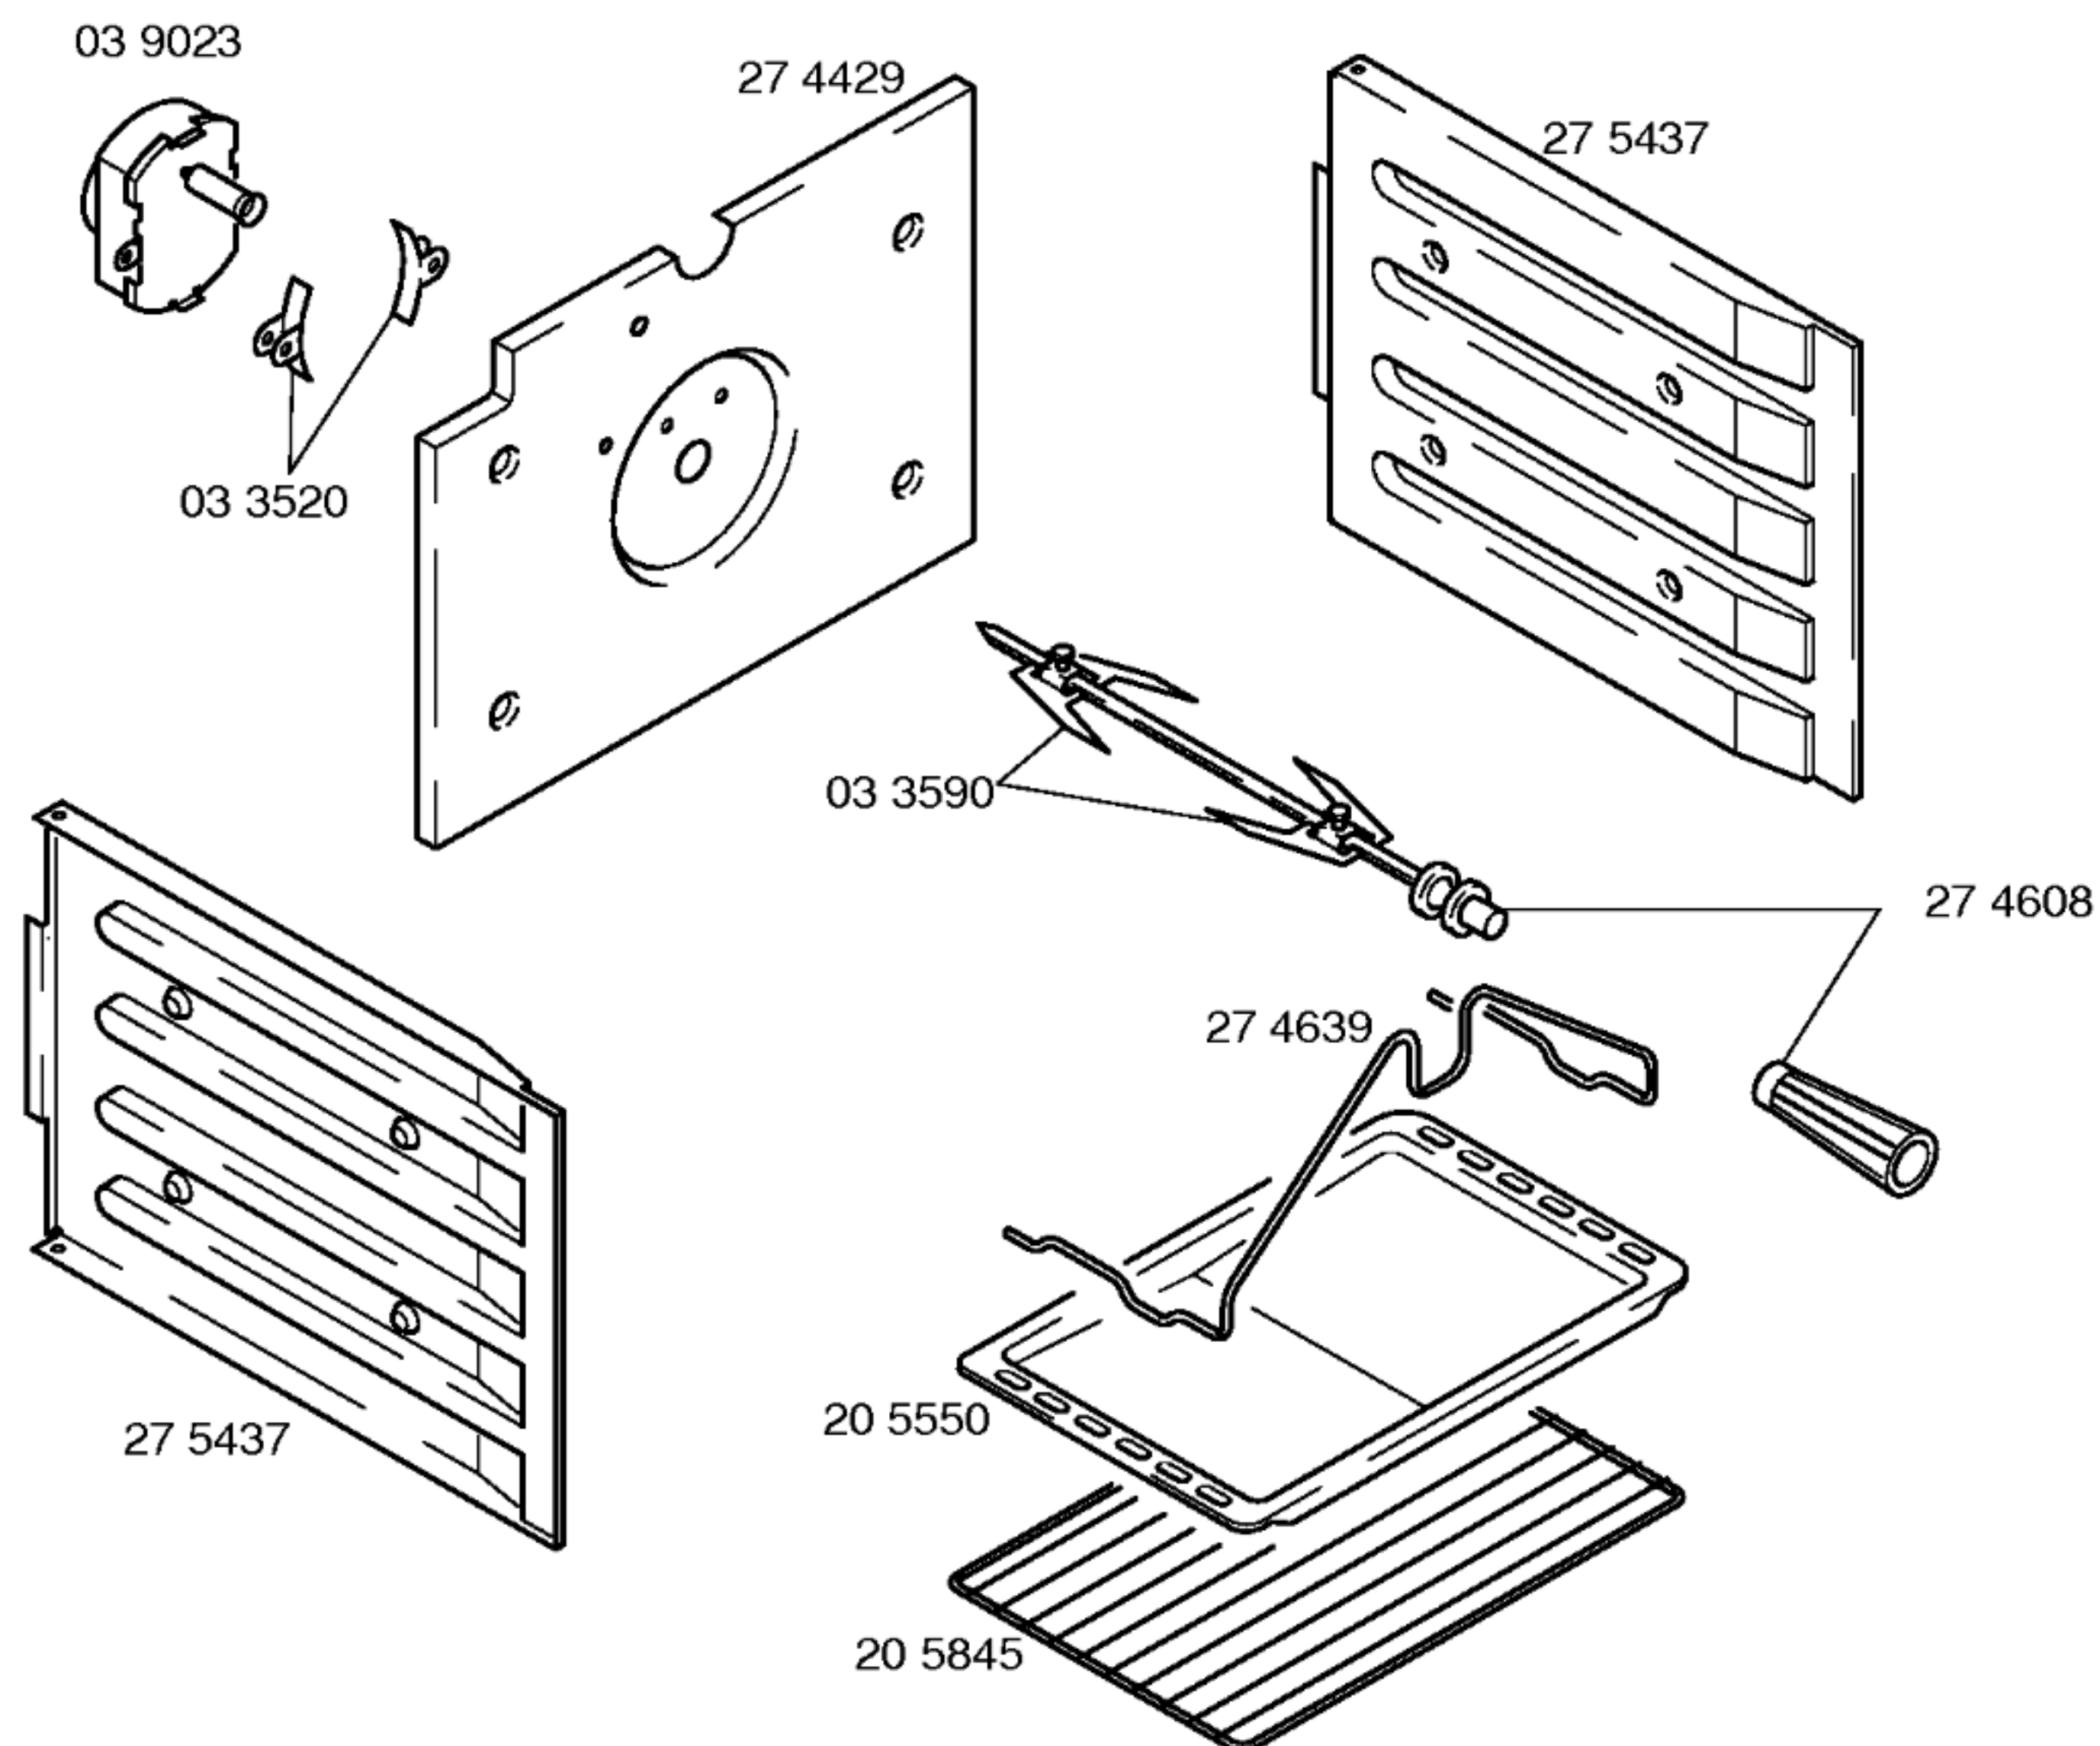

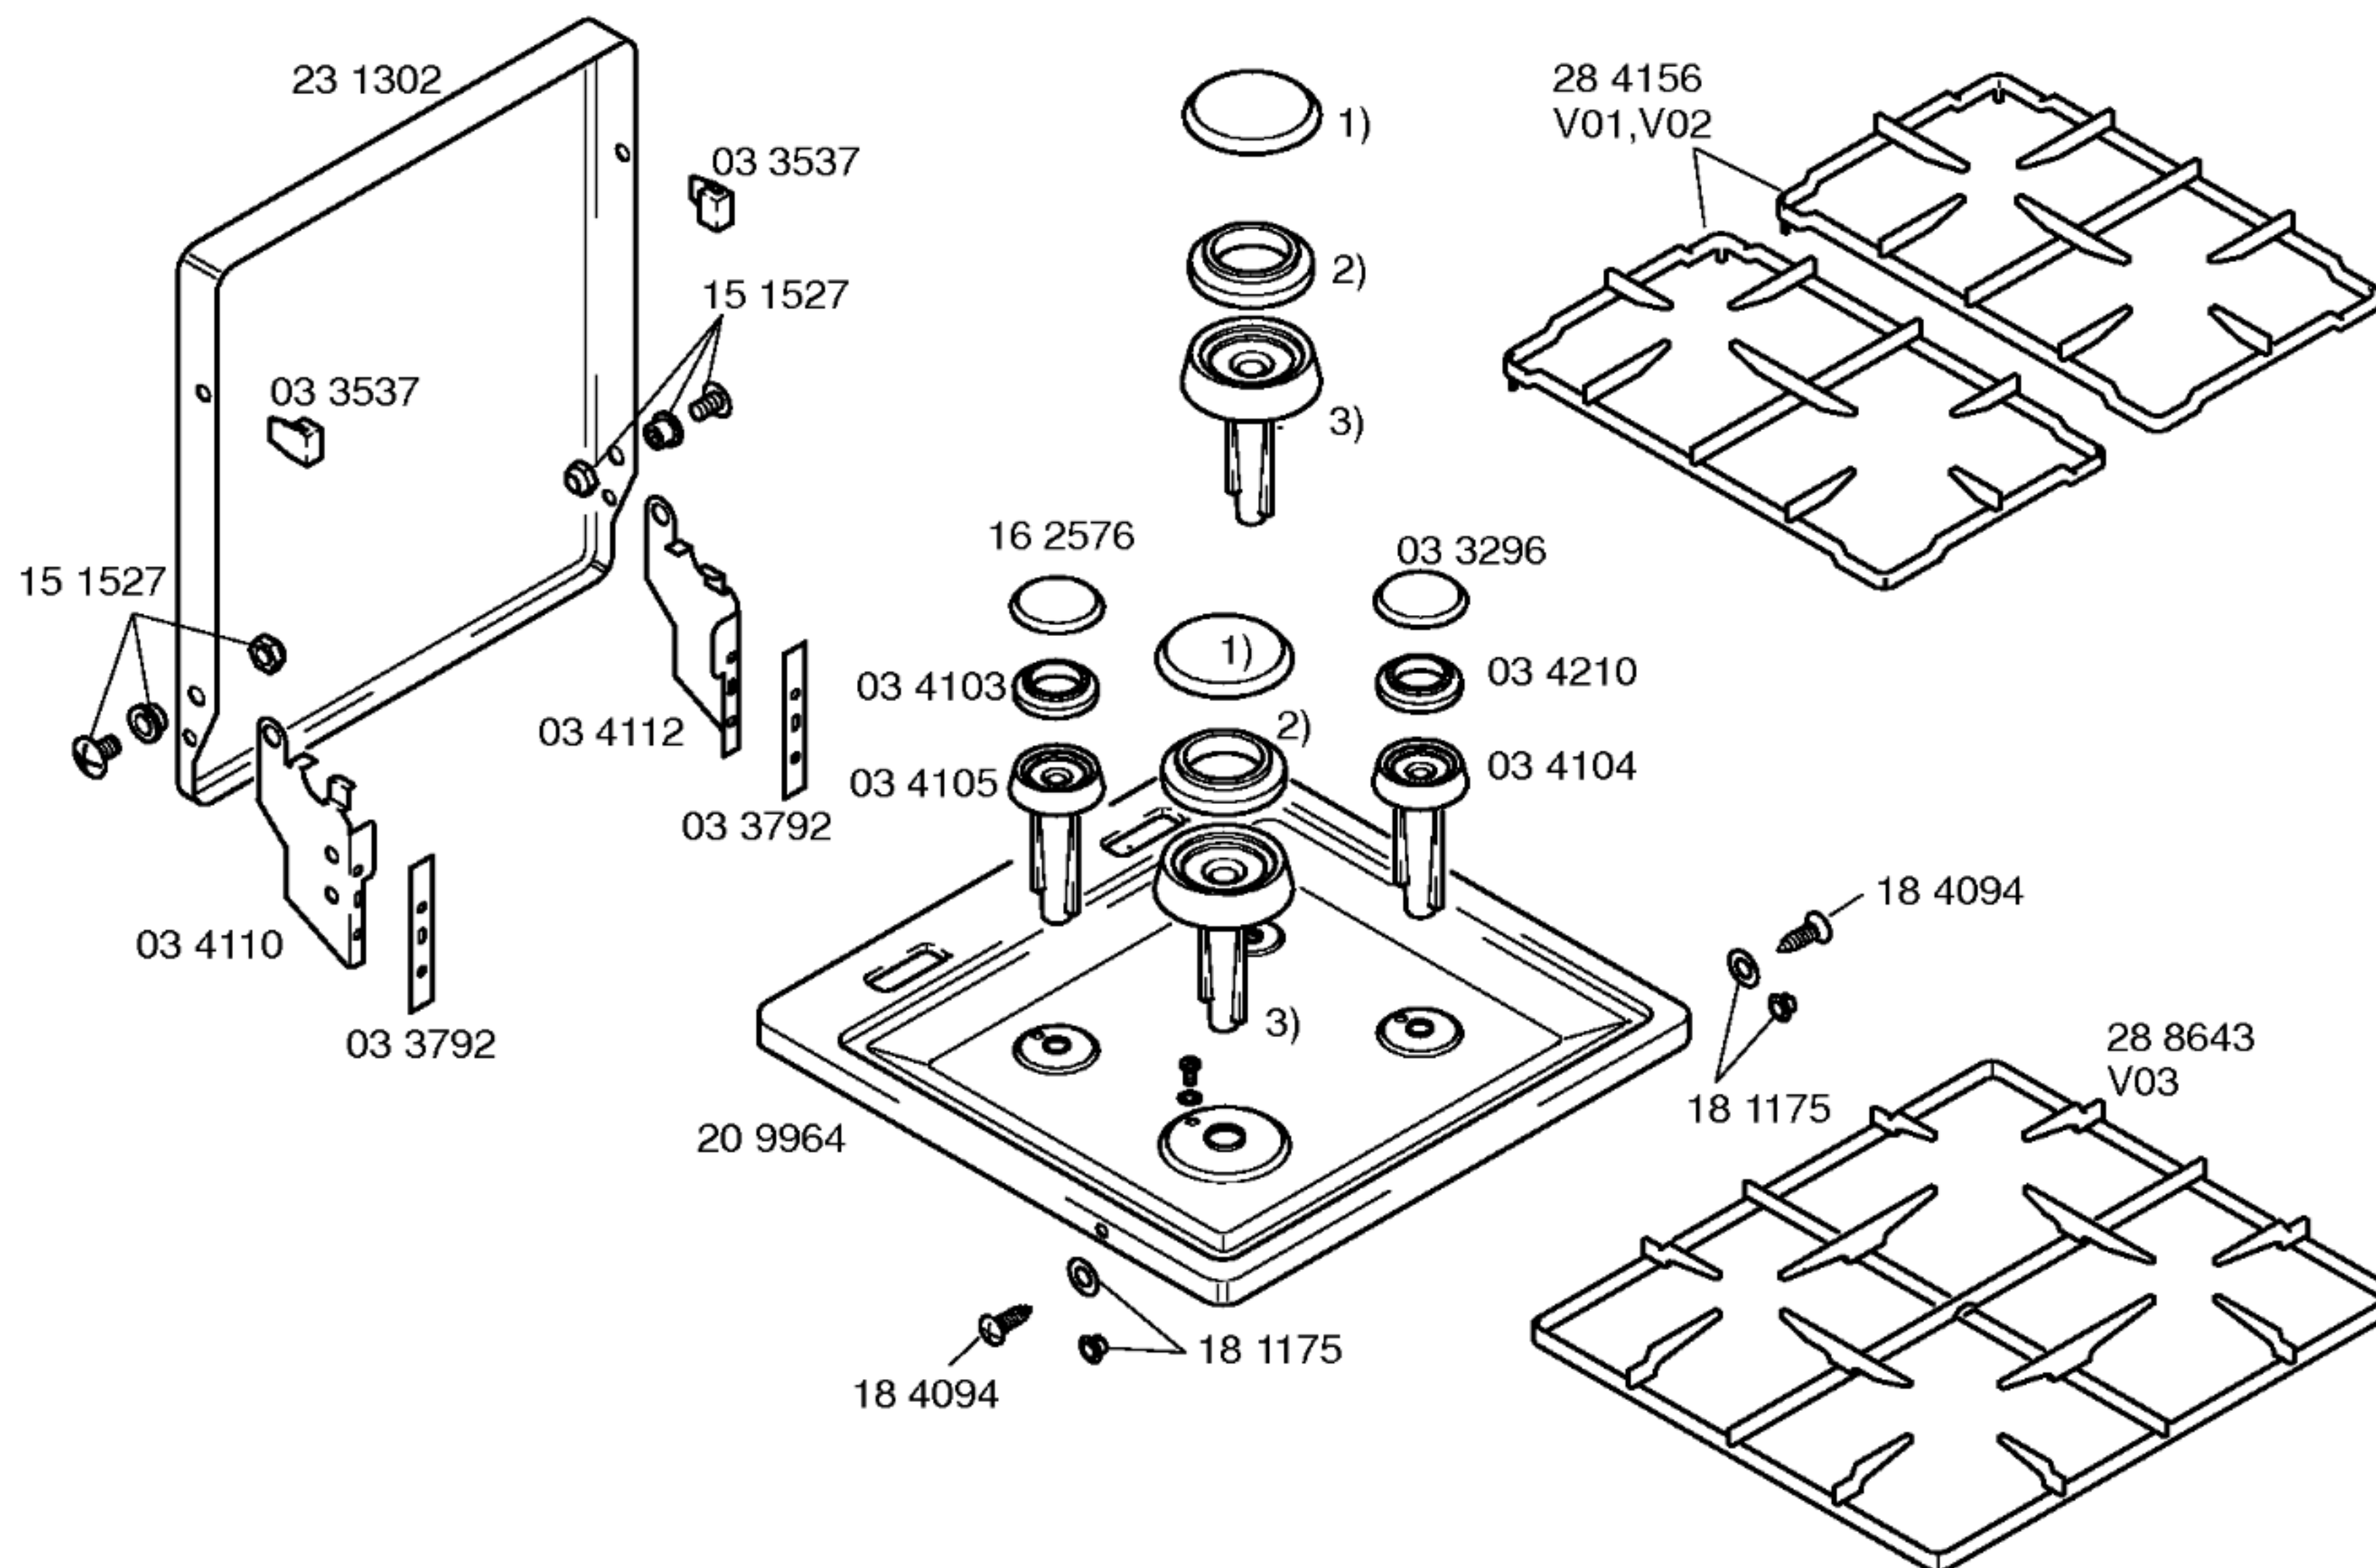

- 1) 16 2577
- 2) 03 4102
- 3) 03 3957

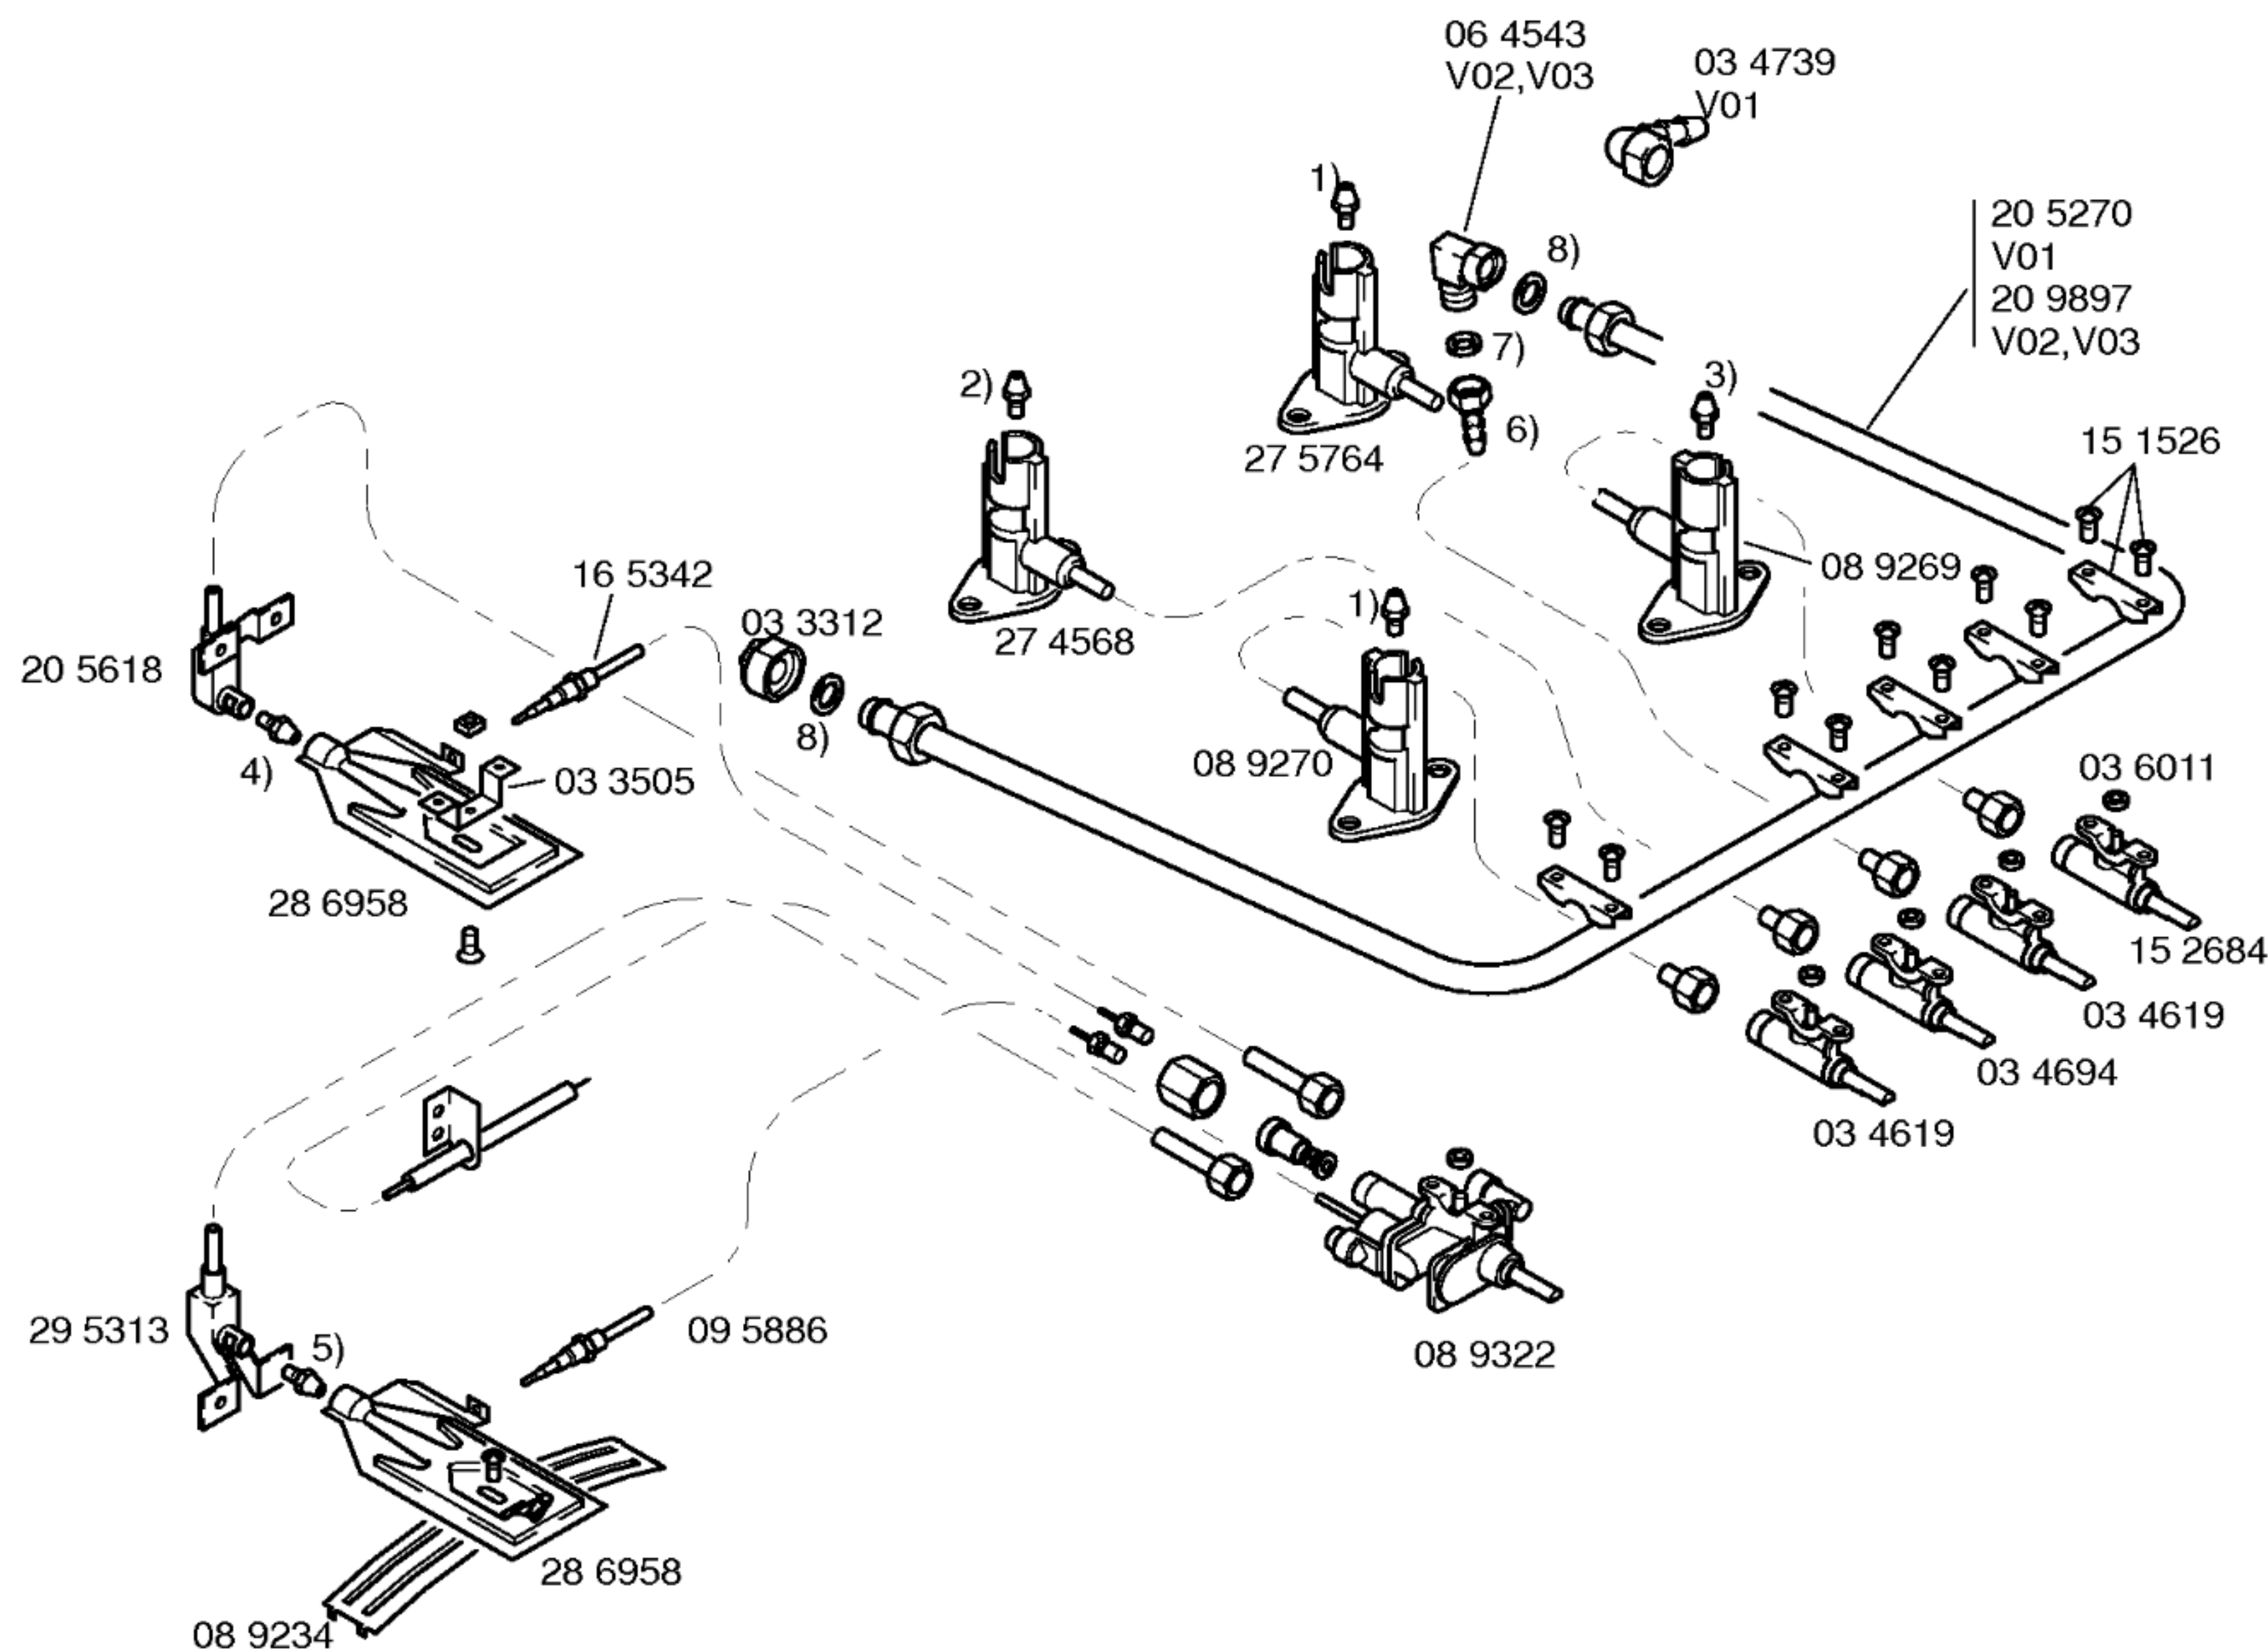

- 1) 03 4224
- 2) 03 4232
- 3) 03 4231
- 4) 03 4220
- 5) 03 4222
- 6) 15 2683
V02,V03
- 7) 03 4308
V02,V03
- 8) 03 3793

Cjtos transformación:
Gas Butano
15 3164
Gas Natural
15 3165
Gas Ciudad
15 3166