


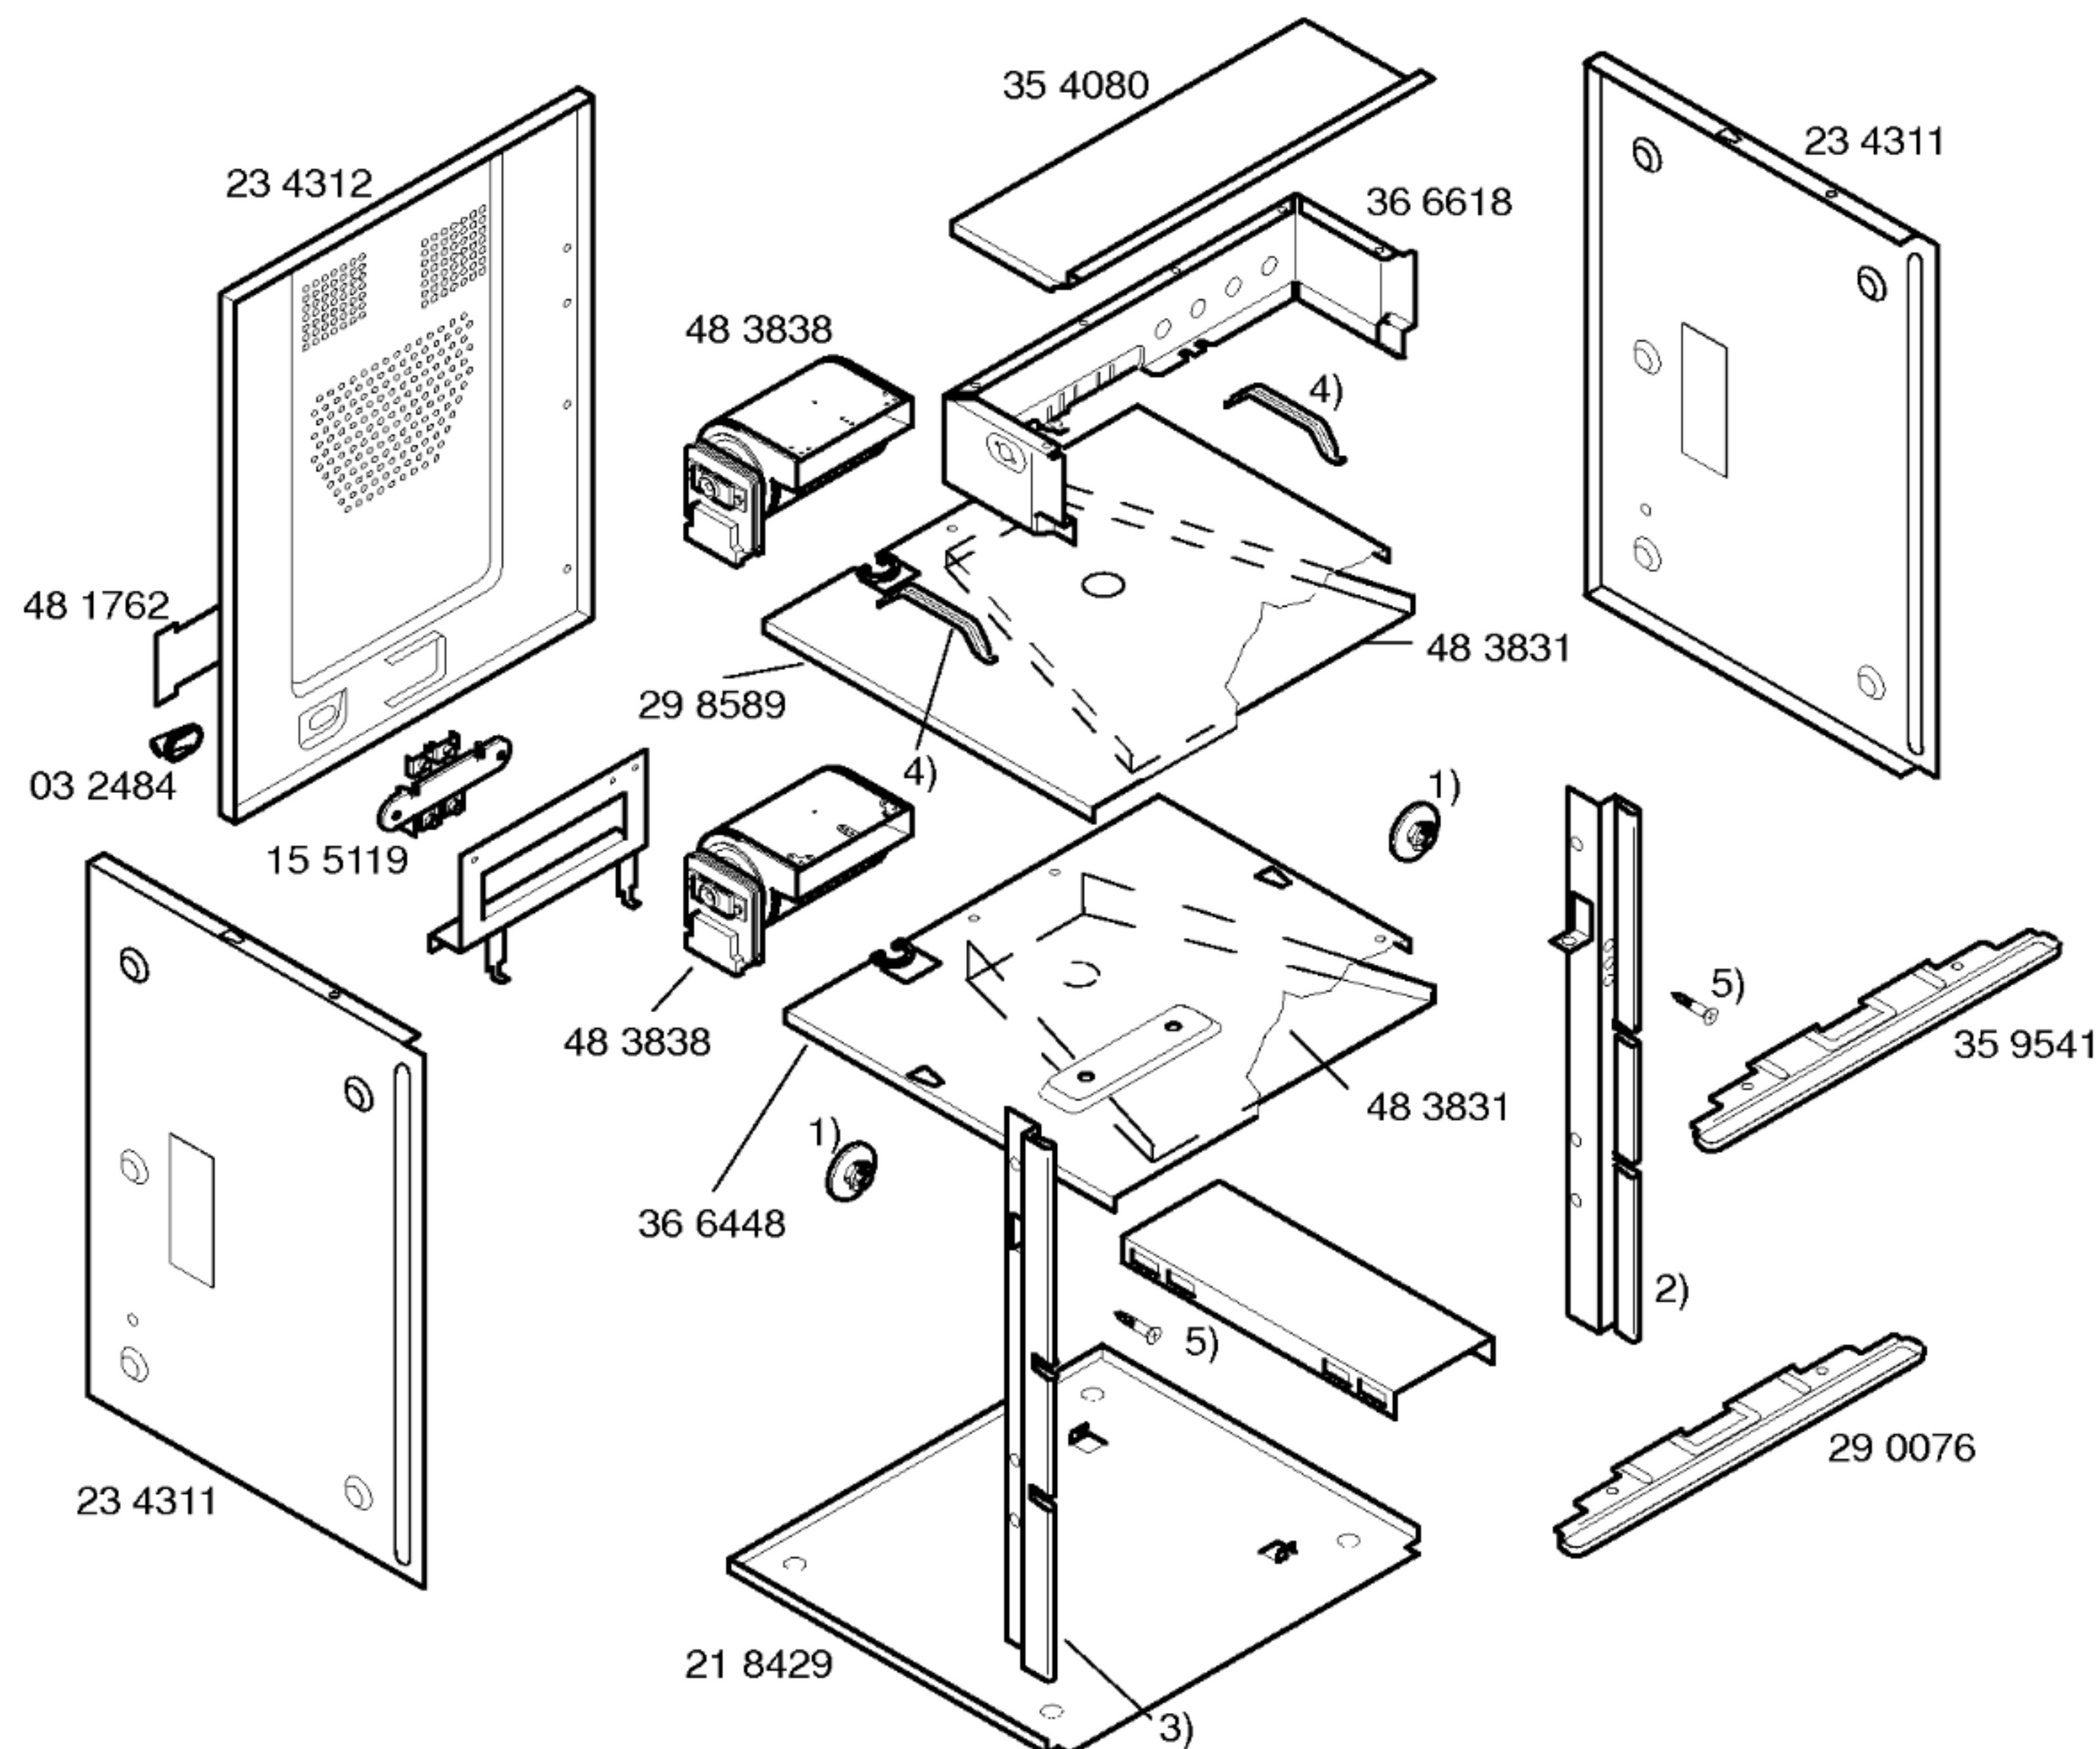


Gebrauchsanweisung
58 1135
(en)

Kochbuch
52 6877
(en)


1) 17 0995
2) 35 9649
3) 35 9650
4) 15 4742
5) 02 3742

Zubehör:
Dampfgarer
N8640X0


Backblech, Alu
Z1330X0
Backblech, Email
Z1340X0
Brotbackstein
Z1910X0
Back,-u. Bratrost gekr.
Z1470X0
Auflaufform
Z1270X0
Bratenblech Mega
Z1510X1

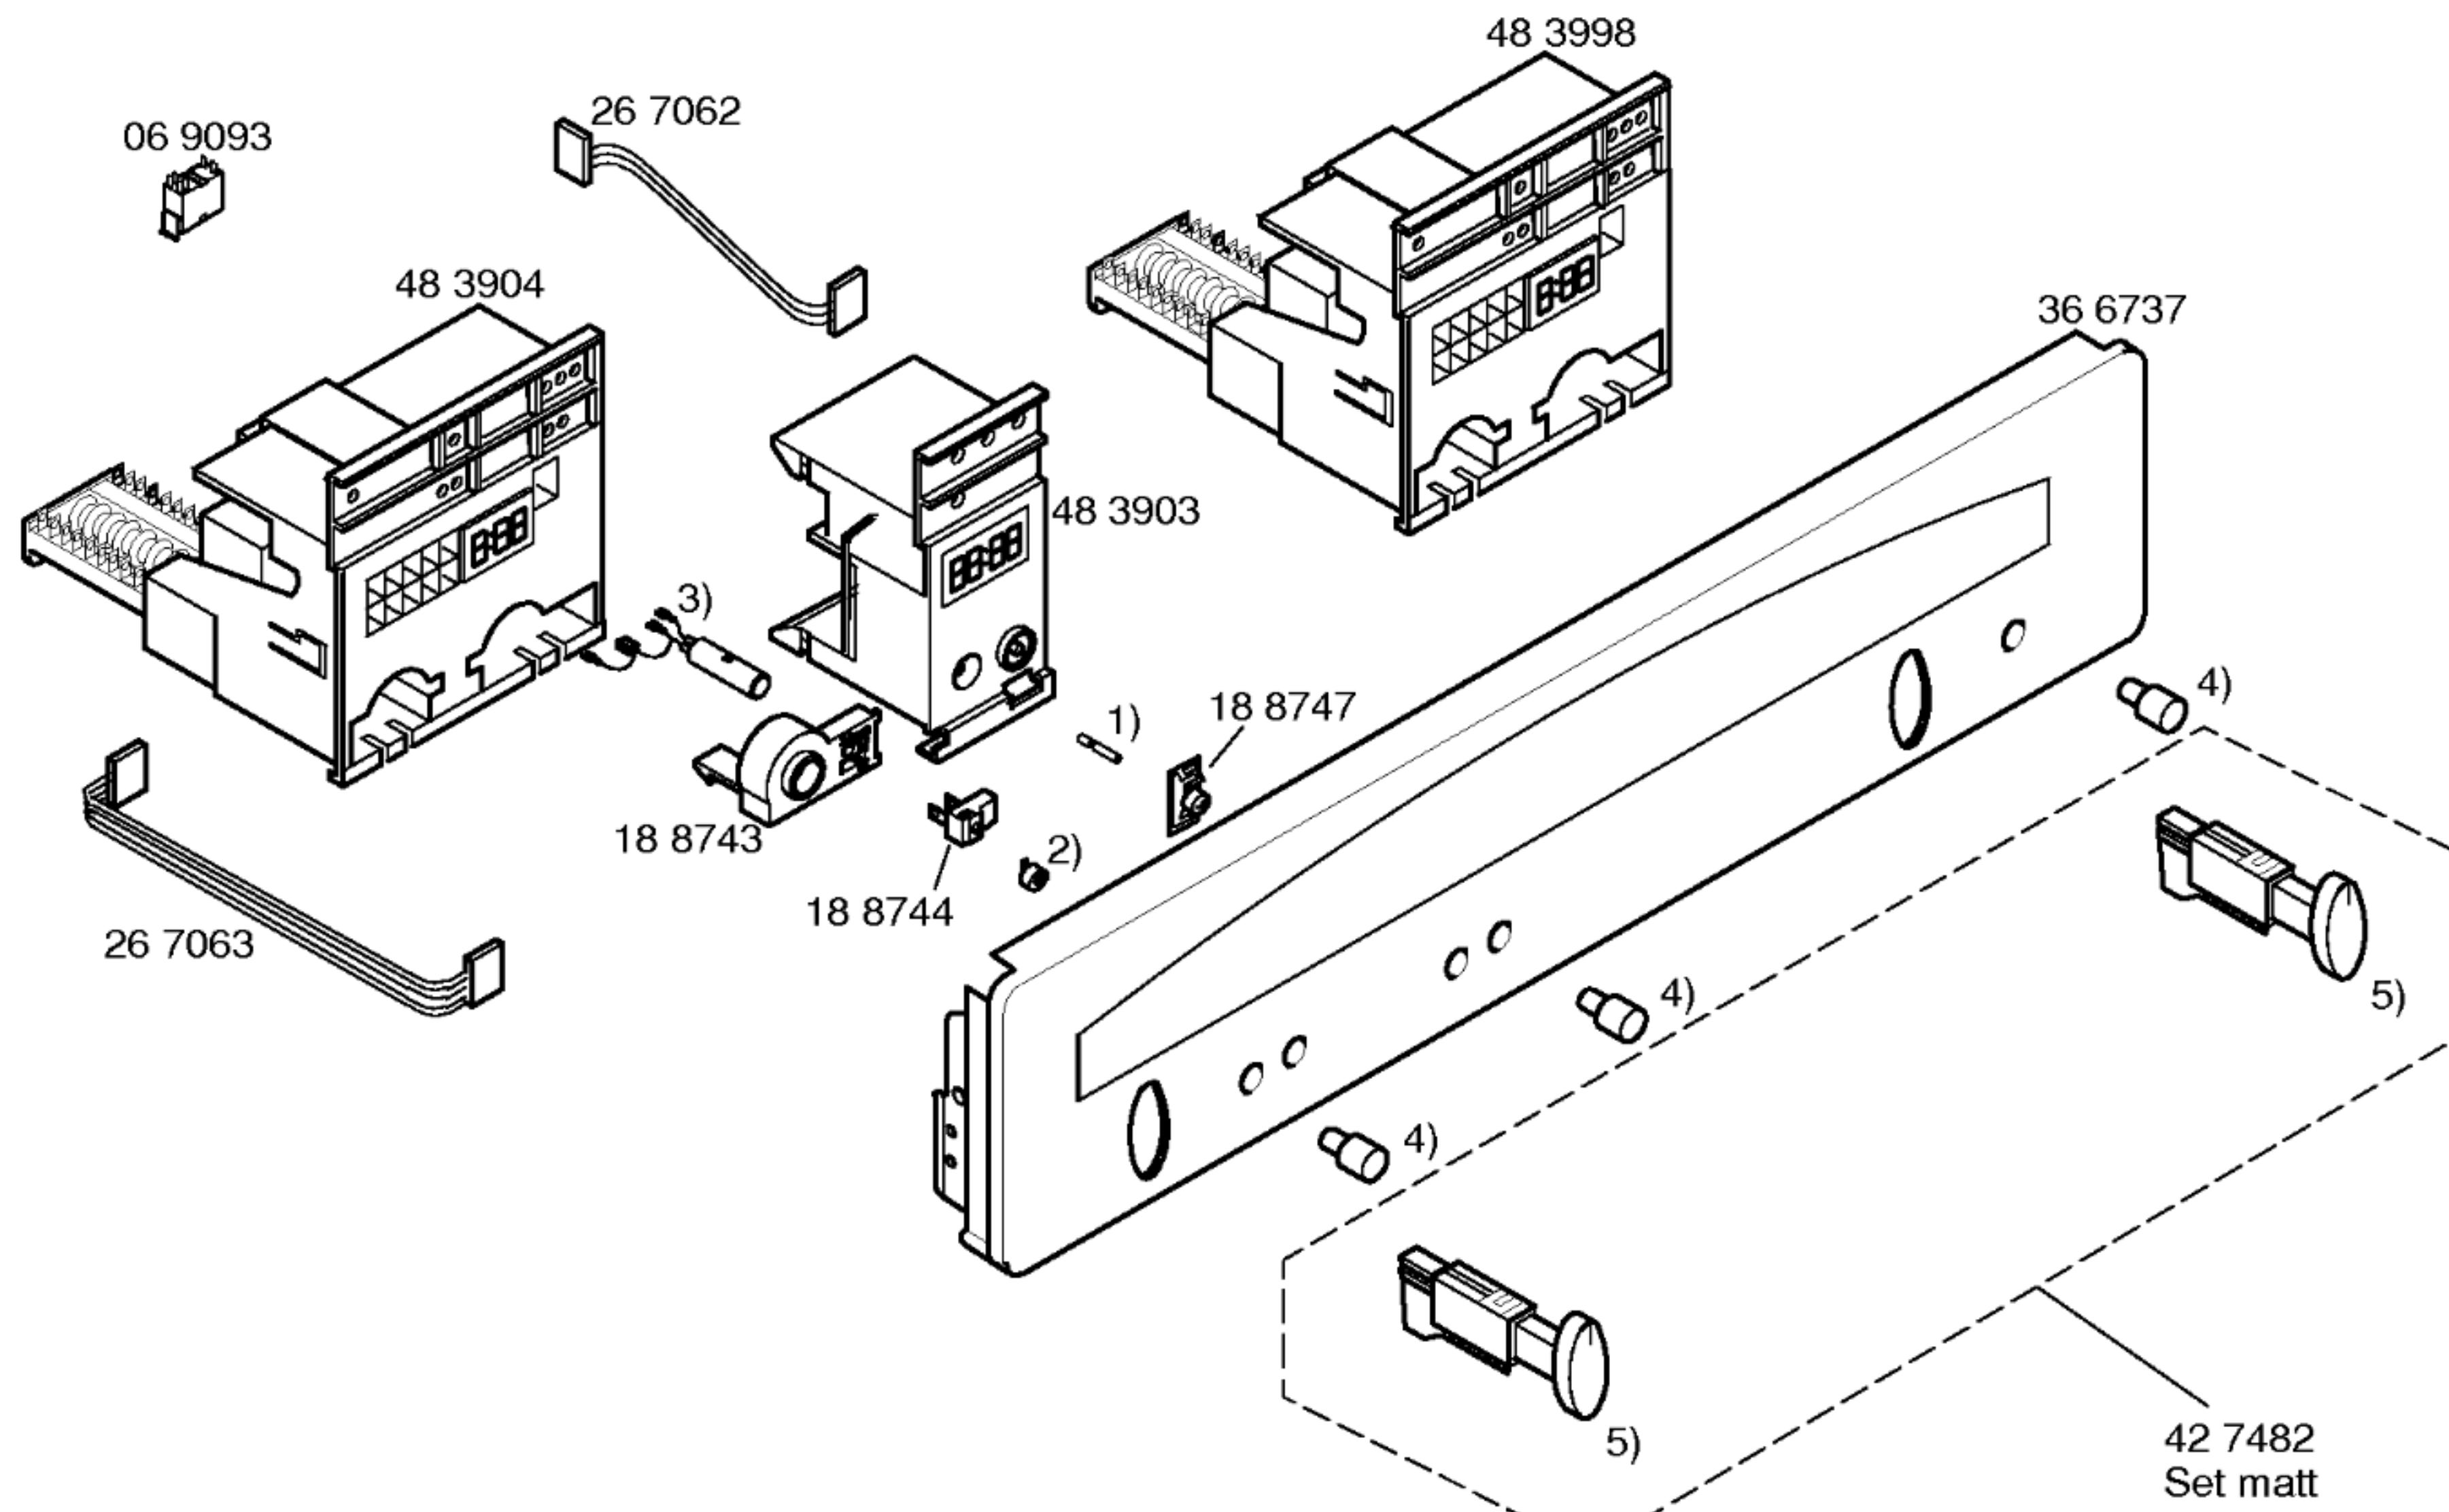


- 1) 16 8588
 - 2) 18 8745
 - 3) 18 8746
 - 4) 17 3340
 - 5) 17 3204
- matt
(Original glaenzend
nicht mehr lieferbar)

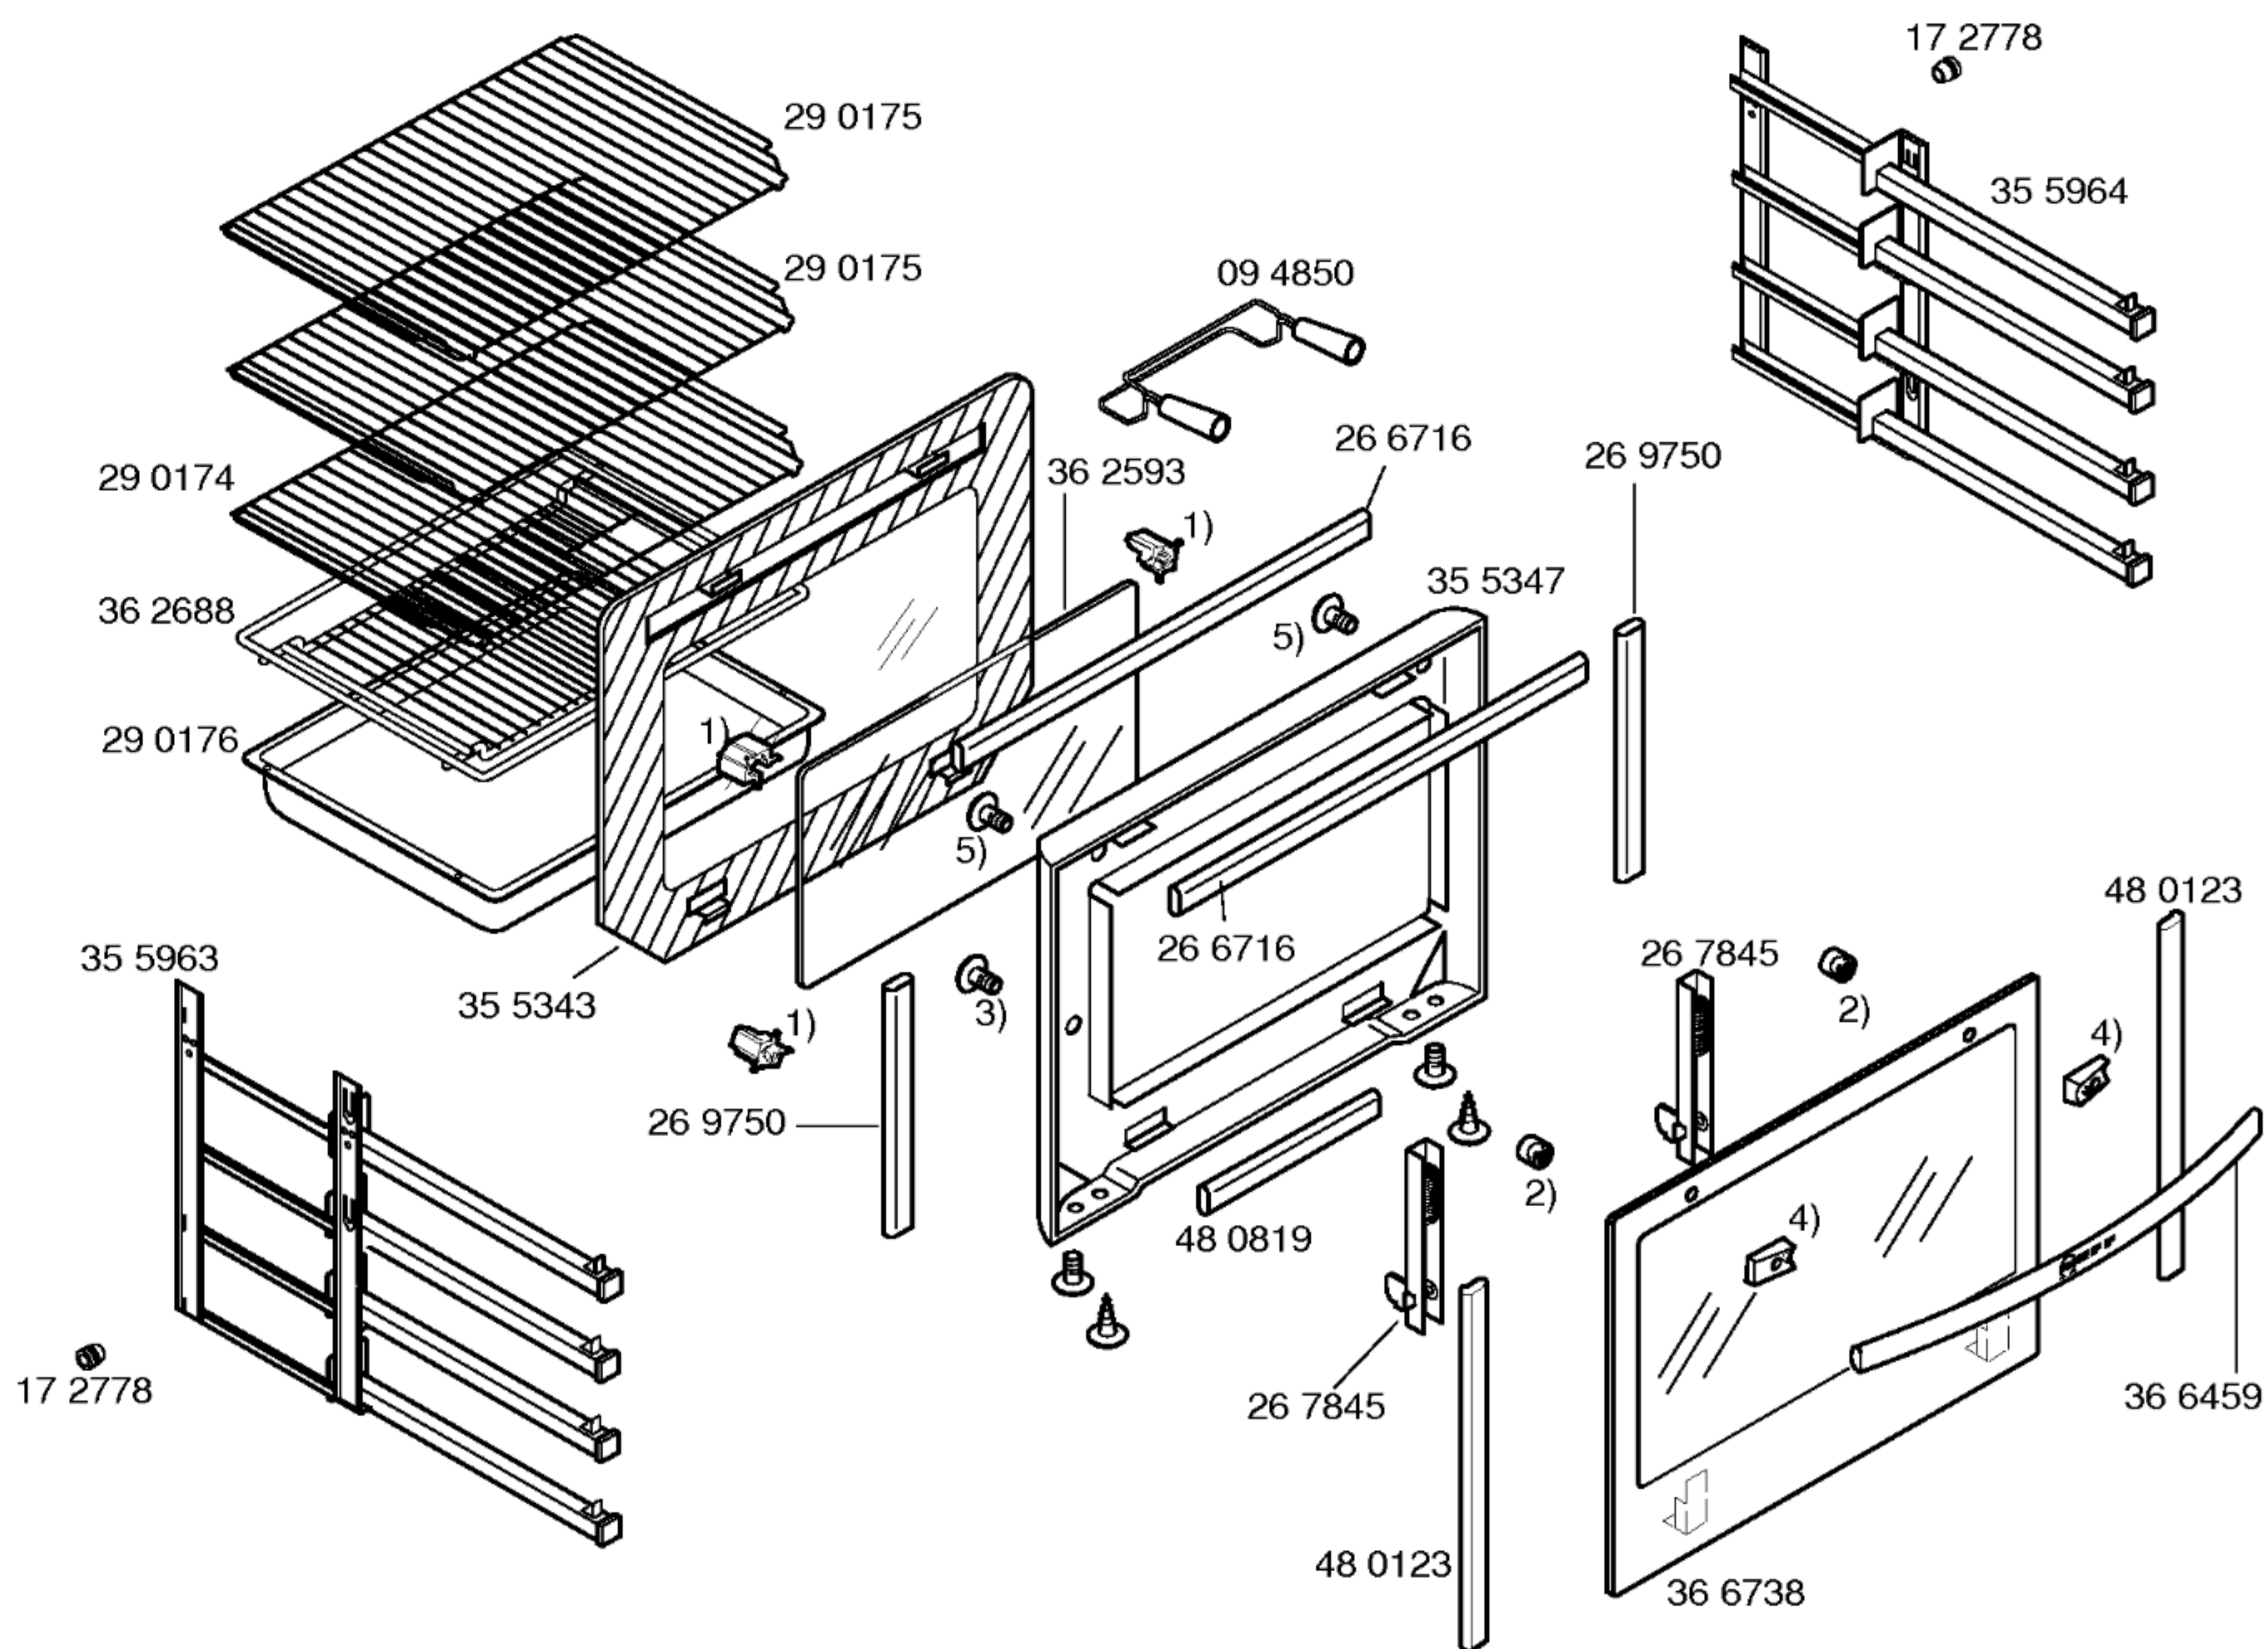


- 1) 18 3938
- 2) 17 2643
- 3) 17 2646
- 4) 18 8845
- 5) 61 1616

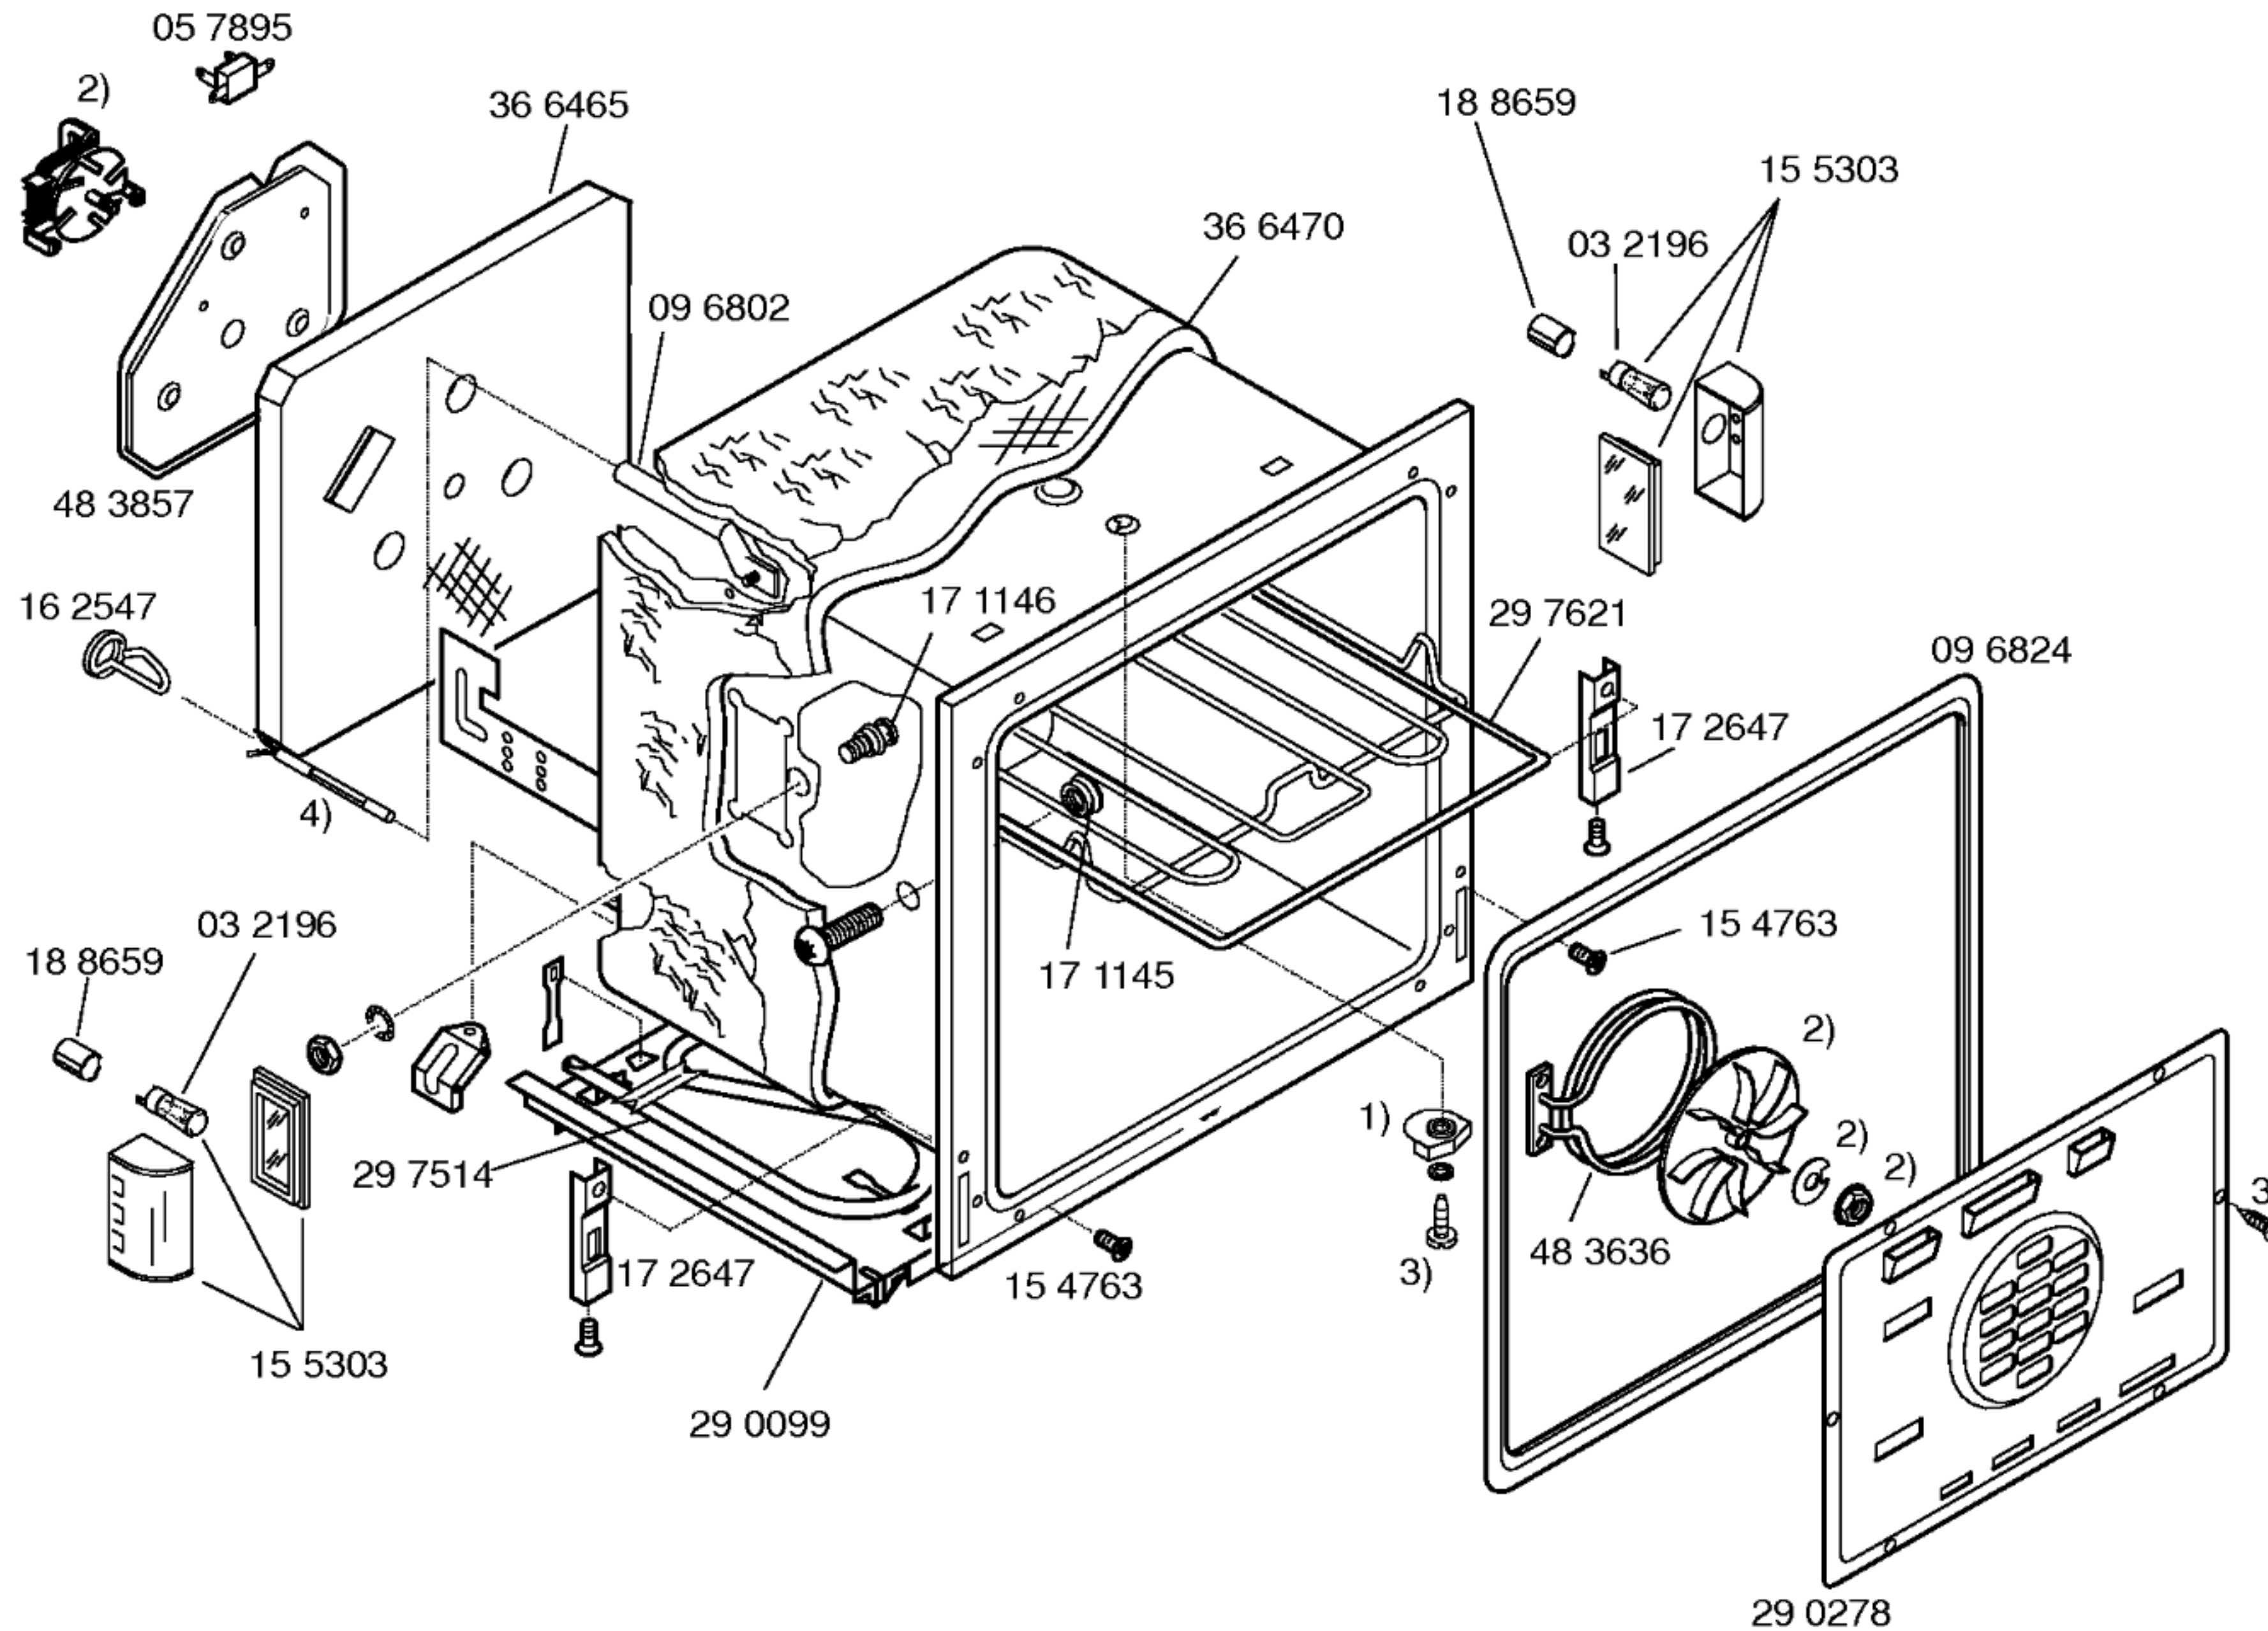

- 1) 15 5033
- 2) 48 3856
- 3) 16 0916
- 4) 18 7586

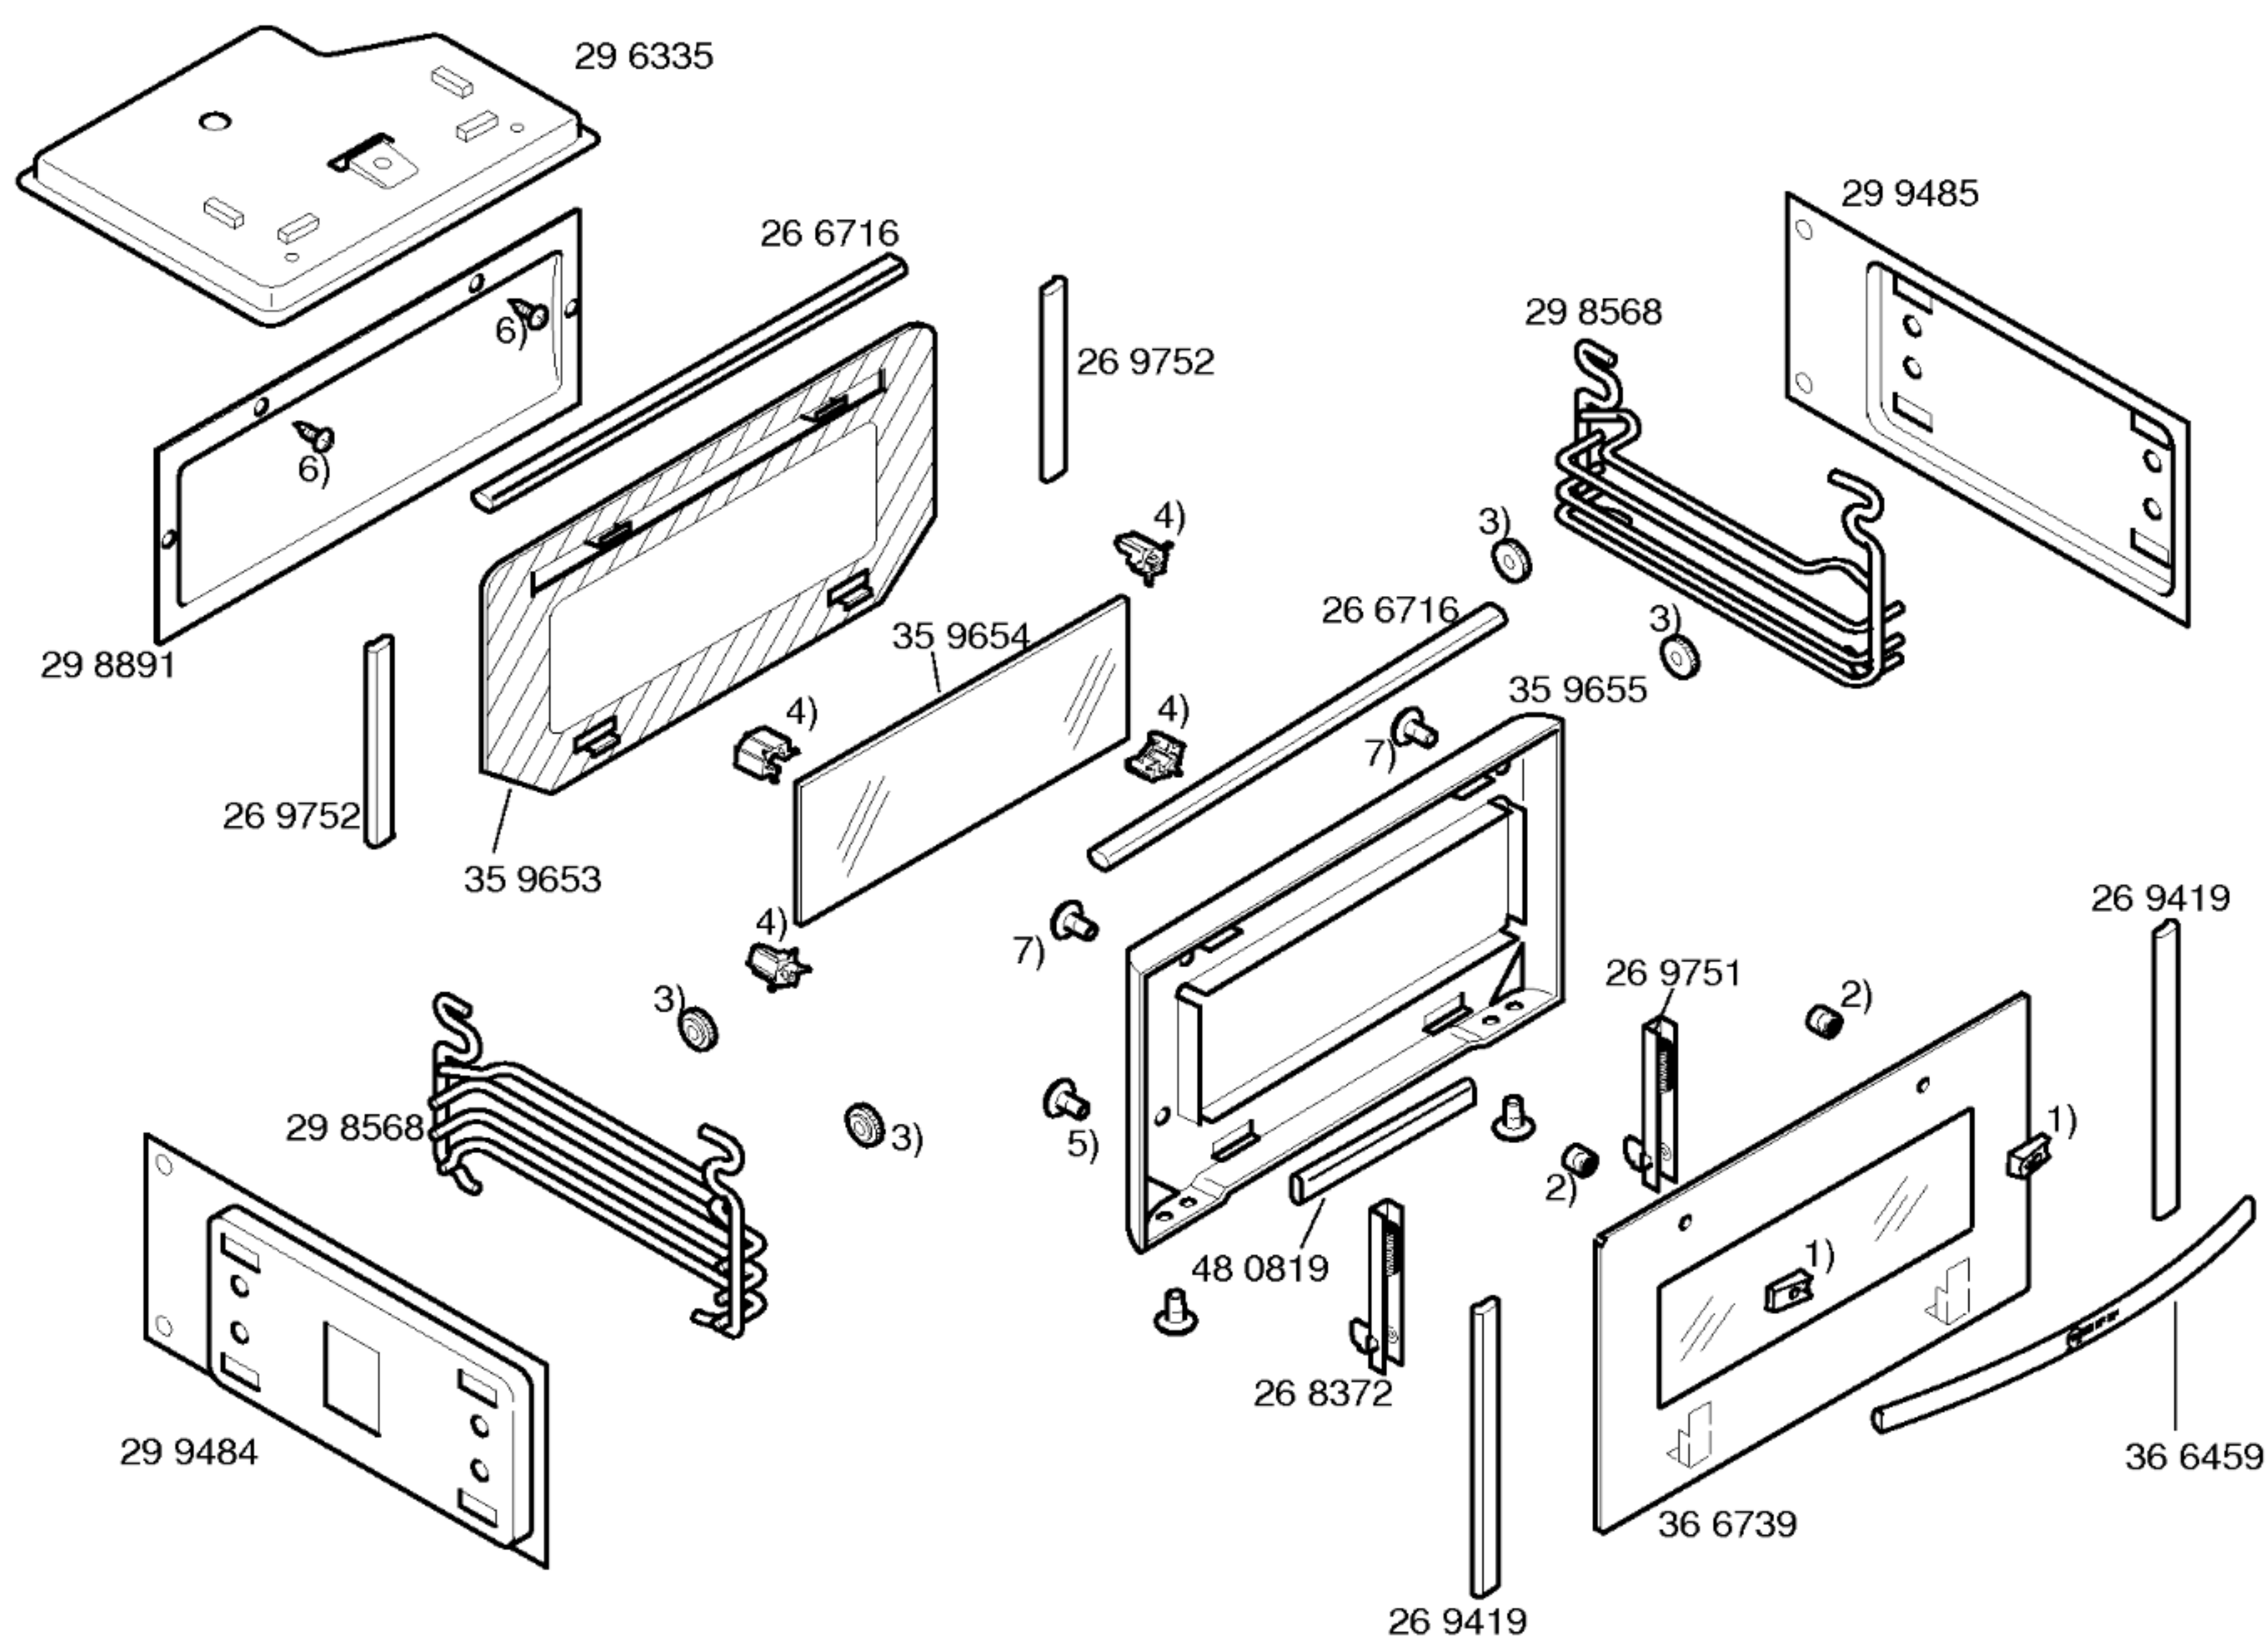

- 1) 18 8845
- 2) 17 2643
- 3) 02 6593
- 4) 17 2644
- 5) 17 2646
- 6) 16 0916
- 7) 61 1616

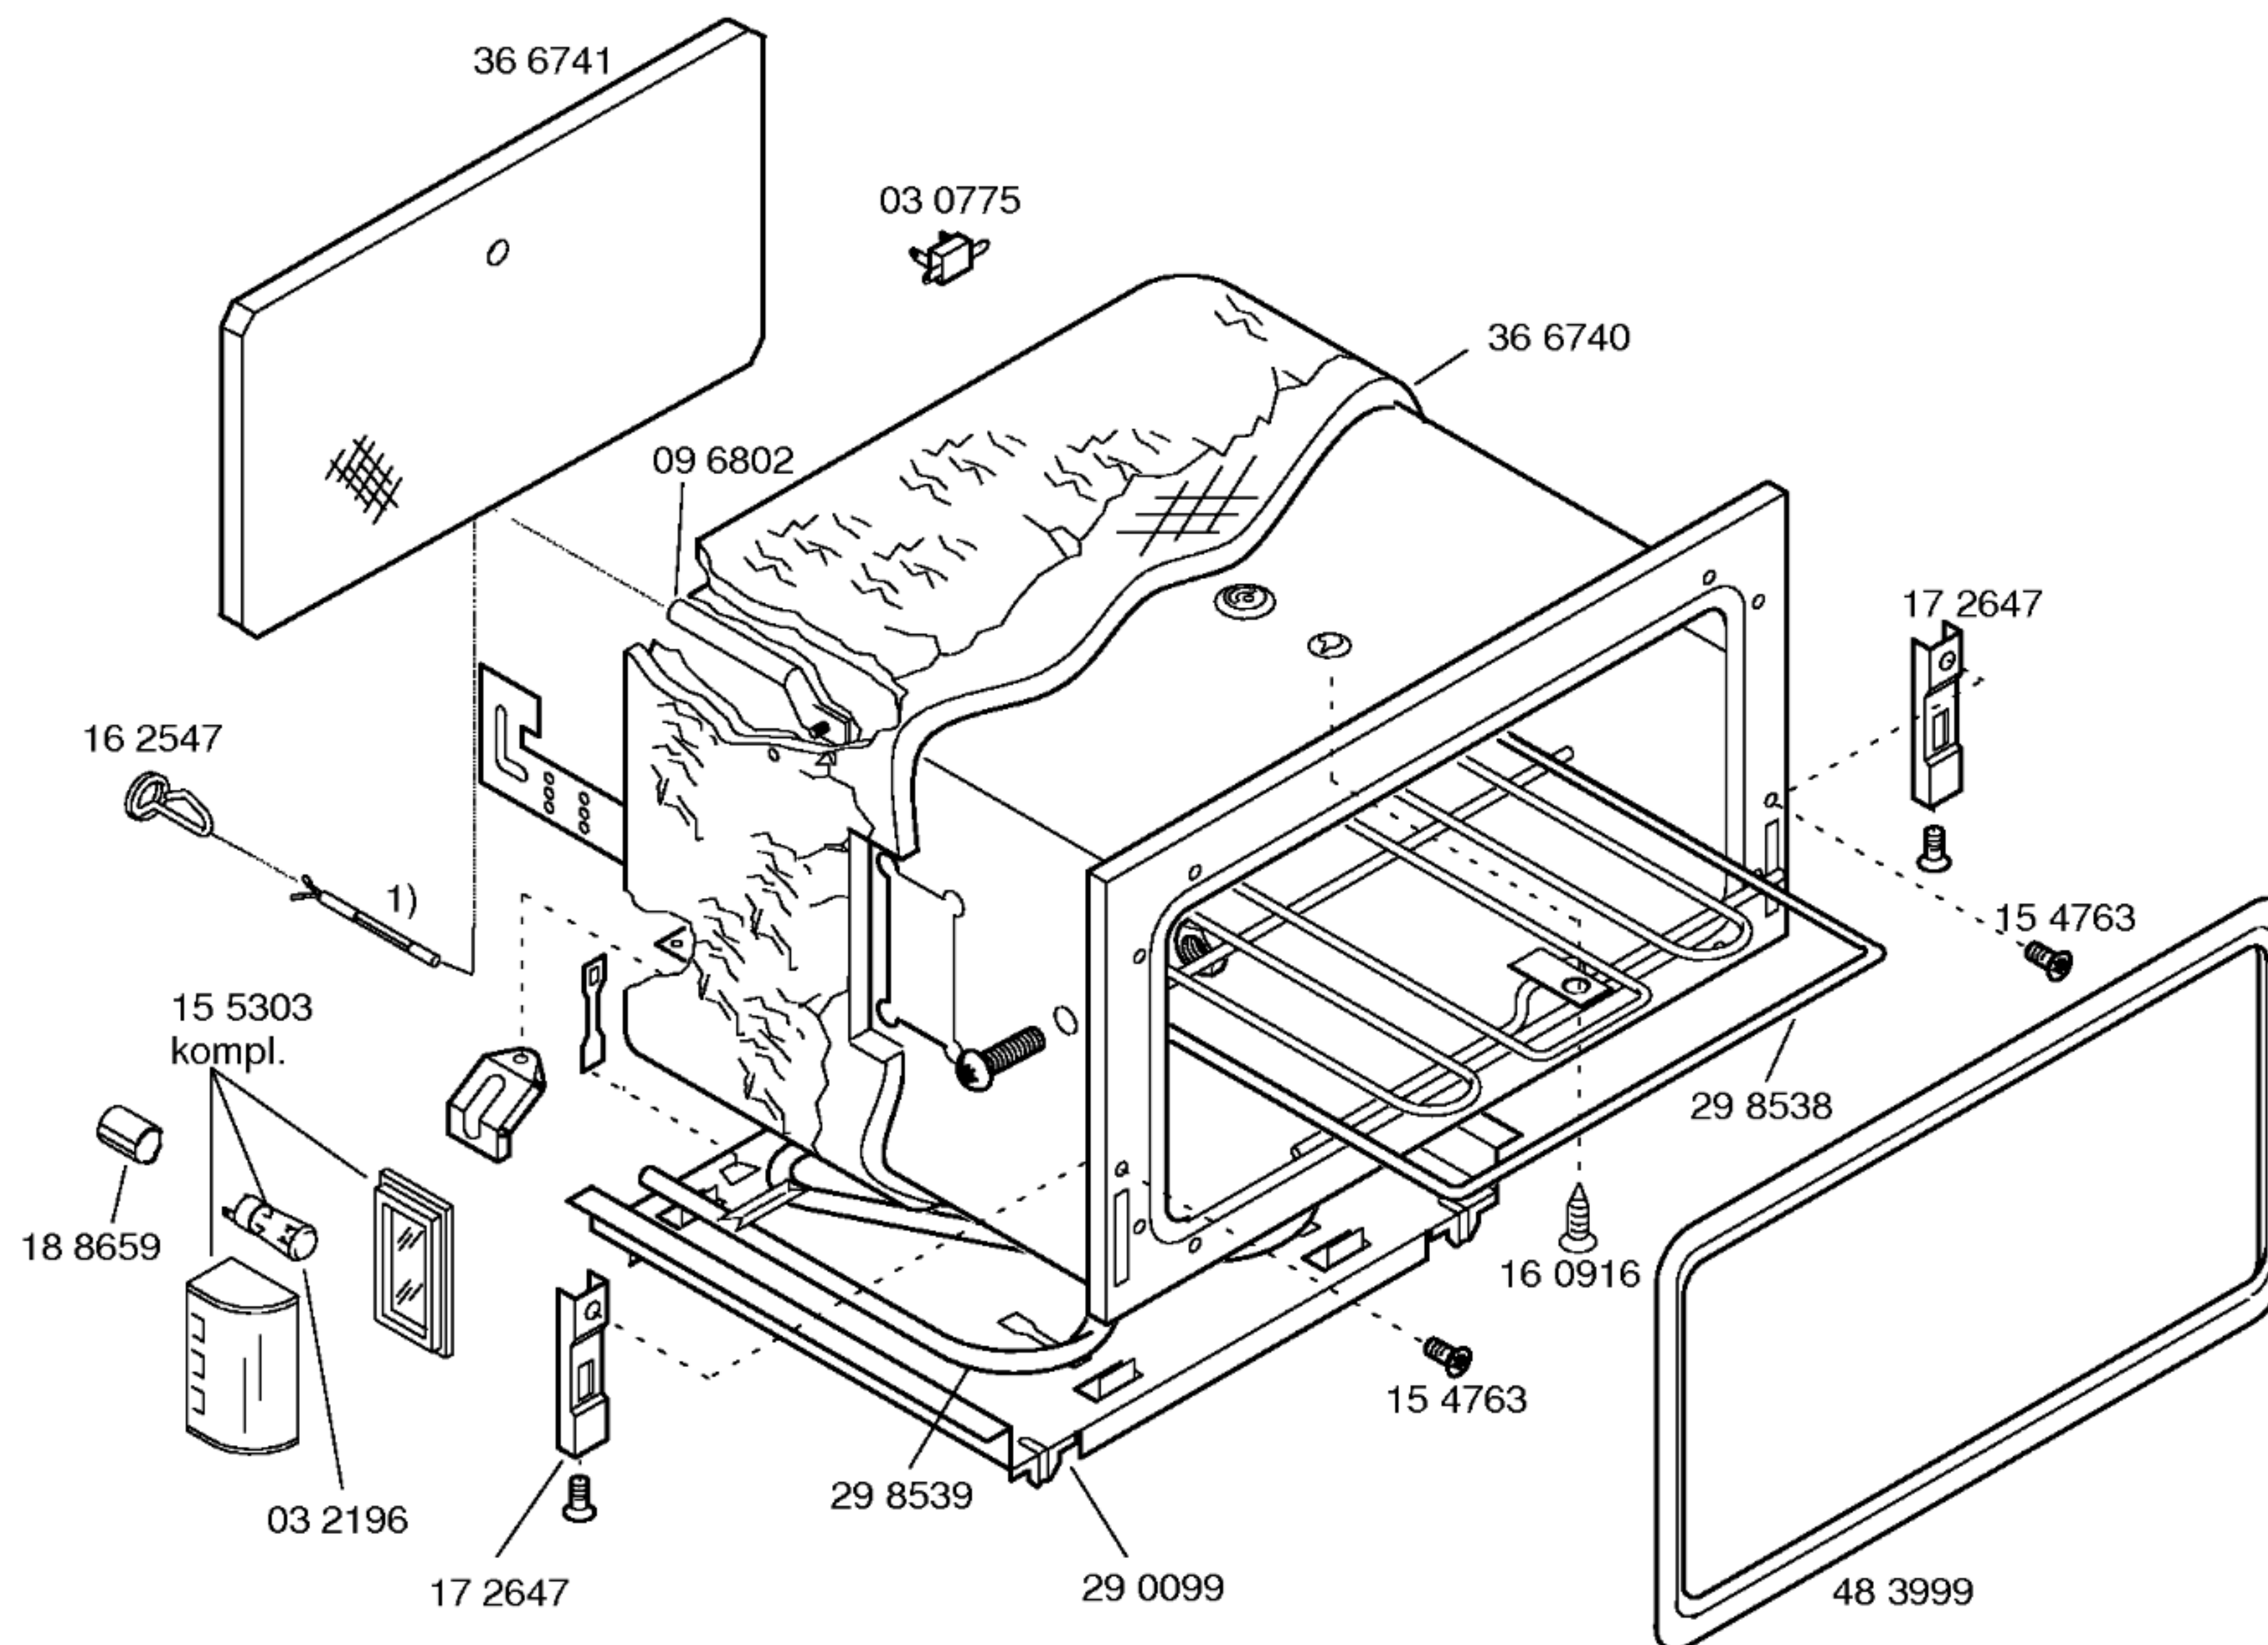

1) 18 7586