


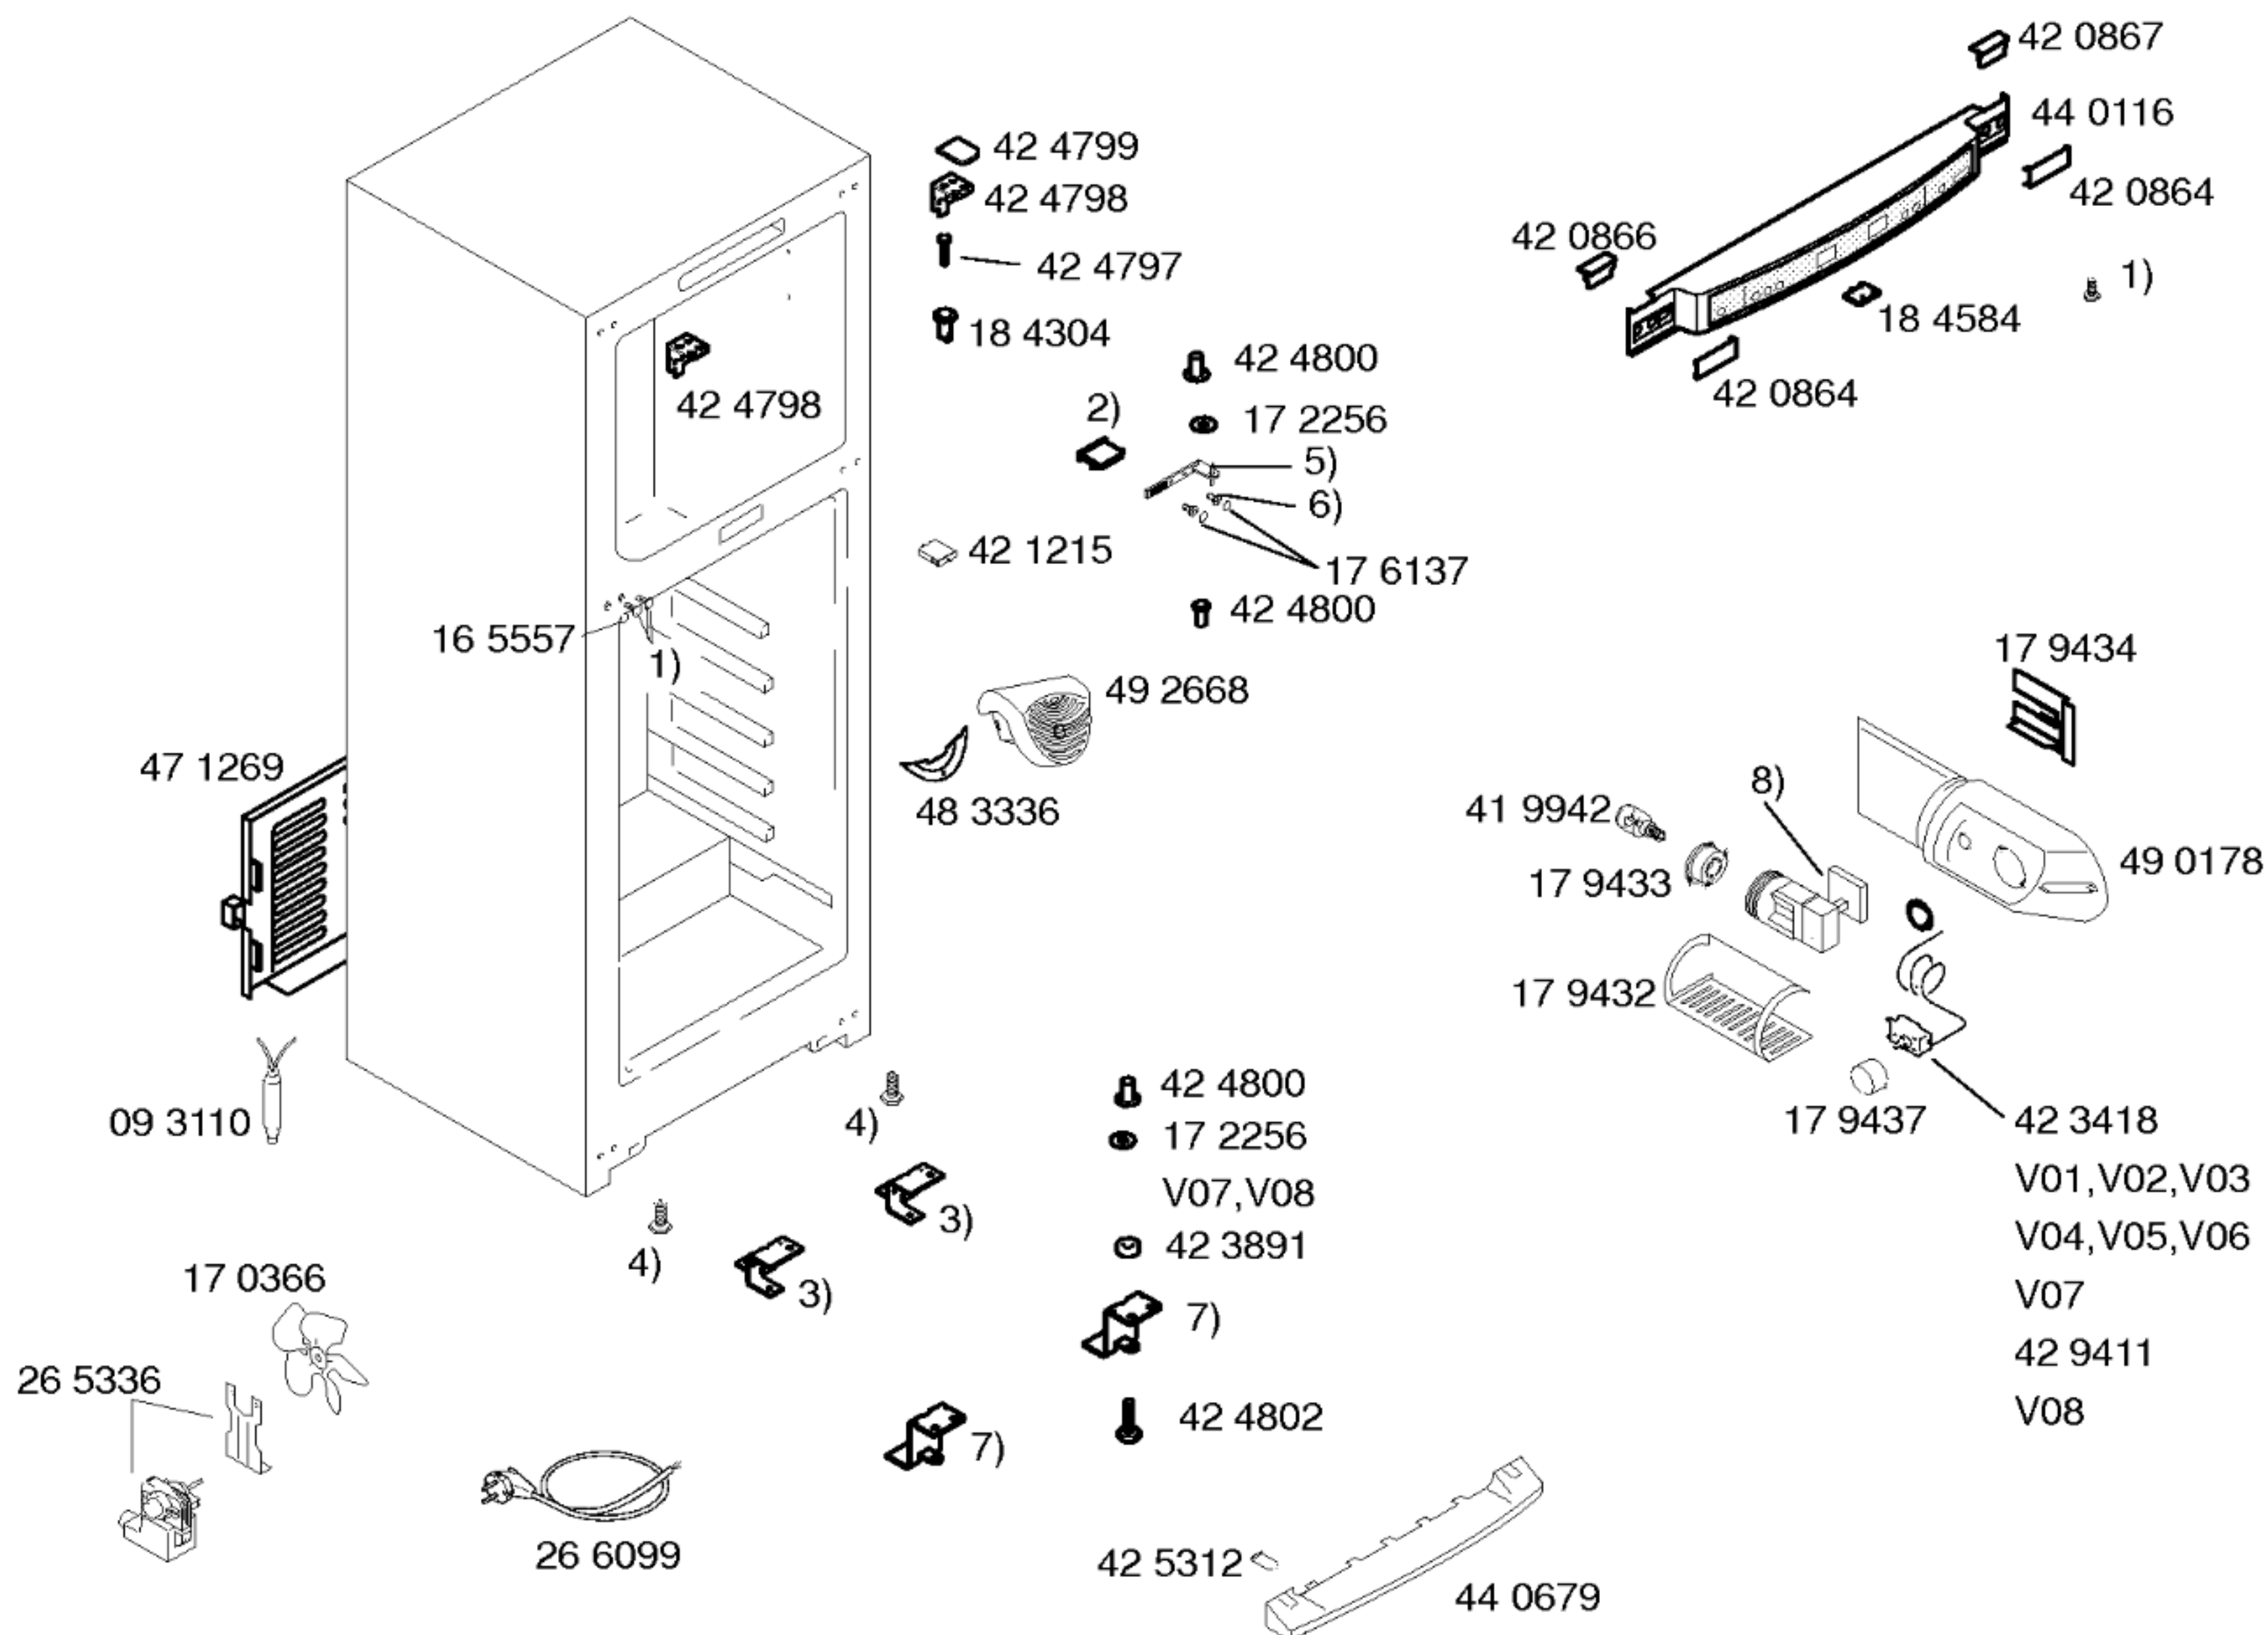

Gebrauchsanweisung
 59 1365

V01,V02
 (DE,TR)

59 5490

V03,V04,V05,V06,V07

V08

1) 16 5552

2) 41 8128

V01,V02

3) 49 1346

4) 42 4340

5) 42 4824

V01,V02

42 4825

V03,V04,V05,V06

V07,V08

6) 18 8196

7) 42 4800

V01,V02,V03,V04

V05,V06

42 8184

V07,V08








8) 17 9431

V01,V02,V03,V04


V05,V06,V07

42 9410

V08

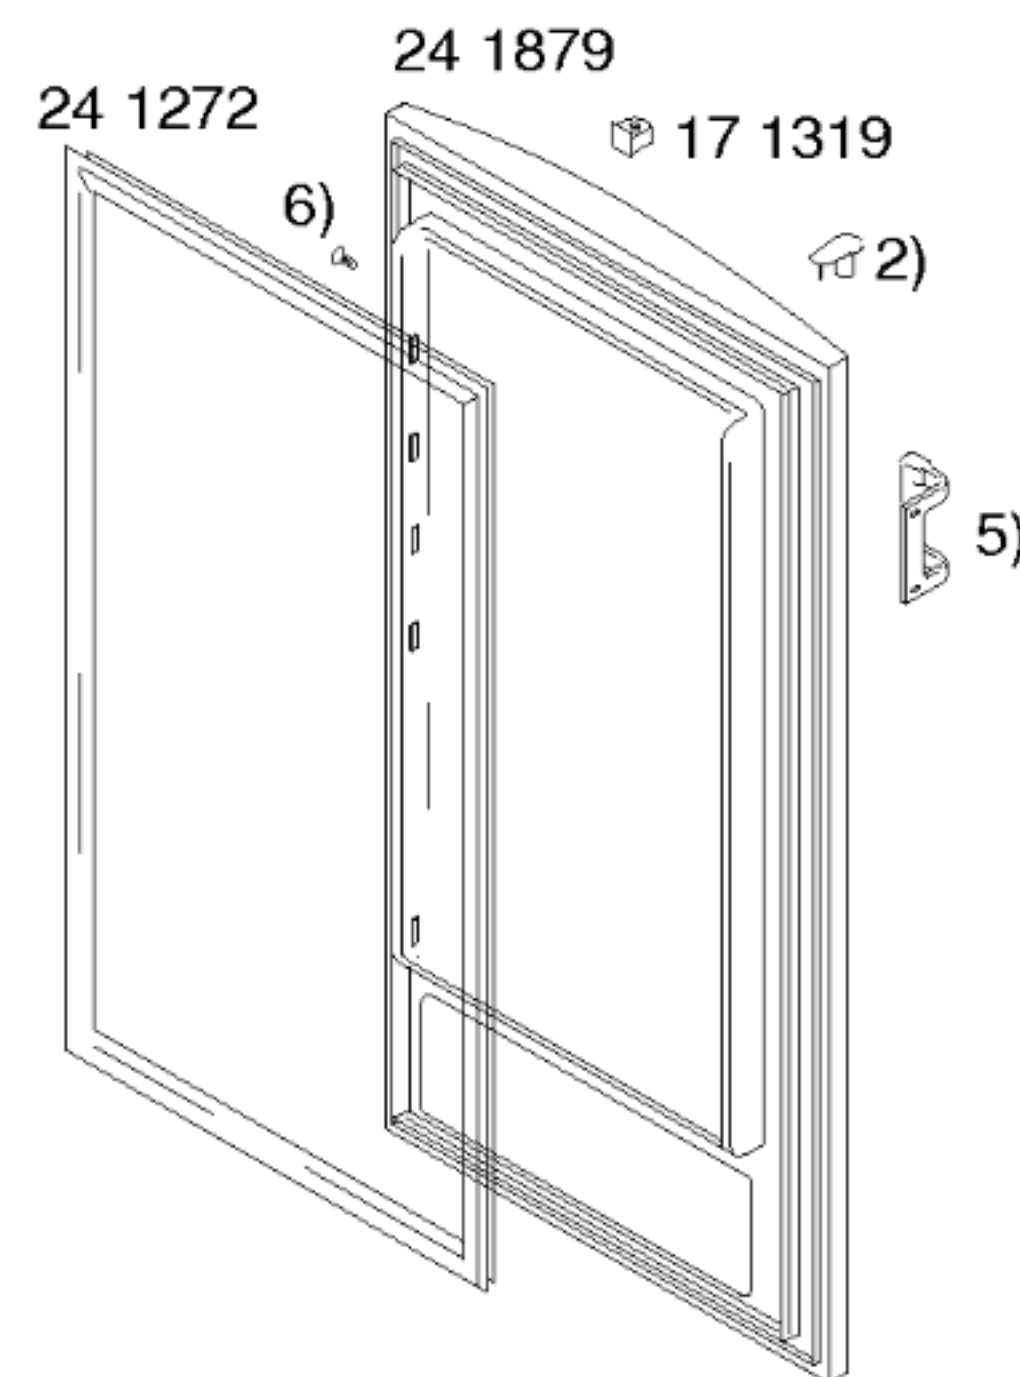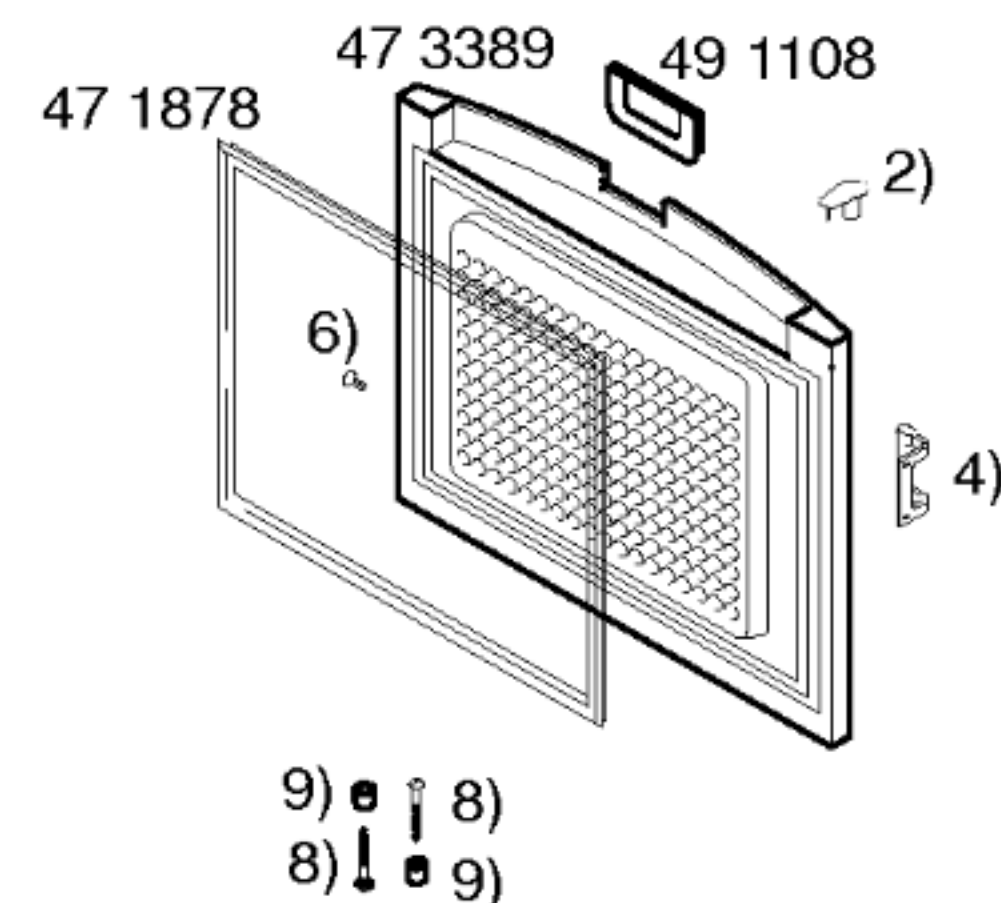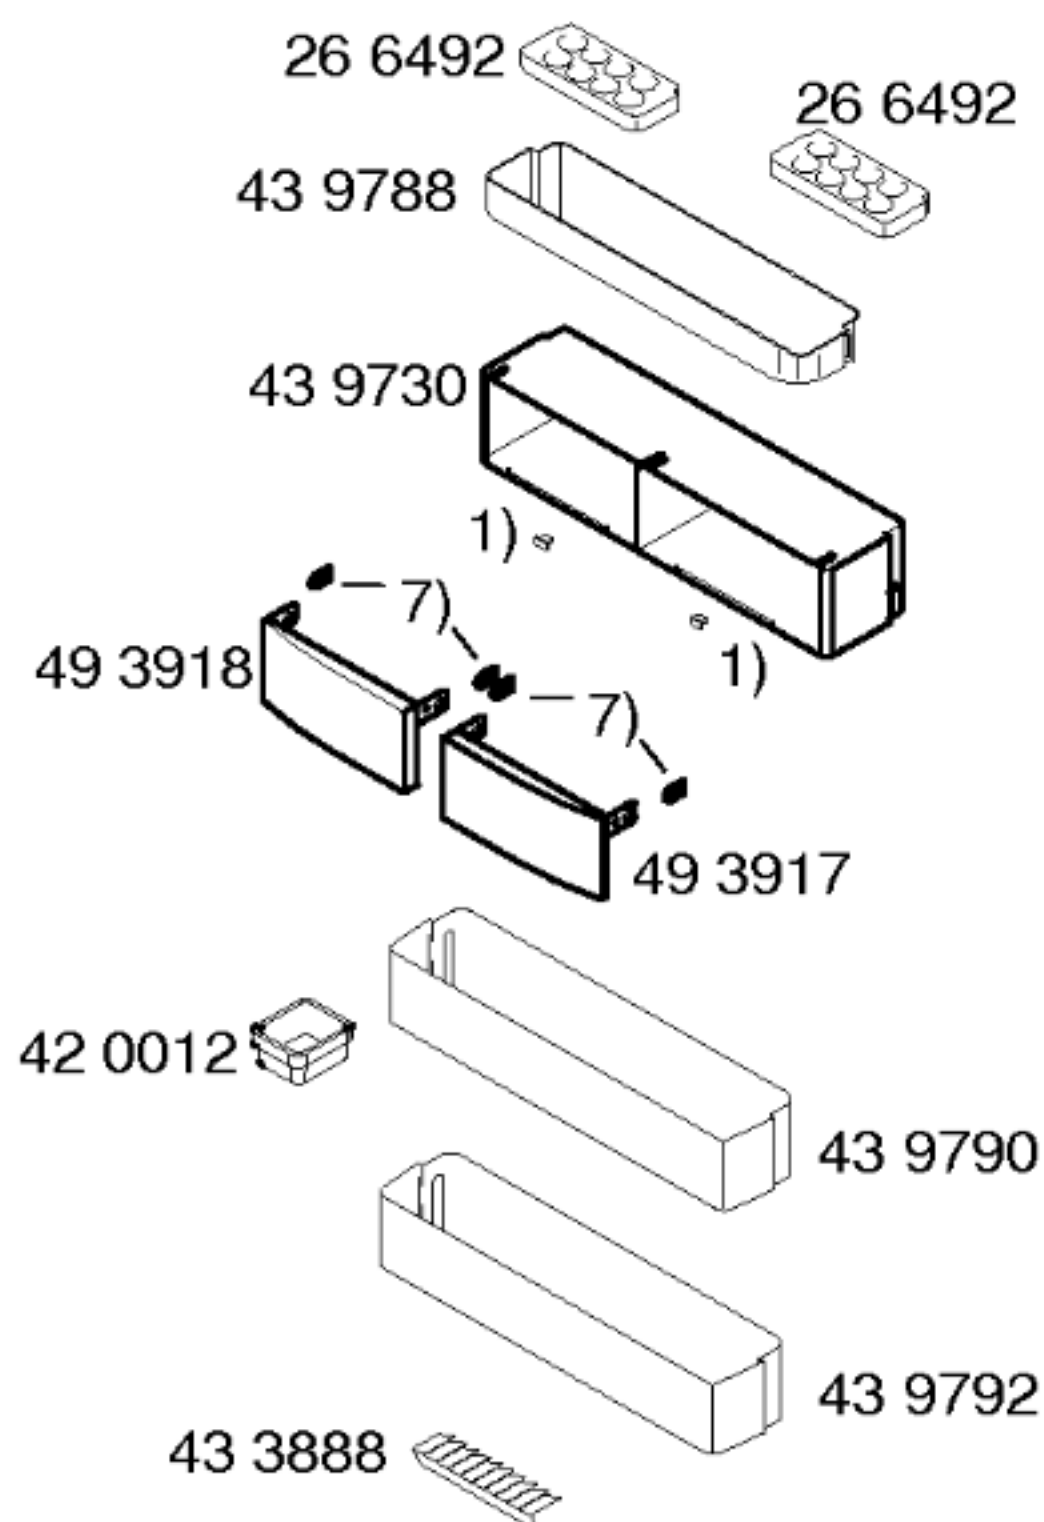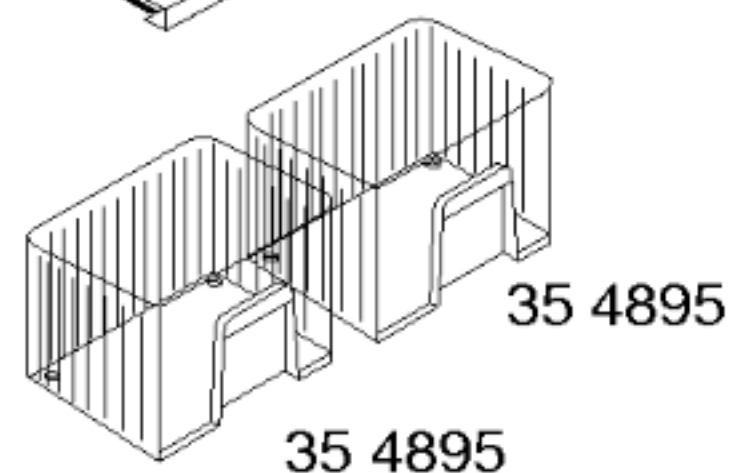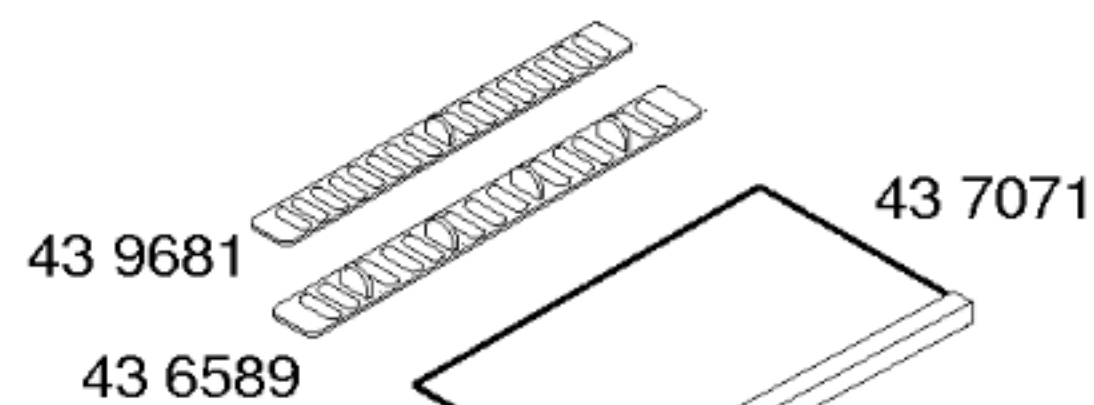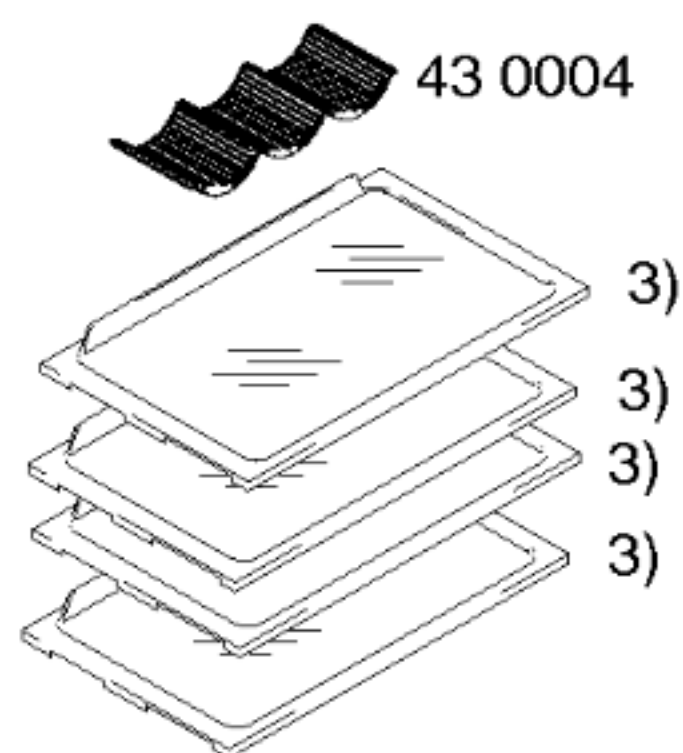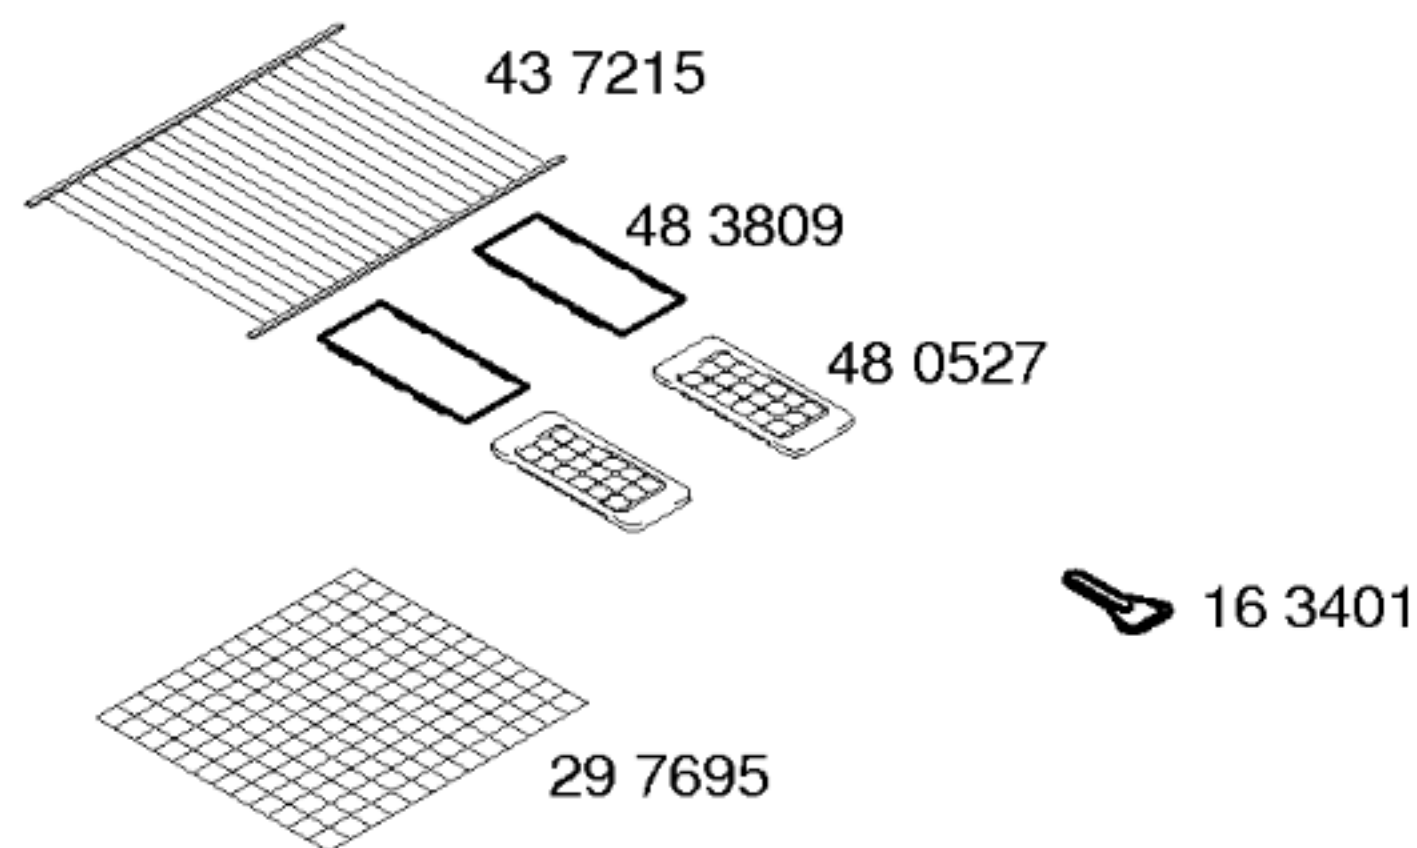

- 1) 18 1771
- 2) 17 1321
- 3) 44 0526
- 4) 48 0648
- 5) 48 0646
- 6) 16 6484
- 7) 42 4431
- 8) 18 8194
- V01,V02
- 9) 18 8188
- V01,V02

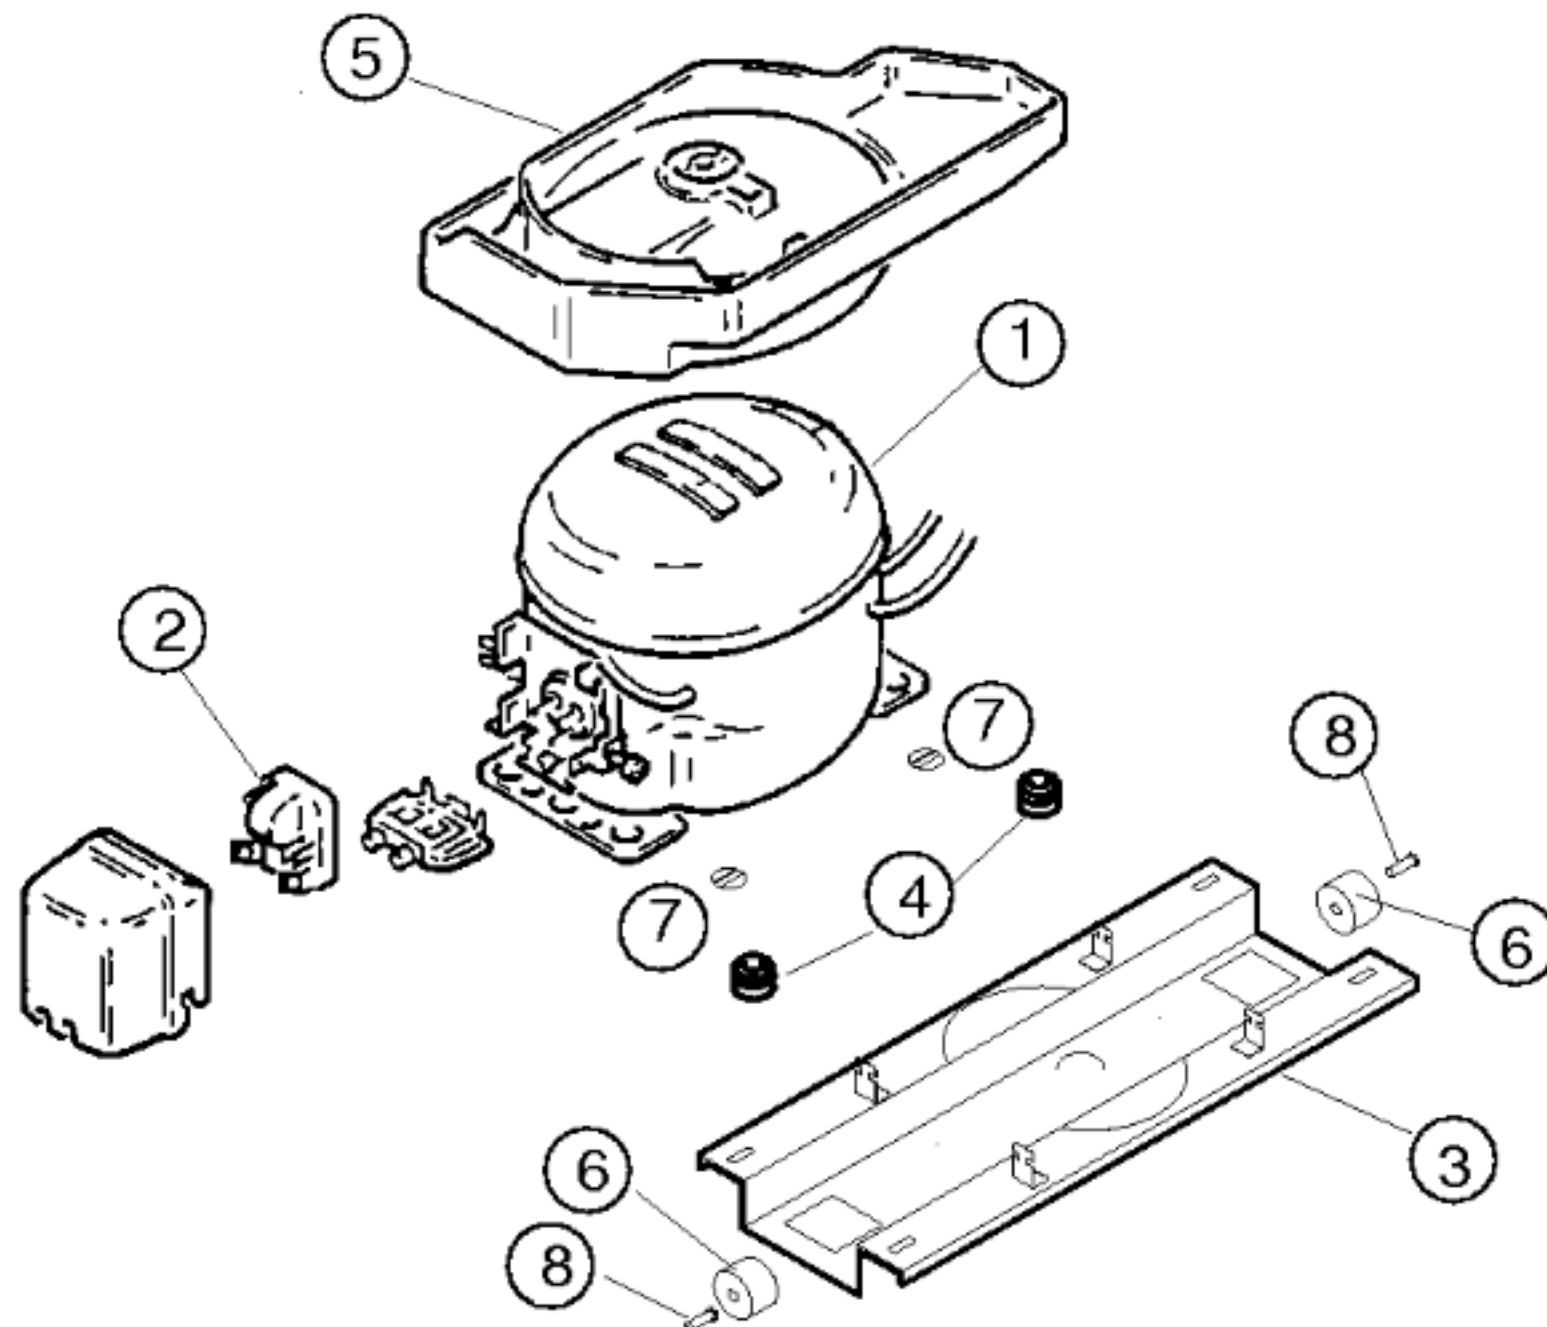

Pos.	V01,2,3,4,6,7,8	V05	
	Danfoss NLE15KTK	Aspera NBM111	
1	14 2207	14 3989	
2	16 5570	42 5966	
3	35 4583		
4	16 3427		
5	49 1201	49 1138	
6	17 1318		
7	17 1519		
8	18 1014		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
	V01,2,3,4,6,7,8	V05	
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Danfoss NLE15KTK	Aspera NBM111	
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Actua kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)	Danfoss +4.5 +4.5 -26.5 -16 -	Danfoss +4.5 +4.5 -26.5 -16	
Füllmenge/Fill. quantily/R134A Dolum miktarı	R600A	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	Ω W		
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Ω		
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	Ω V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz