



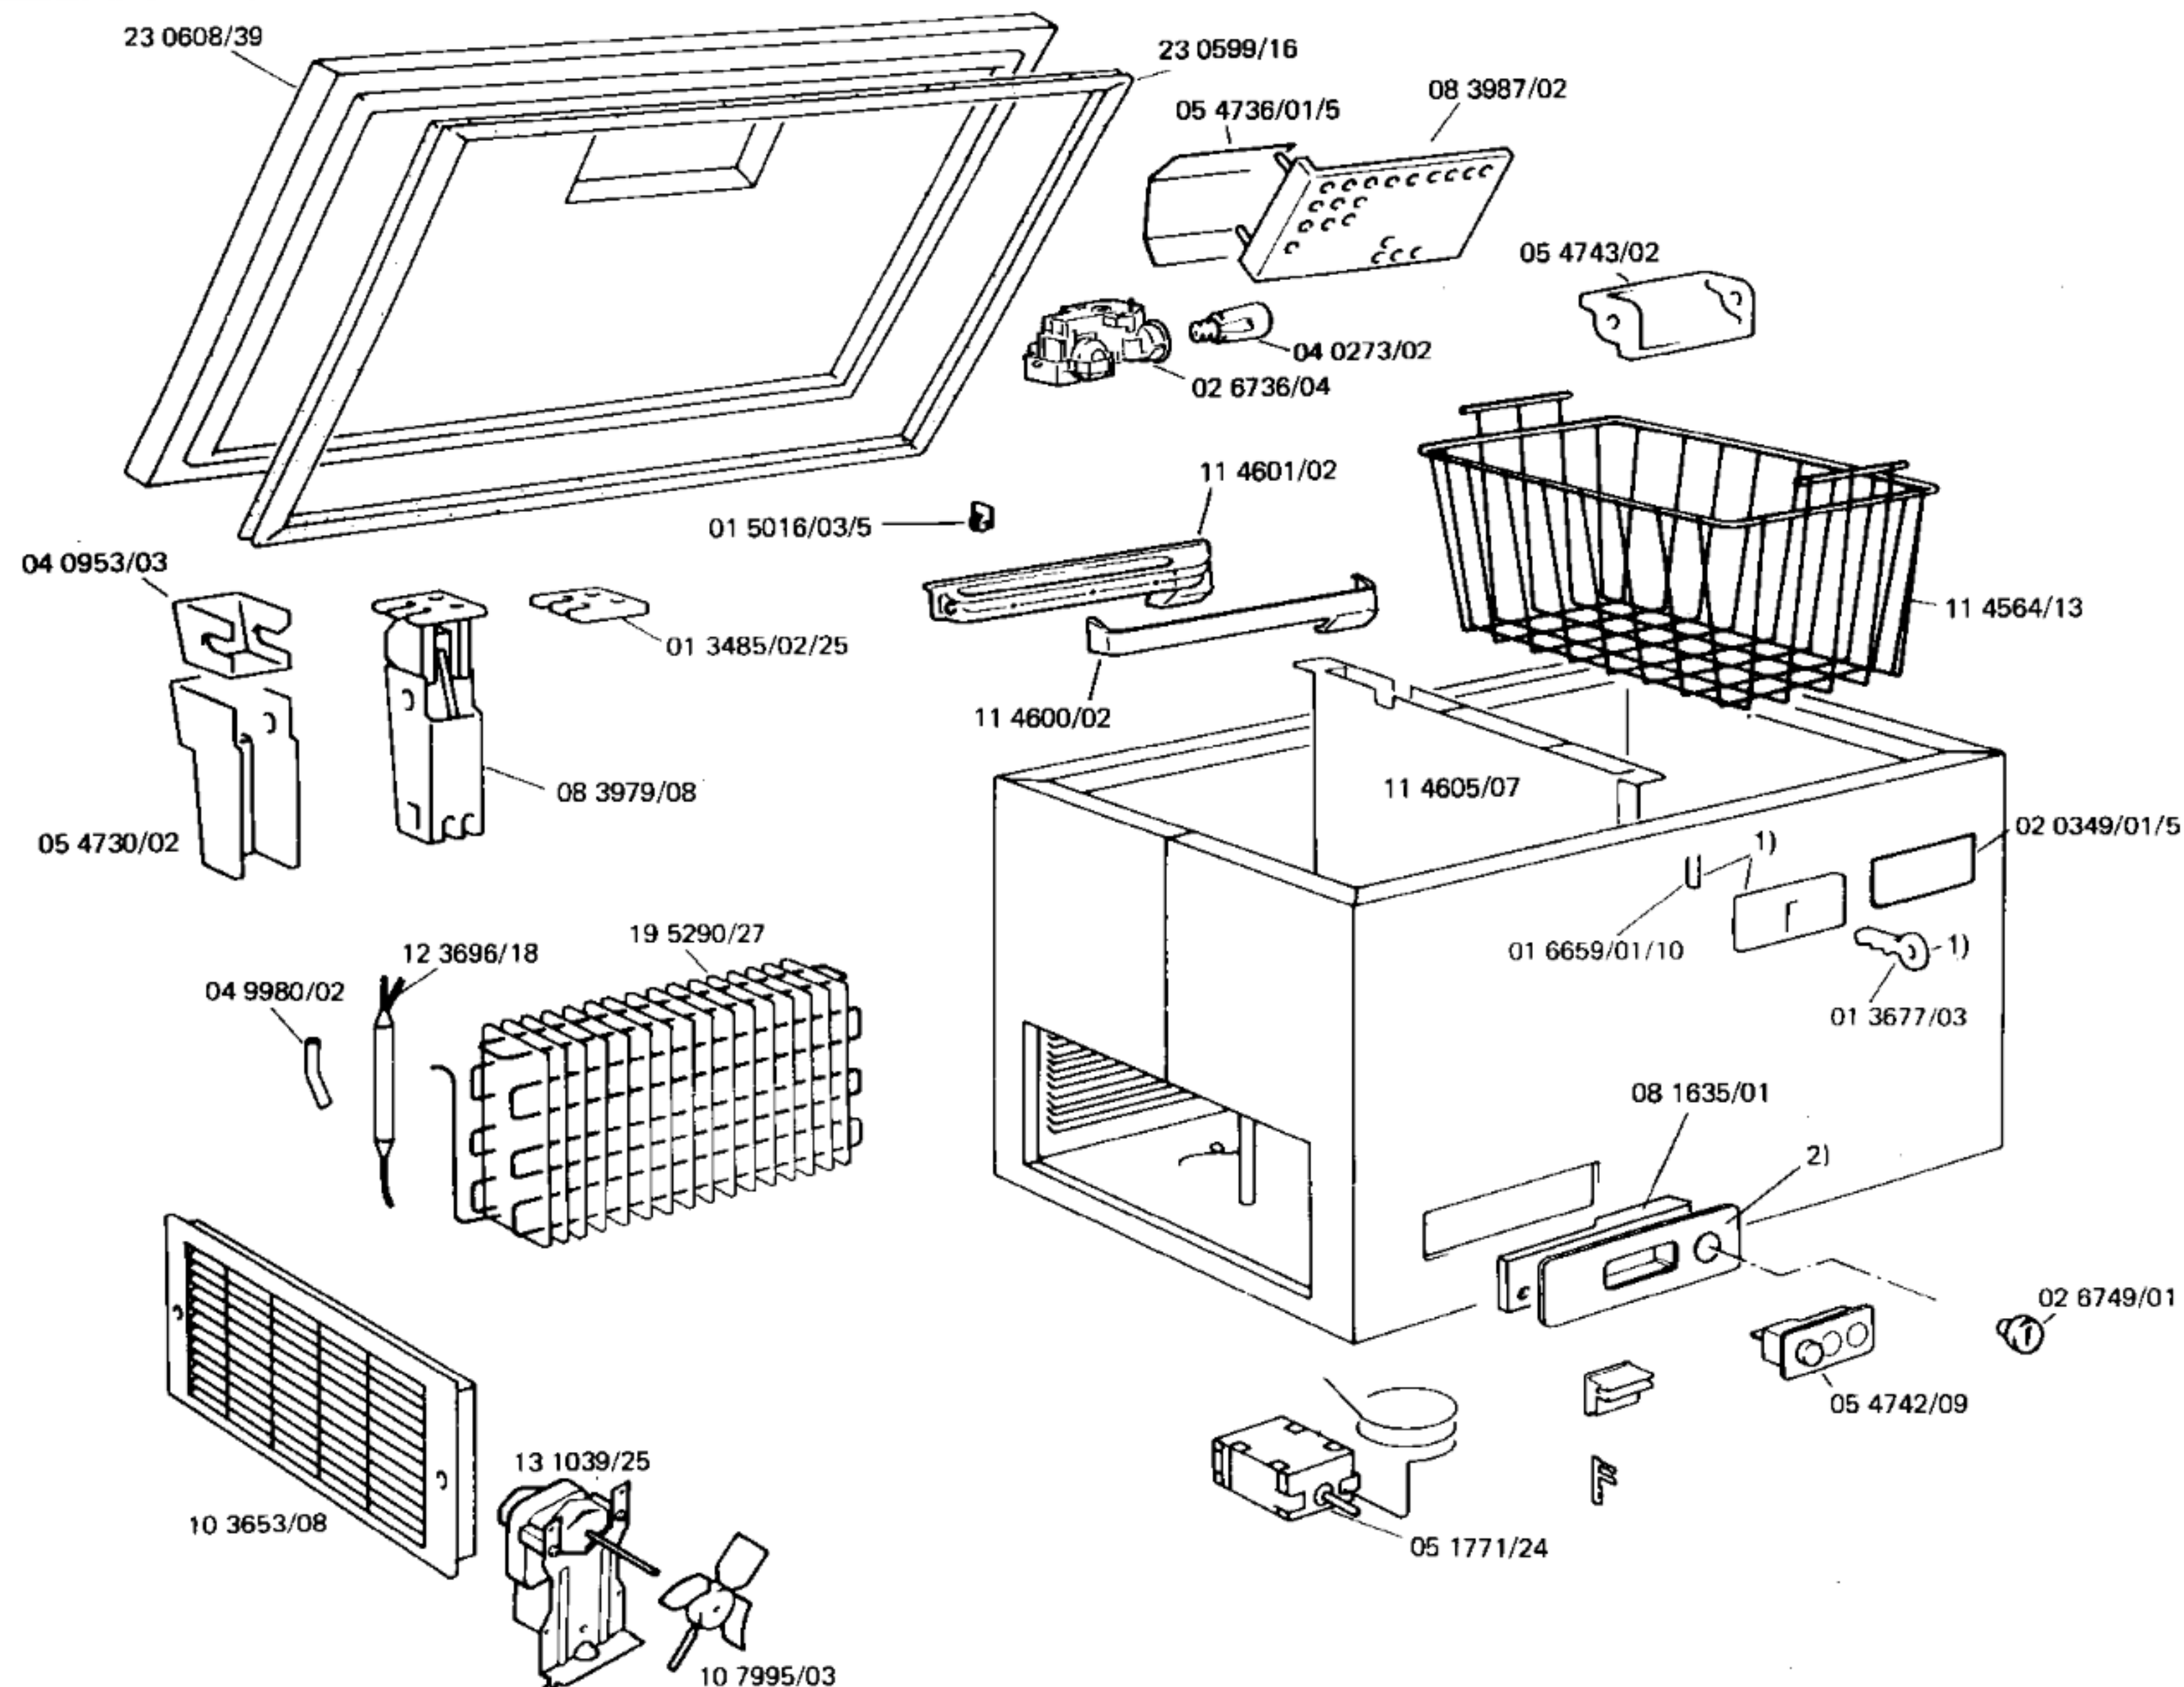

1) 05 0642/08
kompl.

2) 08 3998/03
D1, CH1
08 4000/04
F1

Gebrauchsanweisungen
51 1910/00
D1, CH1, N1
(D, GB, F, I, NL, N)
51 1911/00
F1
(F)

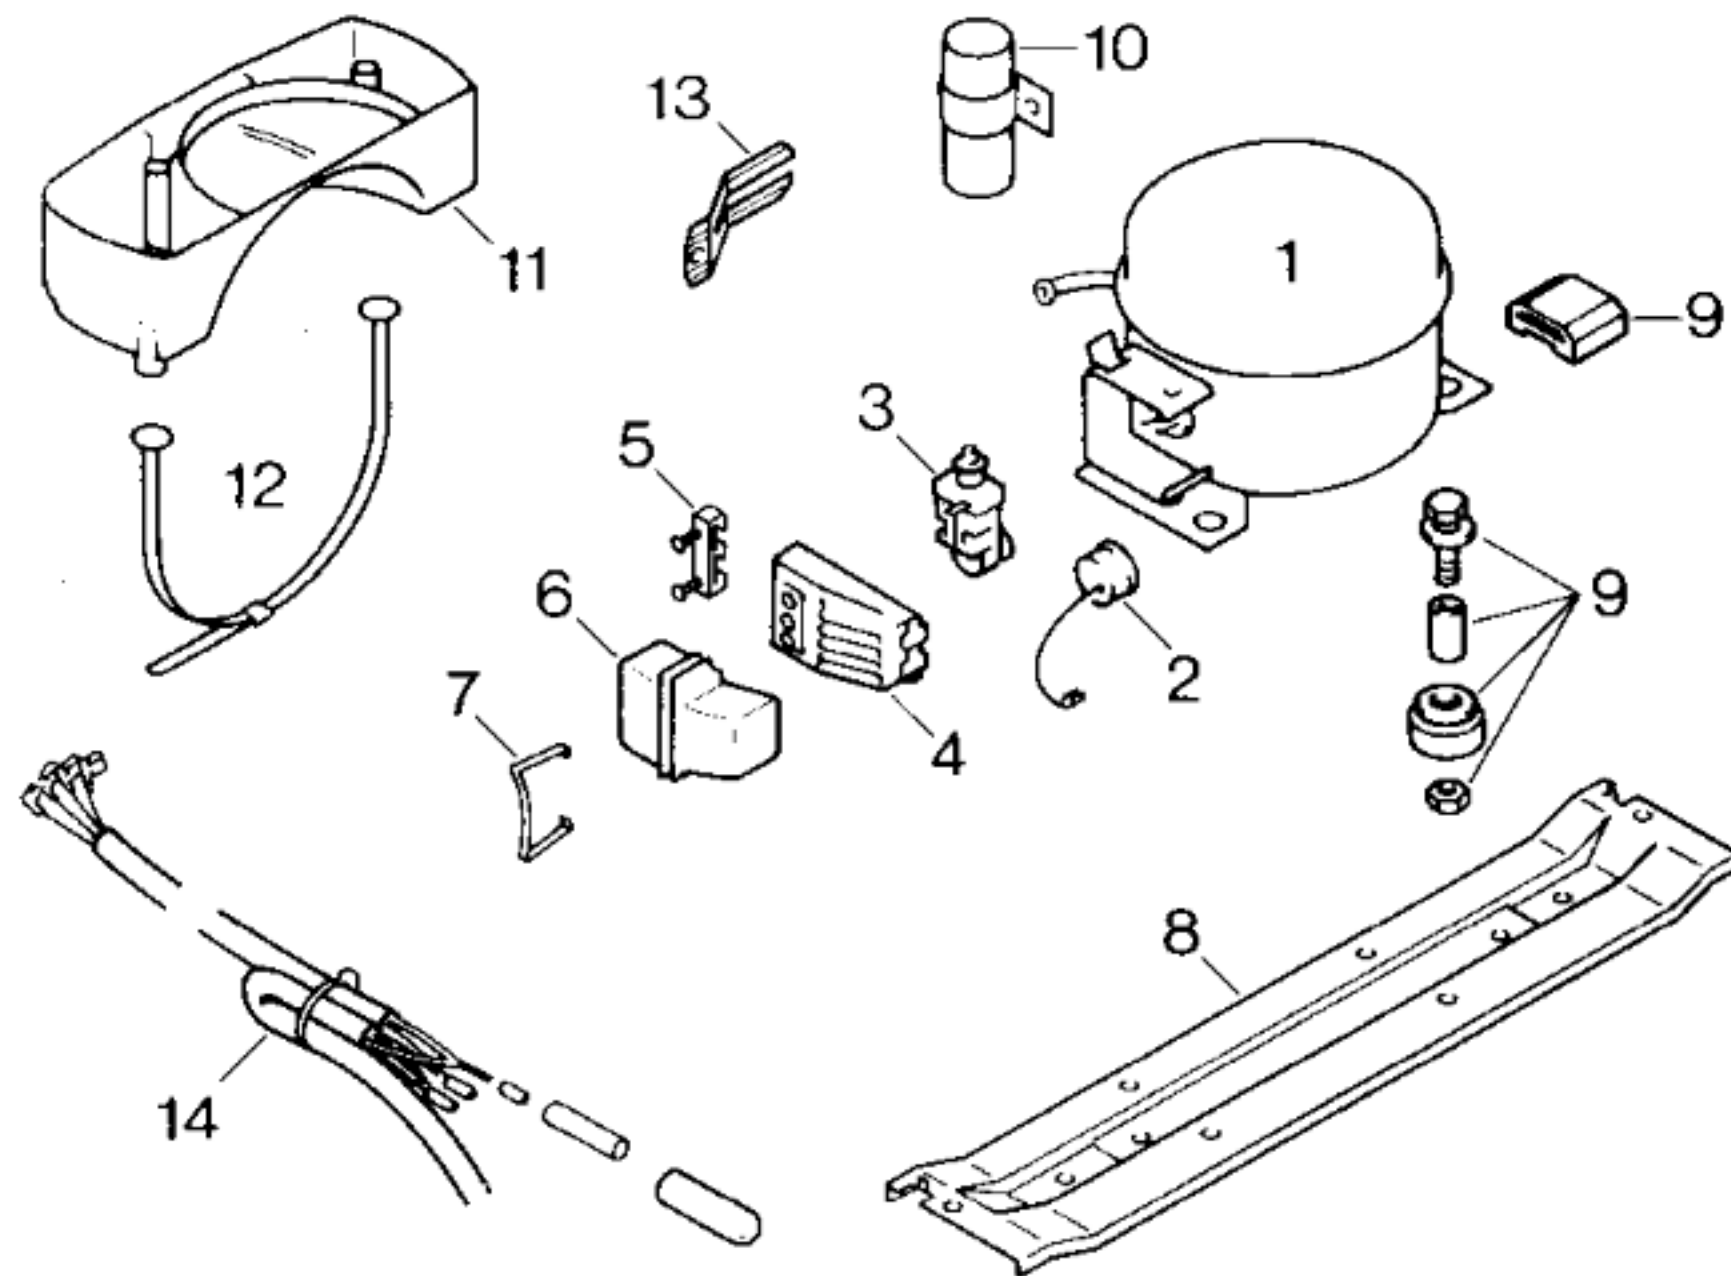

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Matsushita	Necchi		
Typ/Type		FN 91 Q 17 G	M 9 J blue Box		
Förderleistung/Delivery/Débit		V 1633	1630		
Anlaufstrom/Starting current/Cour. de démarrage		A 11,7	14,8		
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω 8,6	8,6		
	Hi/aux	Ω 30,5	25,0		
Temp.-Regler/Thermostat		Ranco			
Typ/Type		K 54			
Reglerstellung/Position		kalt warm			
Schaltwerte/Switching values/ Valeurs de commutation	„ein“	- 24	- 18		
	„aus“	- 31	- 24		
	(„abtauen“ od.) „alarm“	- 19	- 14		
Füllmenge/Fill.quantity/Charge	R12	g 200			
Anschlußwert/Conn.load/Puiss. connectée		W 190			
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
	Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω 155			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
	Spannung/Voltage/Tension	V			

Pos.	D1, F1, CH1	N1		
	Matsushita	Necchi		
1	14 0318/47	13 1071/47		
2		07 3658/18		
3	02 6742/21	07 3657/18		
4		05 1267/06		
5				
6	05 4733/03	02 1746/02		
7	02 6731/01	02 1747/01		
8				
9	01 3486/01			
10				
11				
12				
13				
14				