



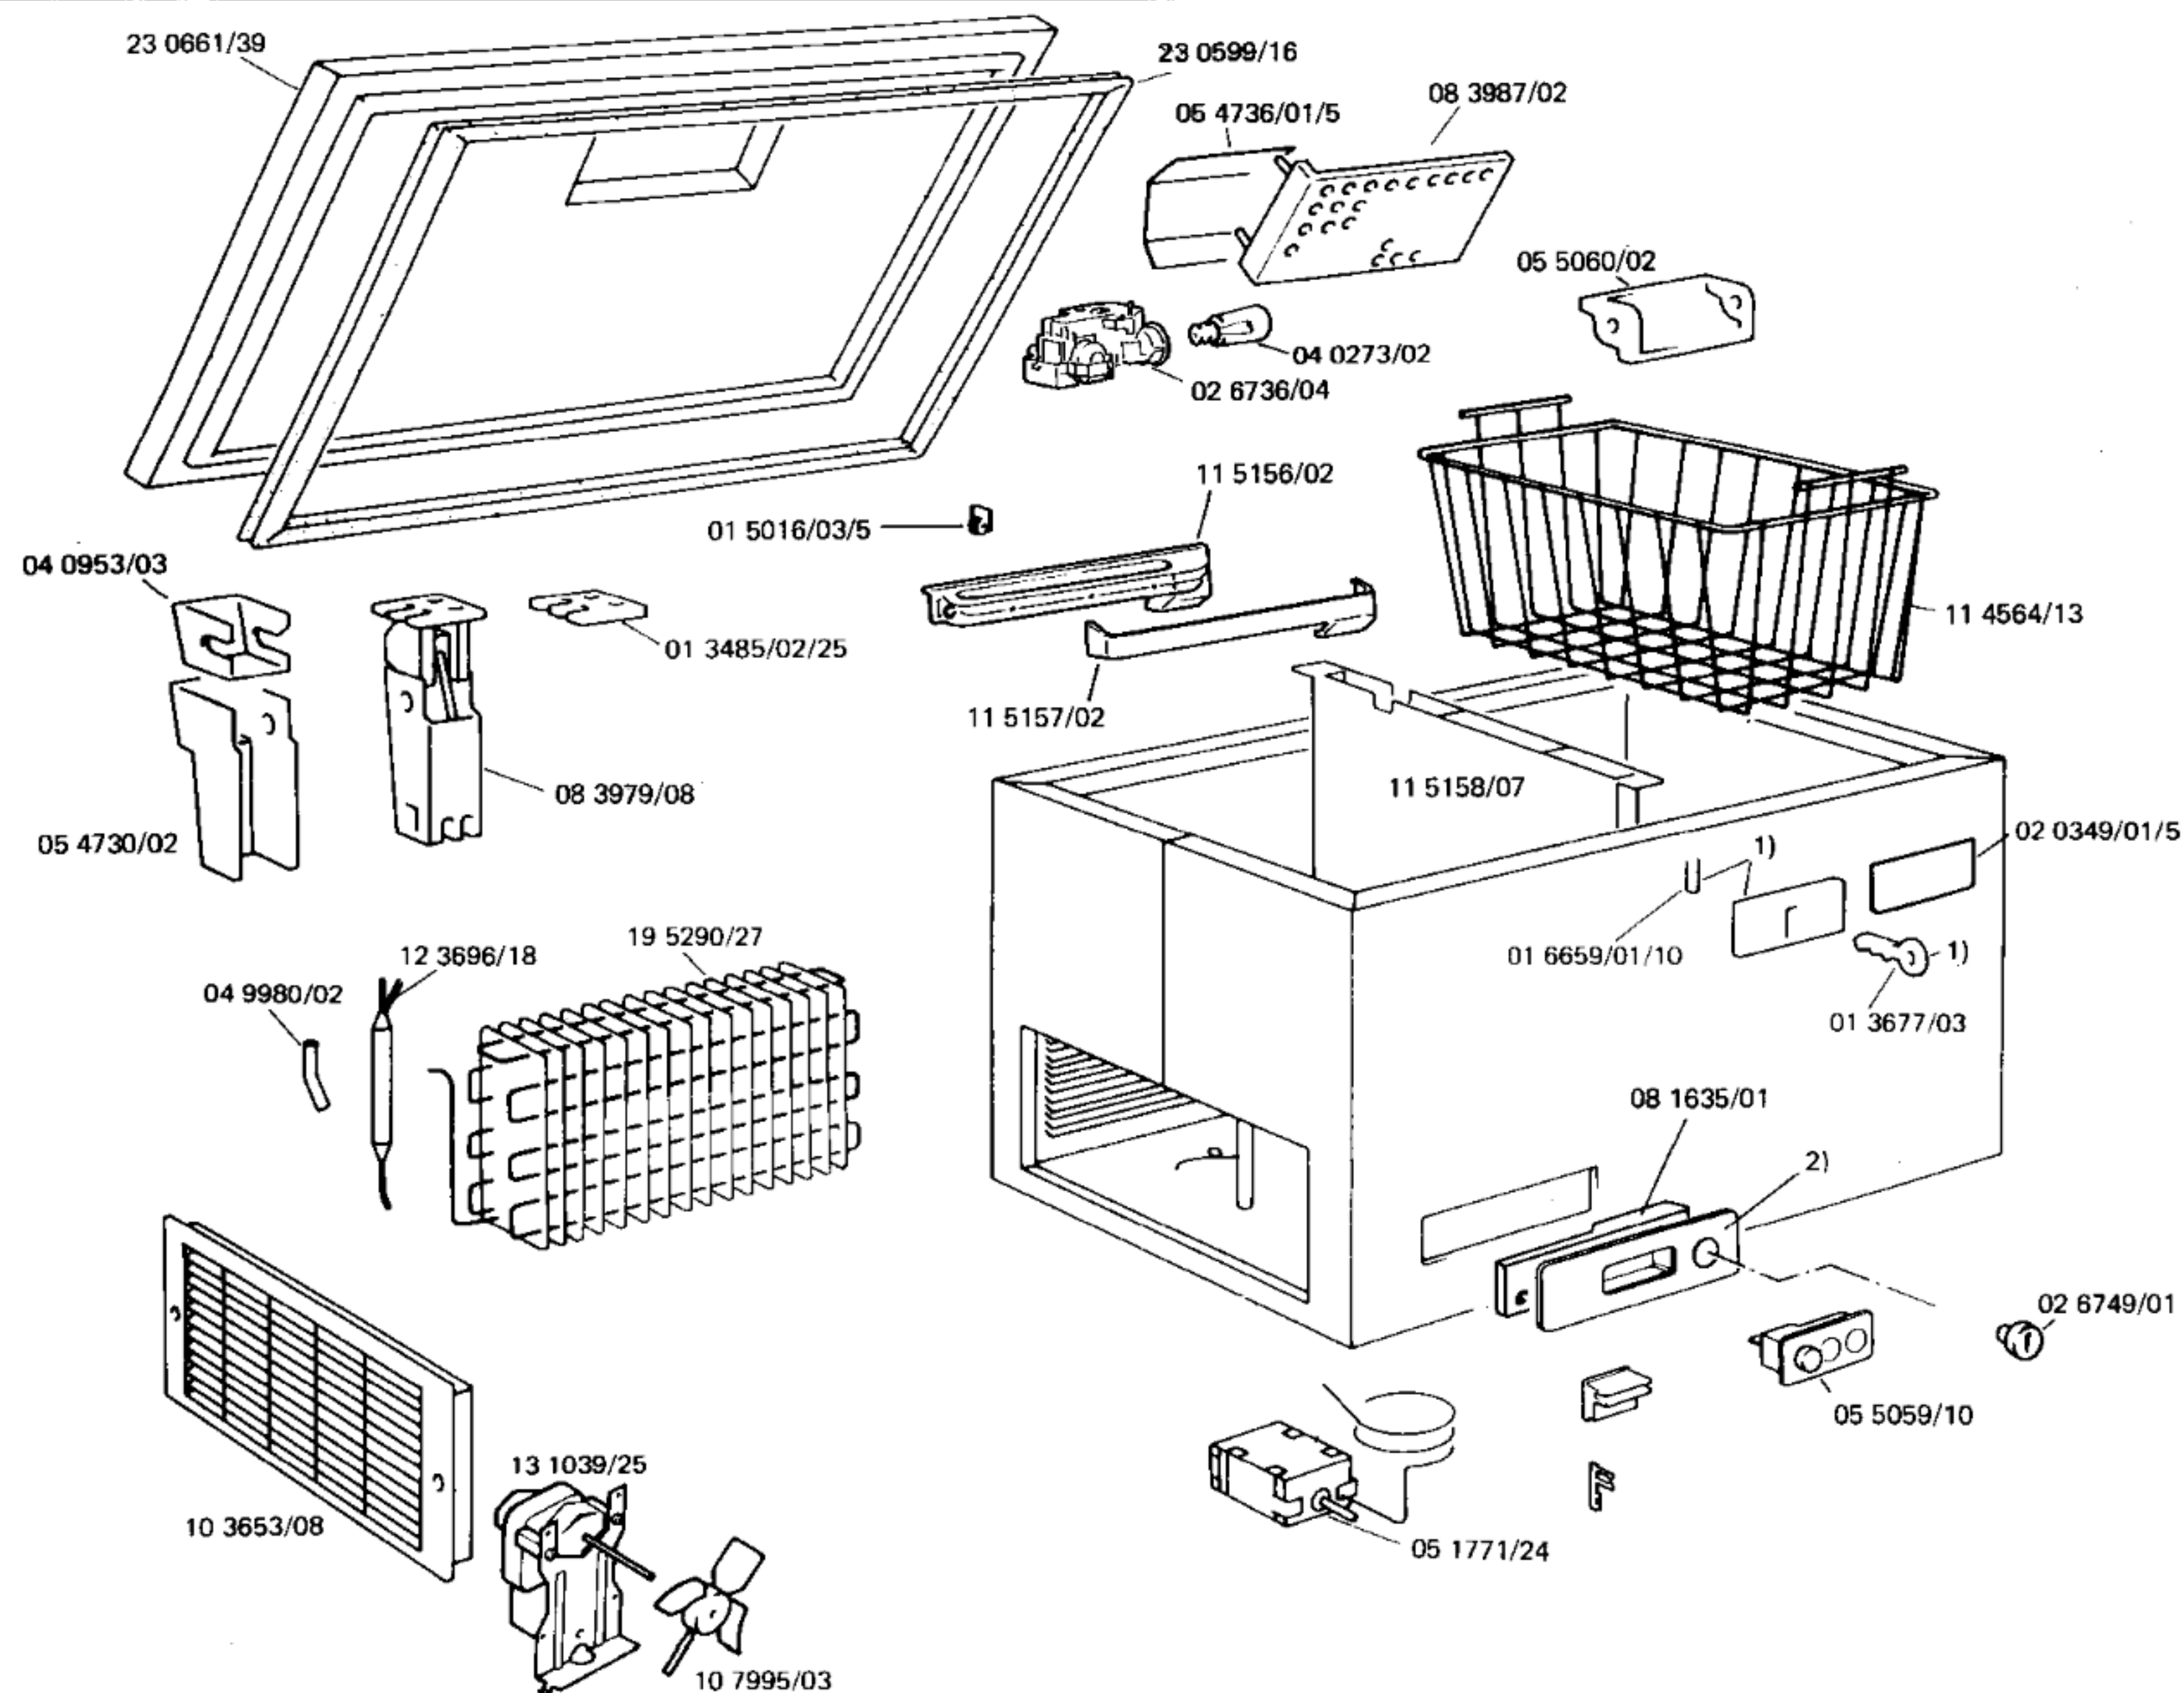

1) 05 0642/08
kompl.

2) 08 4367/03
D1,CH1,N1
08 4368/03
F1

Gebrauchsanweisungen
51 1910/00
D1,CH1,N1
(D,GB,F,I,NL,N)
51 1911/00
F1
(F)

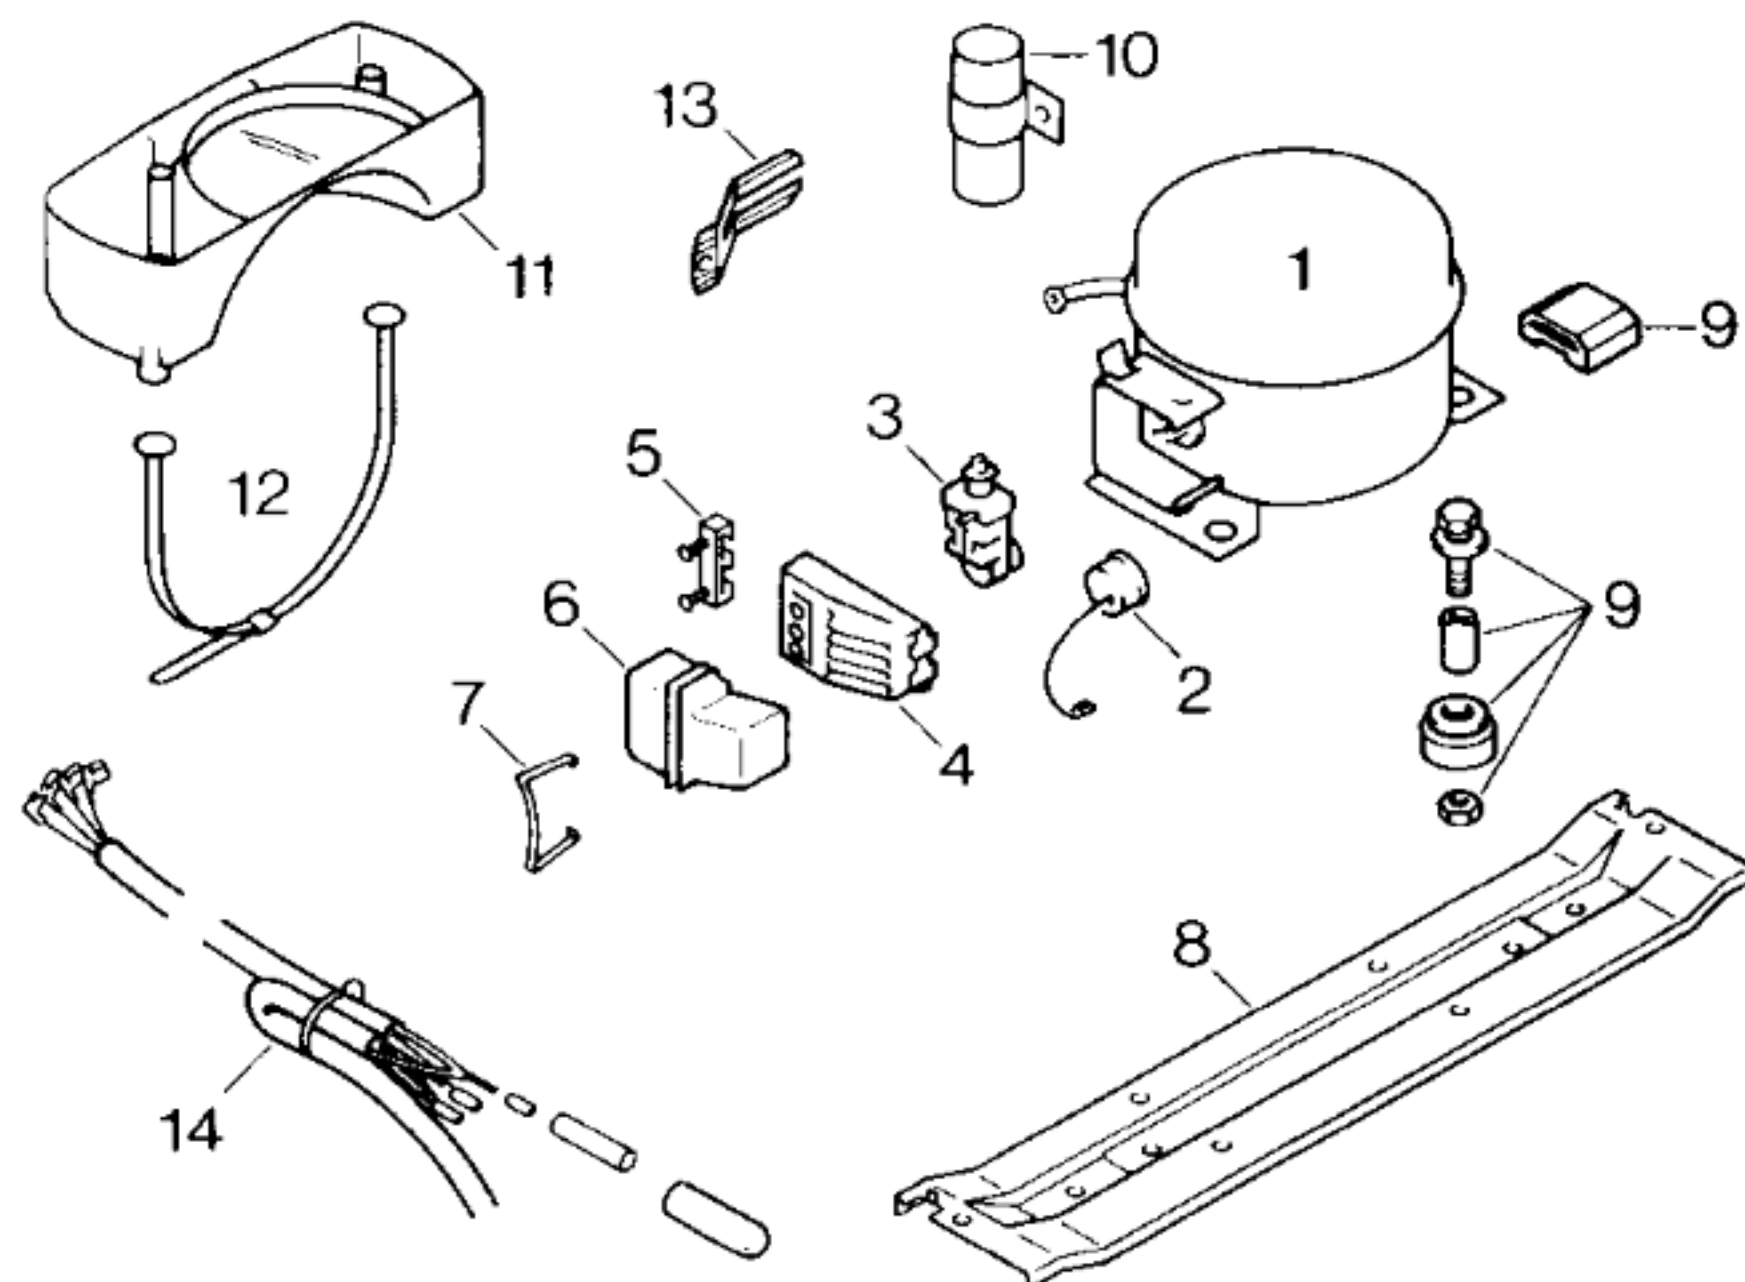

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita	Necchi	
Typ/Type		FN 91 Q 17 G	M 9 J blue Box	
Förderleistung/Delivery/Débit		V 1633	1630	
Anlaufstrom/Starting current/Cour. de démarrage		A 11,7	14,8	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω 8,6	8,6	
	Hi/aux	Ω 30,5	25,0	
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K 54		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/ Valeurs de commutation	„ein“	- 24	- 18	
	„aus“	- 31	- 24	
	(„abtauen“ od.) „alarm“	- 19	- 14	
Füllmenge/Fill.quantity/Charge		R12 g	200	
Anschlußwert/Conn.load/Puiss. connectée		W	190	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
	Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω	155	
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
	Spannung/Voltage/Tension	V		

Pos.	D1, F1, CH1	N1		
	Matsushita	Necchi		
1	14 0318/47	13 1071/47		
2		07 3658/18		
3	02 6742/21	07 3657/18		
4		05 1267/06		
5				
6	05 4733/03	02 1746/02		
7	02 6731/01	02 1747/01		
8				
9	01 3486/01			
10				
11				
12				
13				
14				