


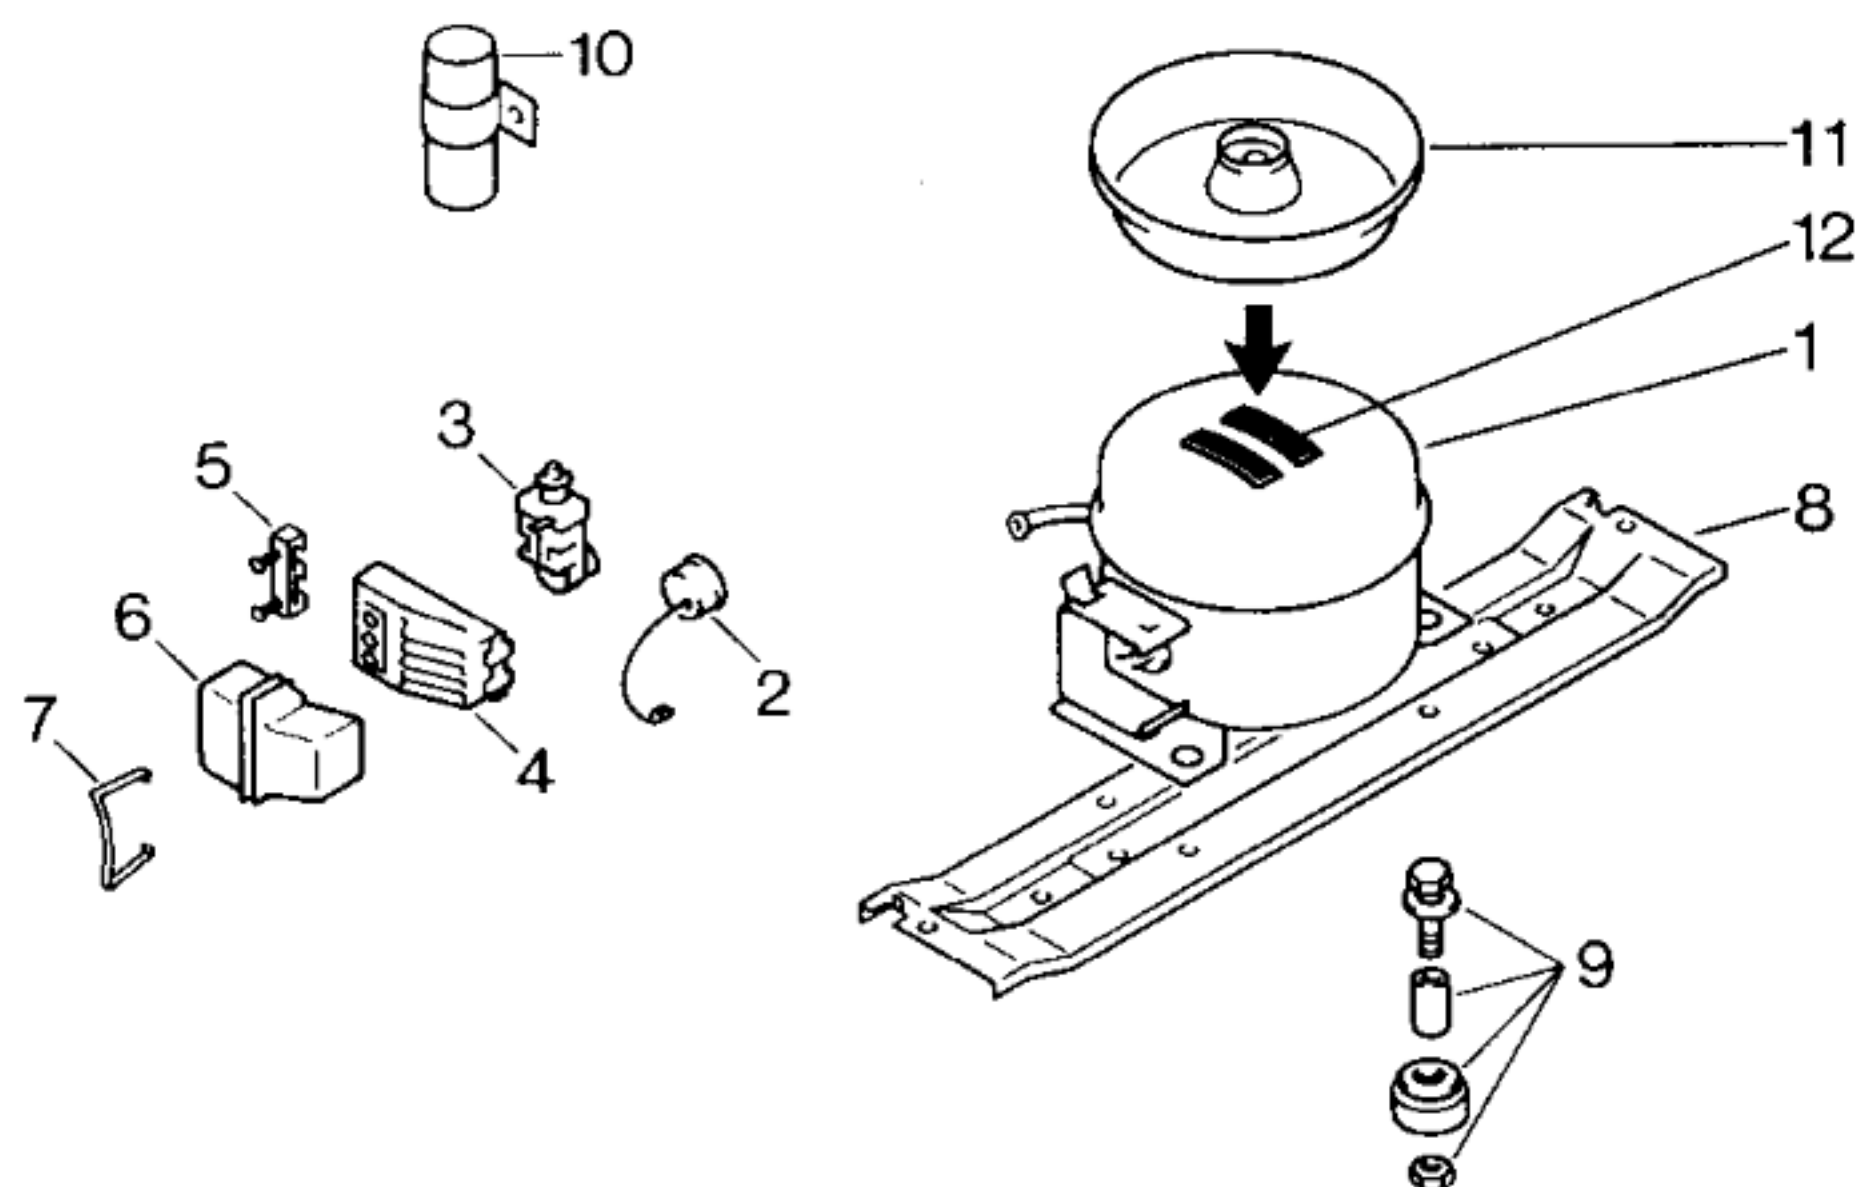

Pos.	EU2	EU1, F1	
	Aspera BY 1118 A	Danfoss FR 10 A	
1	14 0363	14 0427	
2	02 7670		
3	02 2342	02 0108	
4	05 1748		
5		02 1361	
6	05 1746	05 1413	
7	02 2339		
8			
9	05 0166	05 0166	
10			
11			
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Aspera BY 1118 A	Danfoss FR 10 A	
Typ/Type		1596	1629	
Förderleistung/Delivery/Débit	l/h	11,0	11,4	
Anlaufstrom/Starting current/Cour. de démarrage	A	9,9	10,7	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	37,3	13,0	
	Hi/aux Ω			
Temp.-Regler/Thermostat		Danfoss 077 B2054		
Typ/Type		kalt warm		
Reglerstellung/Position		-24 -16		
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	-34 -24		
Valeurs de commutation	„aus“	-19 -12		
	(„abtauen“ od.) „alarm“			
Füllmenge/Fill.quantity/Charge	R12 g	220		
Anschlußwert/Conn.load/Puiss. connectée	W	190		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Resistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω	190		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			