



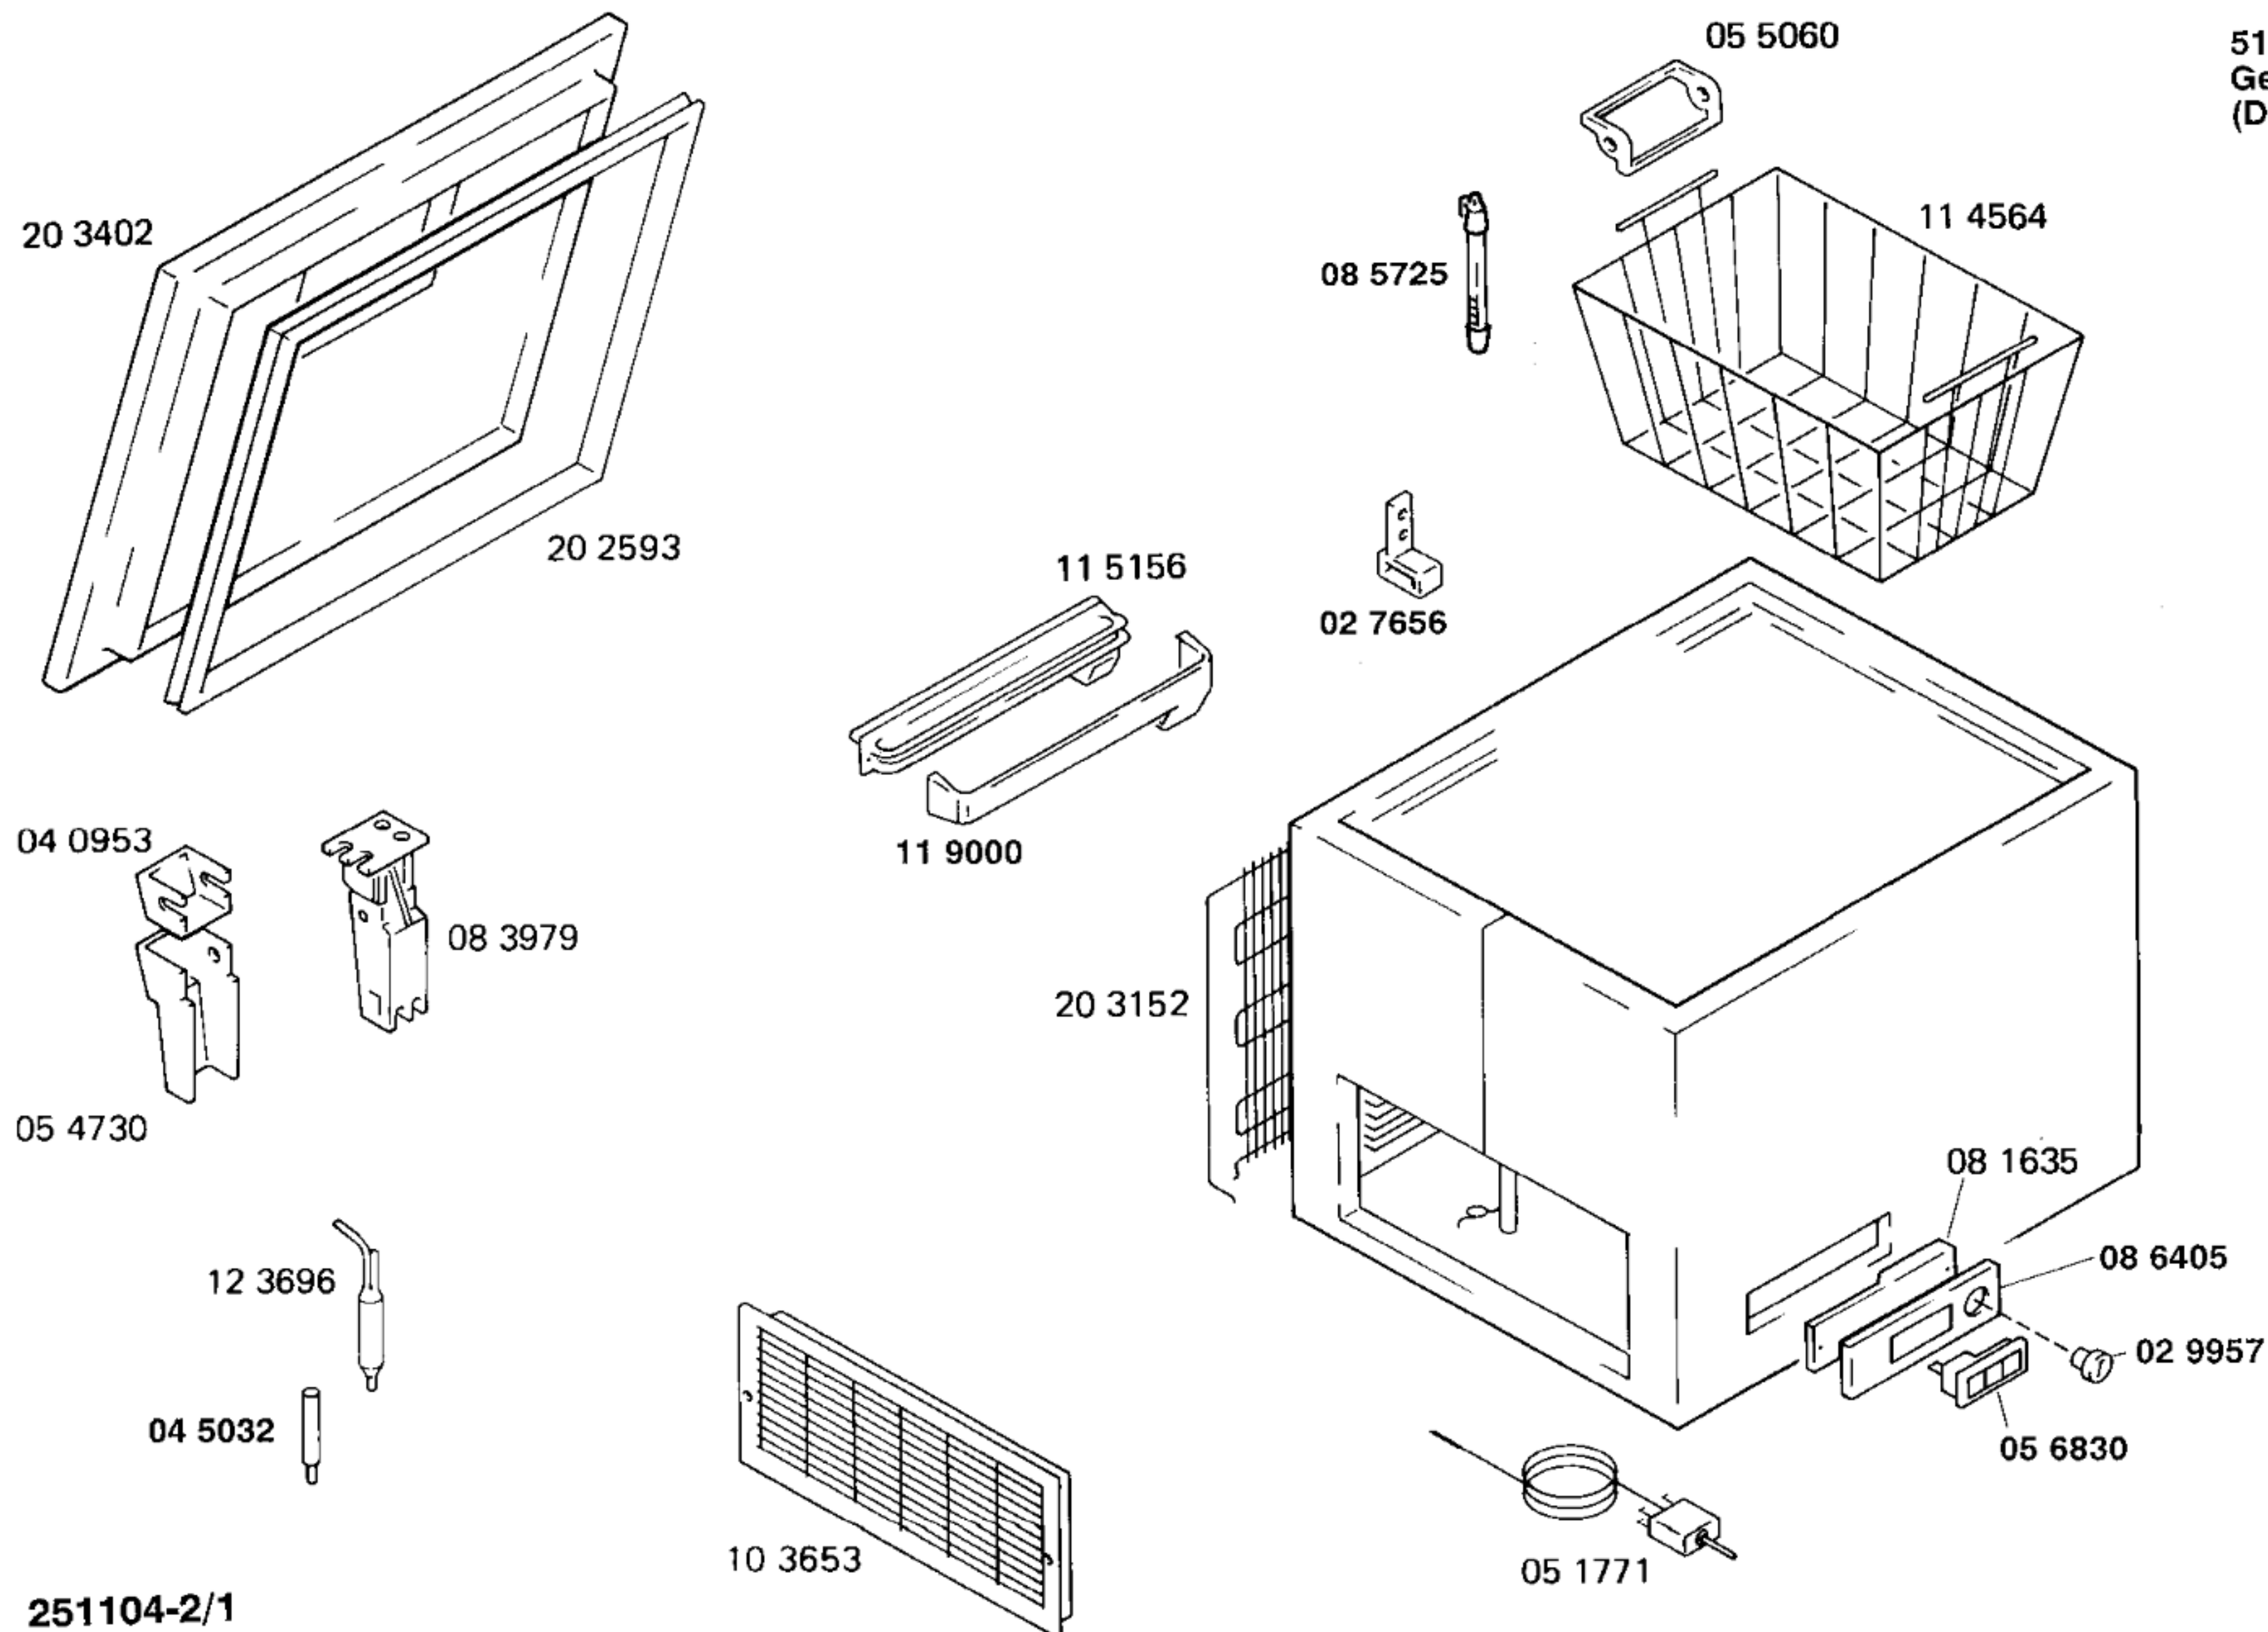

51 1910
Gebrauchsanweisung
(D,GB,F,I,NL,S,N,SF)

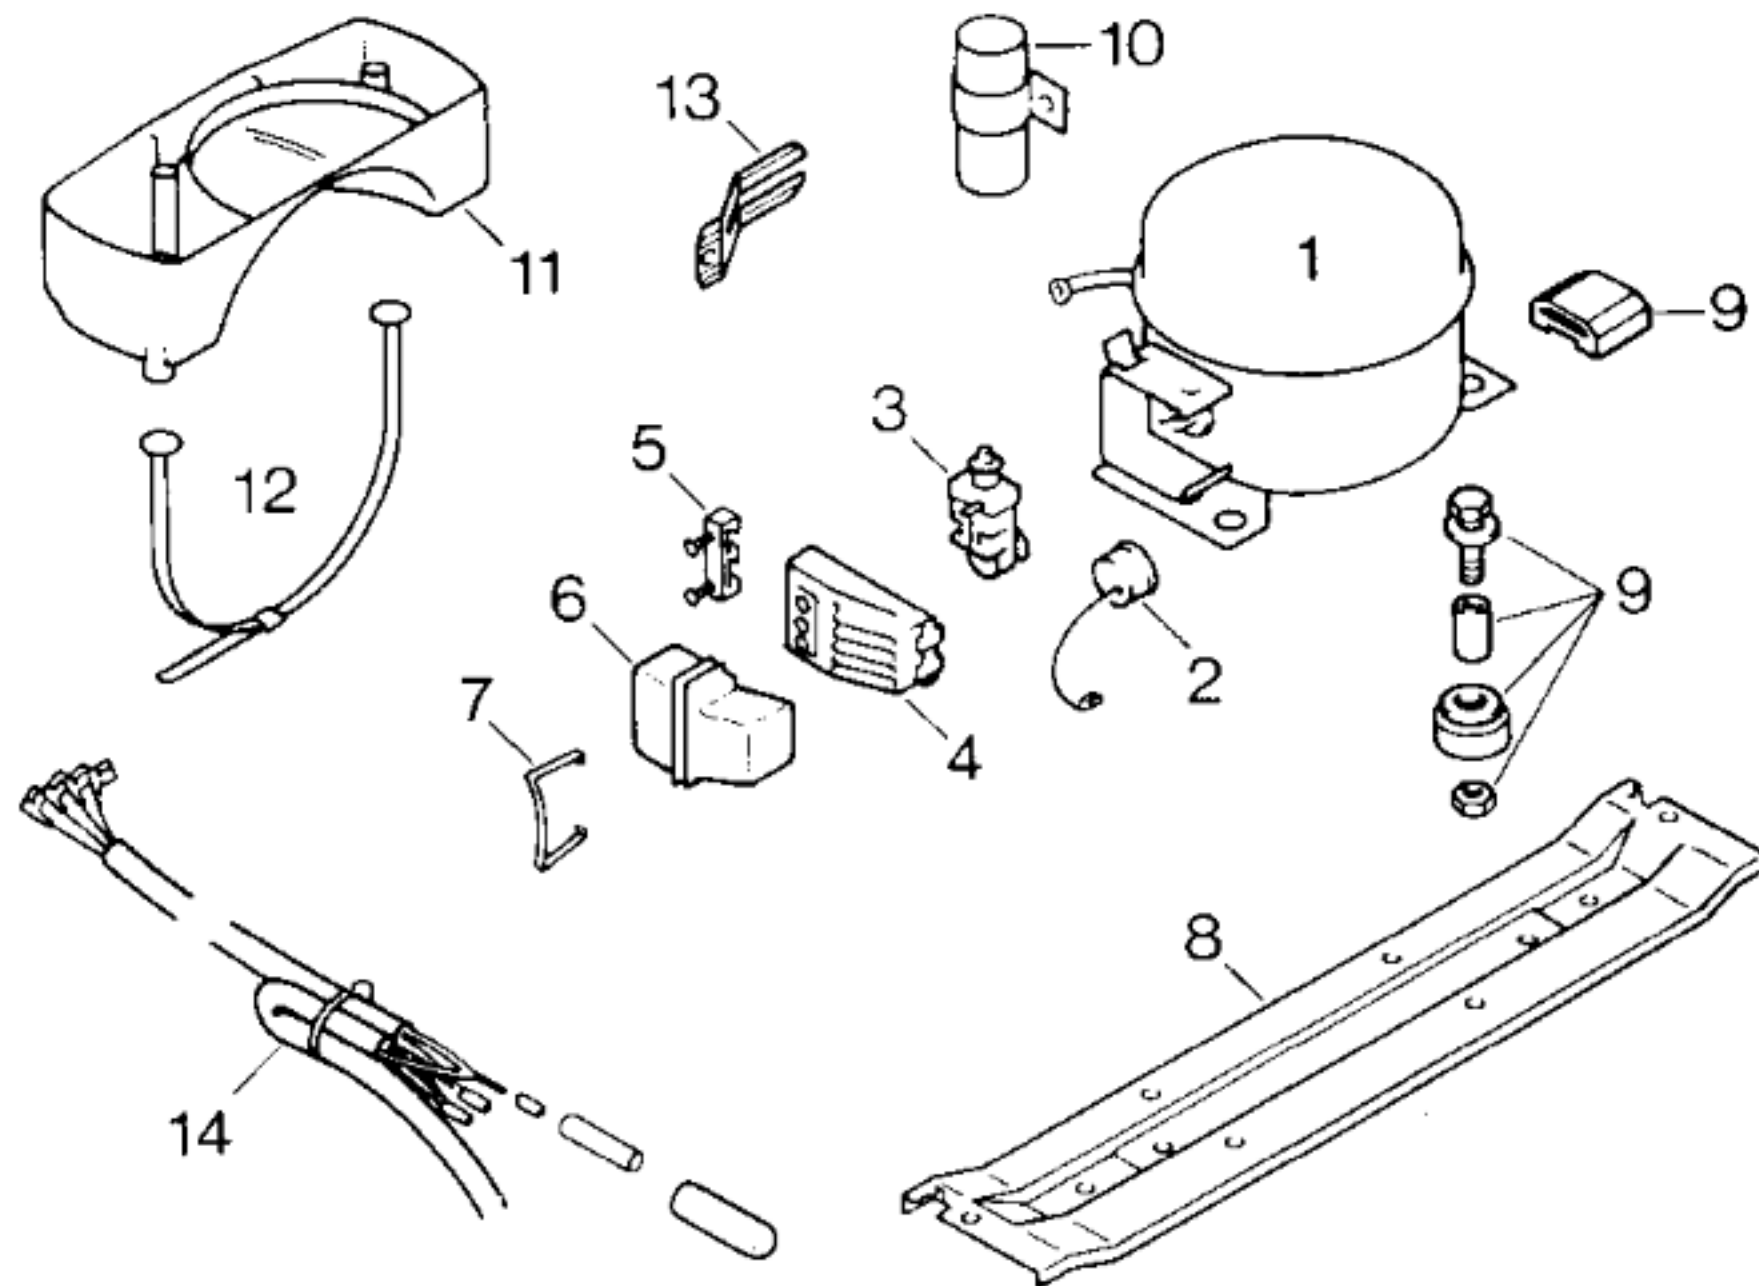

Pos.	Matsushita		
	FN 66 Q 11 G		
1	14 0362		
2			
3	02 7666		
4			
5			
6	05 6066		
7	02 6731		
8			
9	05 0166		
10			
11			
12			
13			
14			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Matsushita				
Typ/Type		FN 66 Q 11 G				
Förderleistung/Delivery/Débit	l/h	1184				
Anlaufstrom/Starting current/Cour. de démarrage	A	7,9				
Widerstand/Resistance/Résistance	Ha/main/prin.	11,8				
	Hi/aux	40,1				
Temp.-Regler/Thermostat		Ranco				
Typ/Type		K 54				
Reglerstellung/Position		kalt	warm			
Schaltwerte/Switching values/	„ein“ °C	- 24	- 18			
Valeurs de commutation	„aus“	- 31	- 24			
	(„abtauen“ od.) „alarm“	- 19	- 14			
Füllmenge/Fill.quantity/Charge	R12	g	175			
Anschlußwert/Conn.load/Puiss. connectée		W	150			
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance	Ω					
Leistung/Power/Puissance	W					
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance	Ω					
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance	Ω					
Spannung/Voltage/Tension	V					