




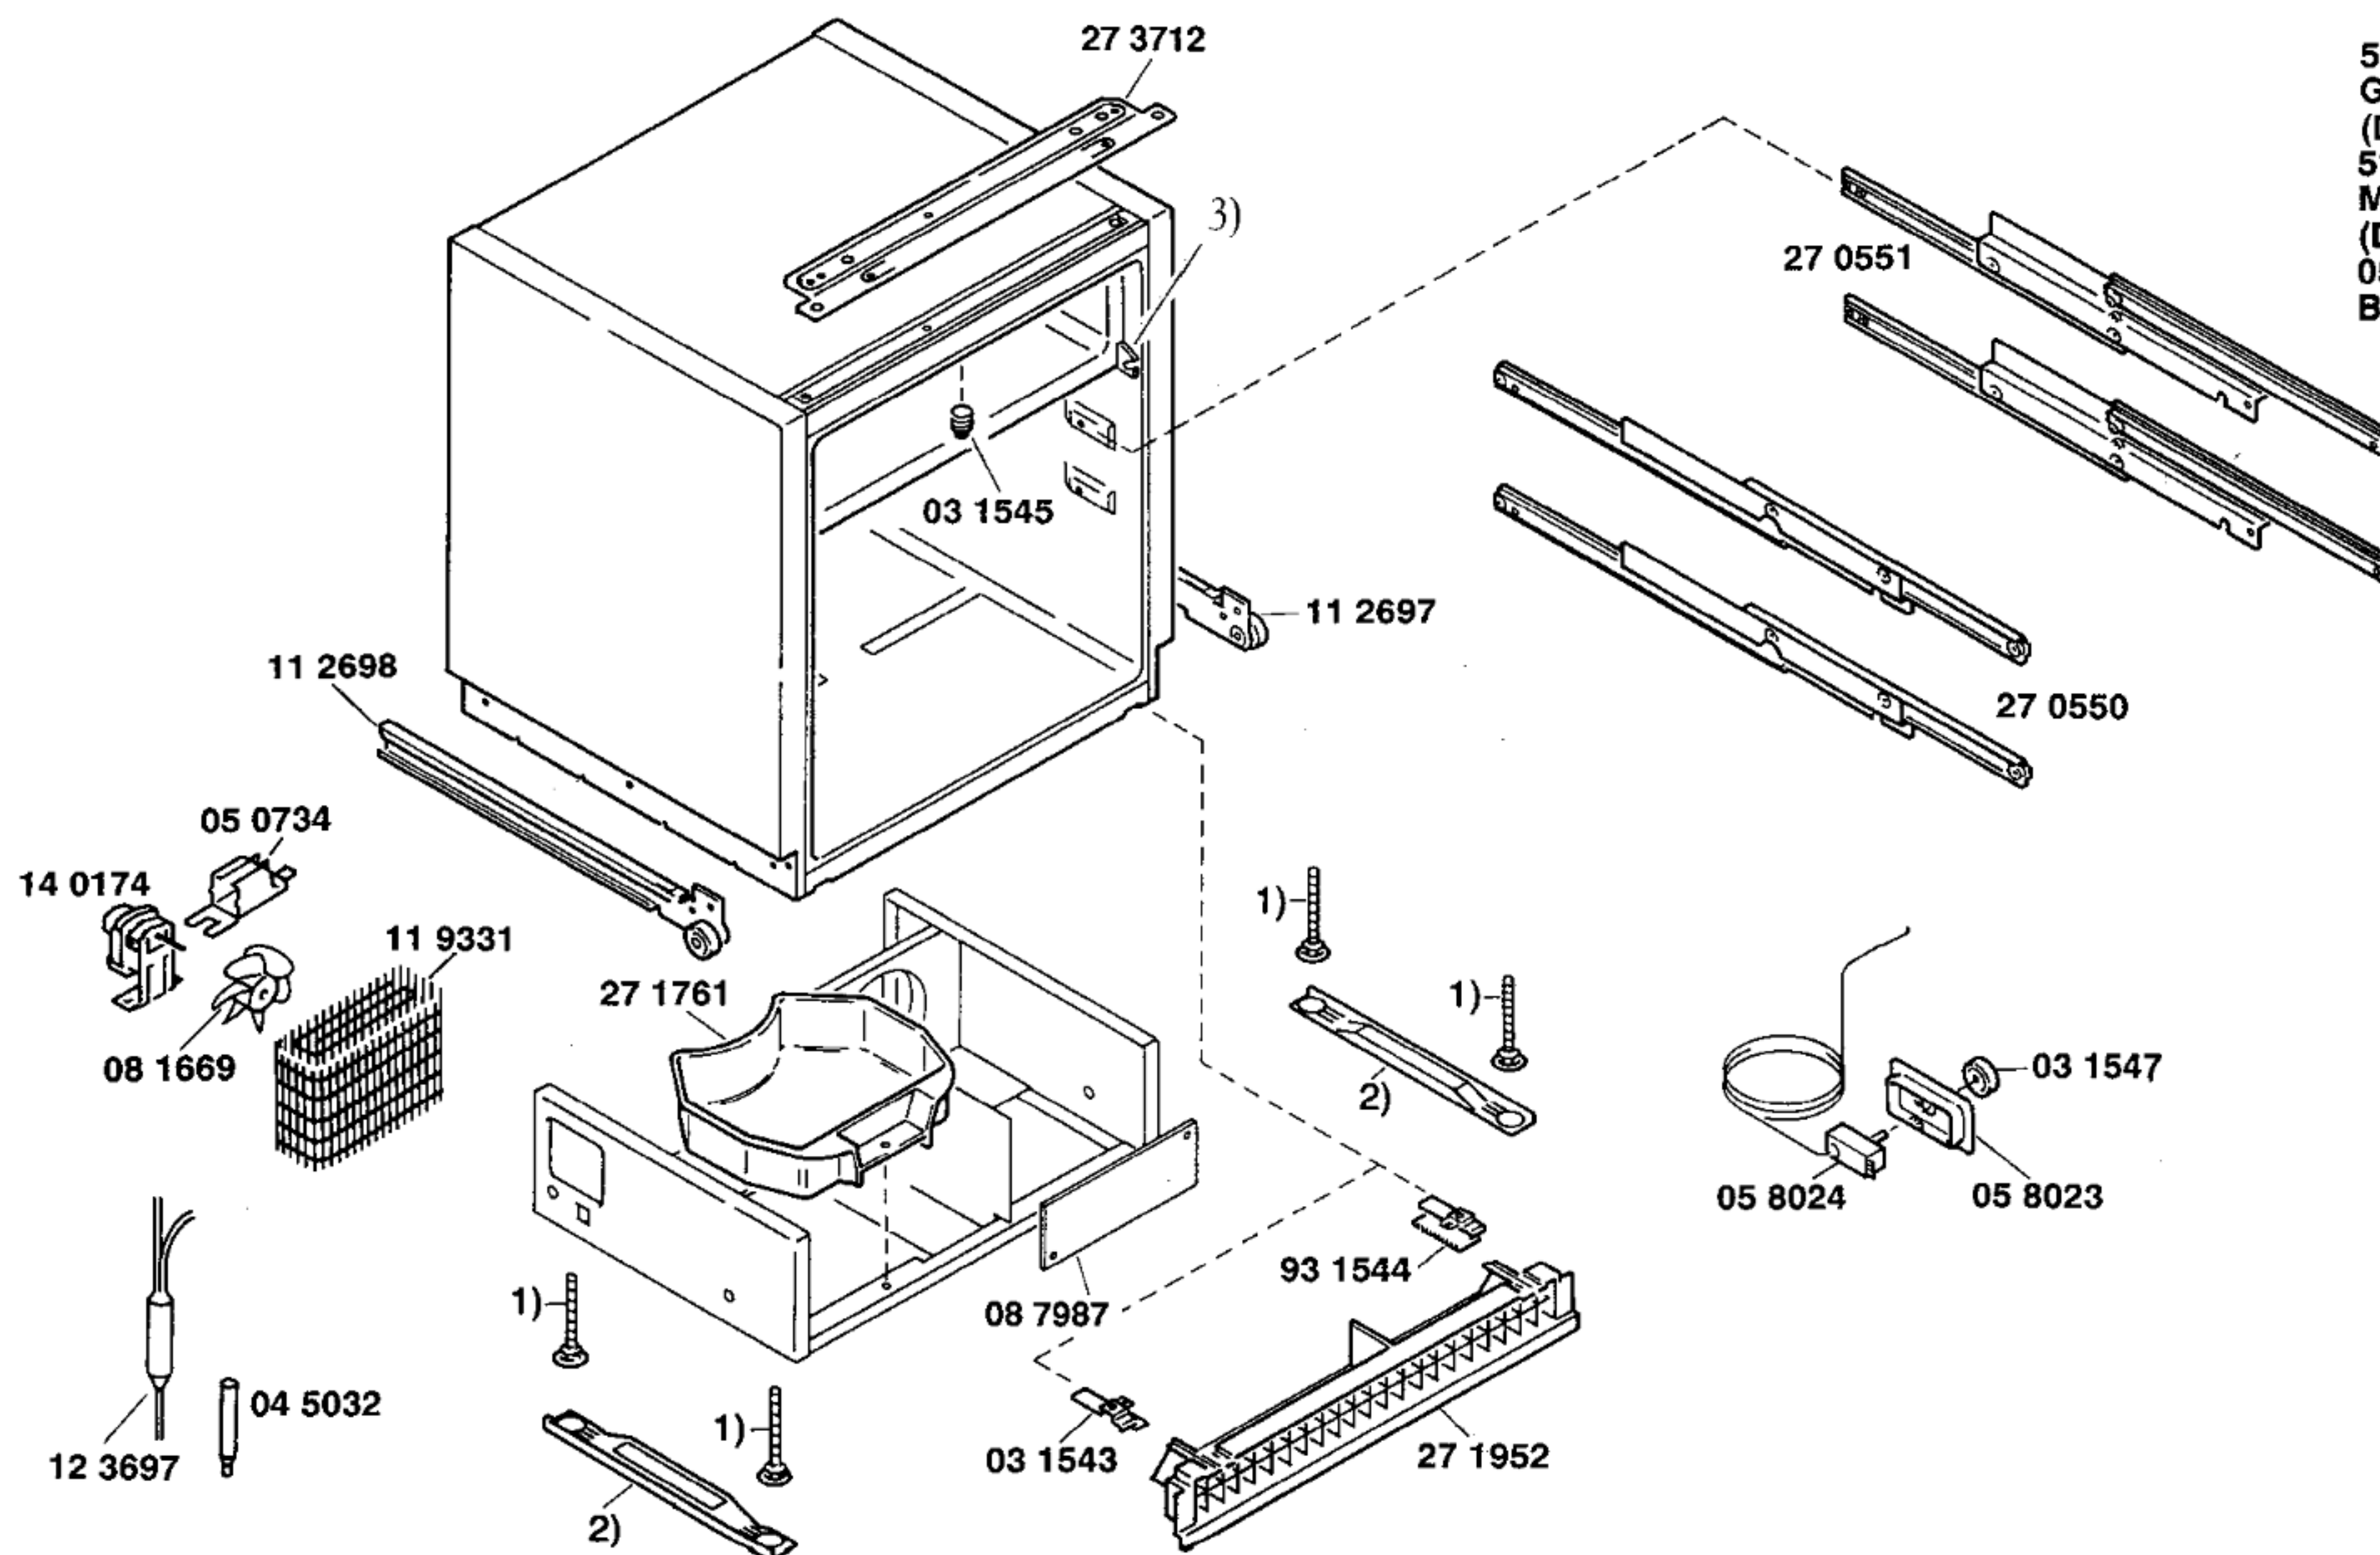

51 4403
Gebrauchsanweisung
(D,GB,F,I,NL,E)
51 4399
Montageanweisung
(D)
05 6188
Befestigungssatz

- 1) 05 4927
- 2) 11 2700
- 3) Rep-Satz
rechts
17 3349
links
17 3350

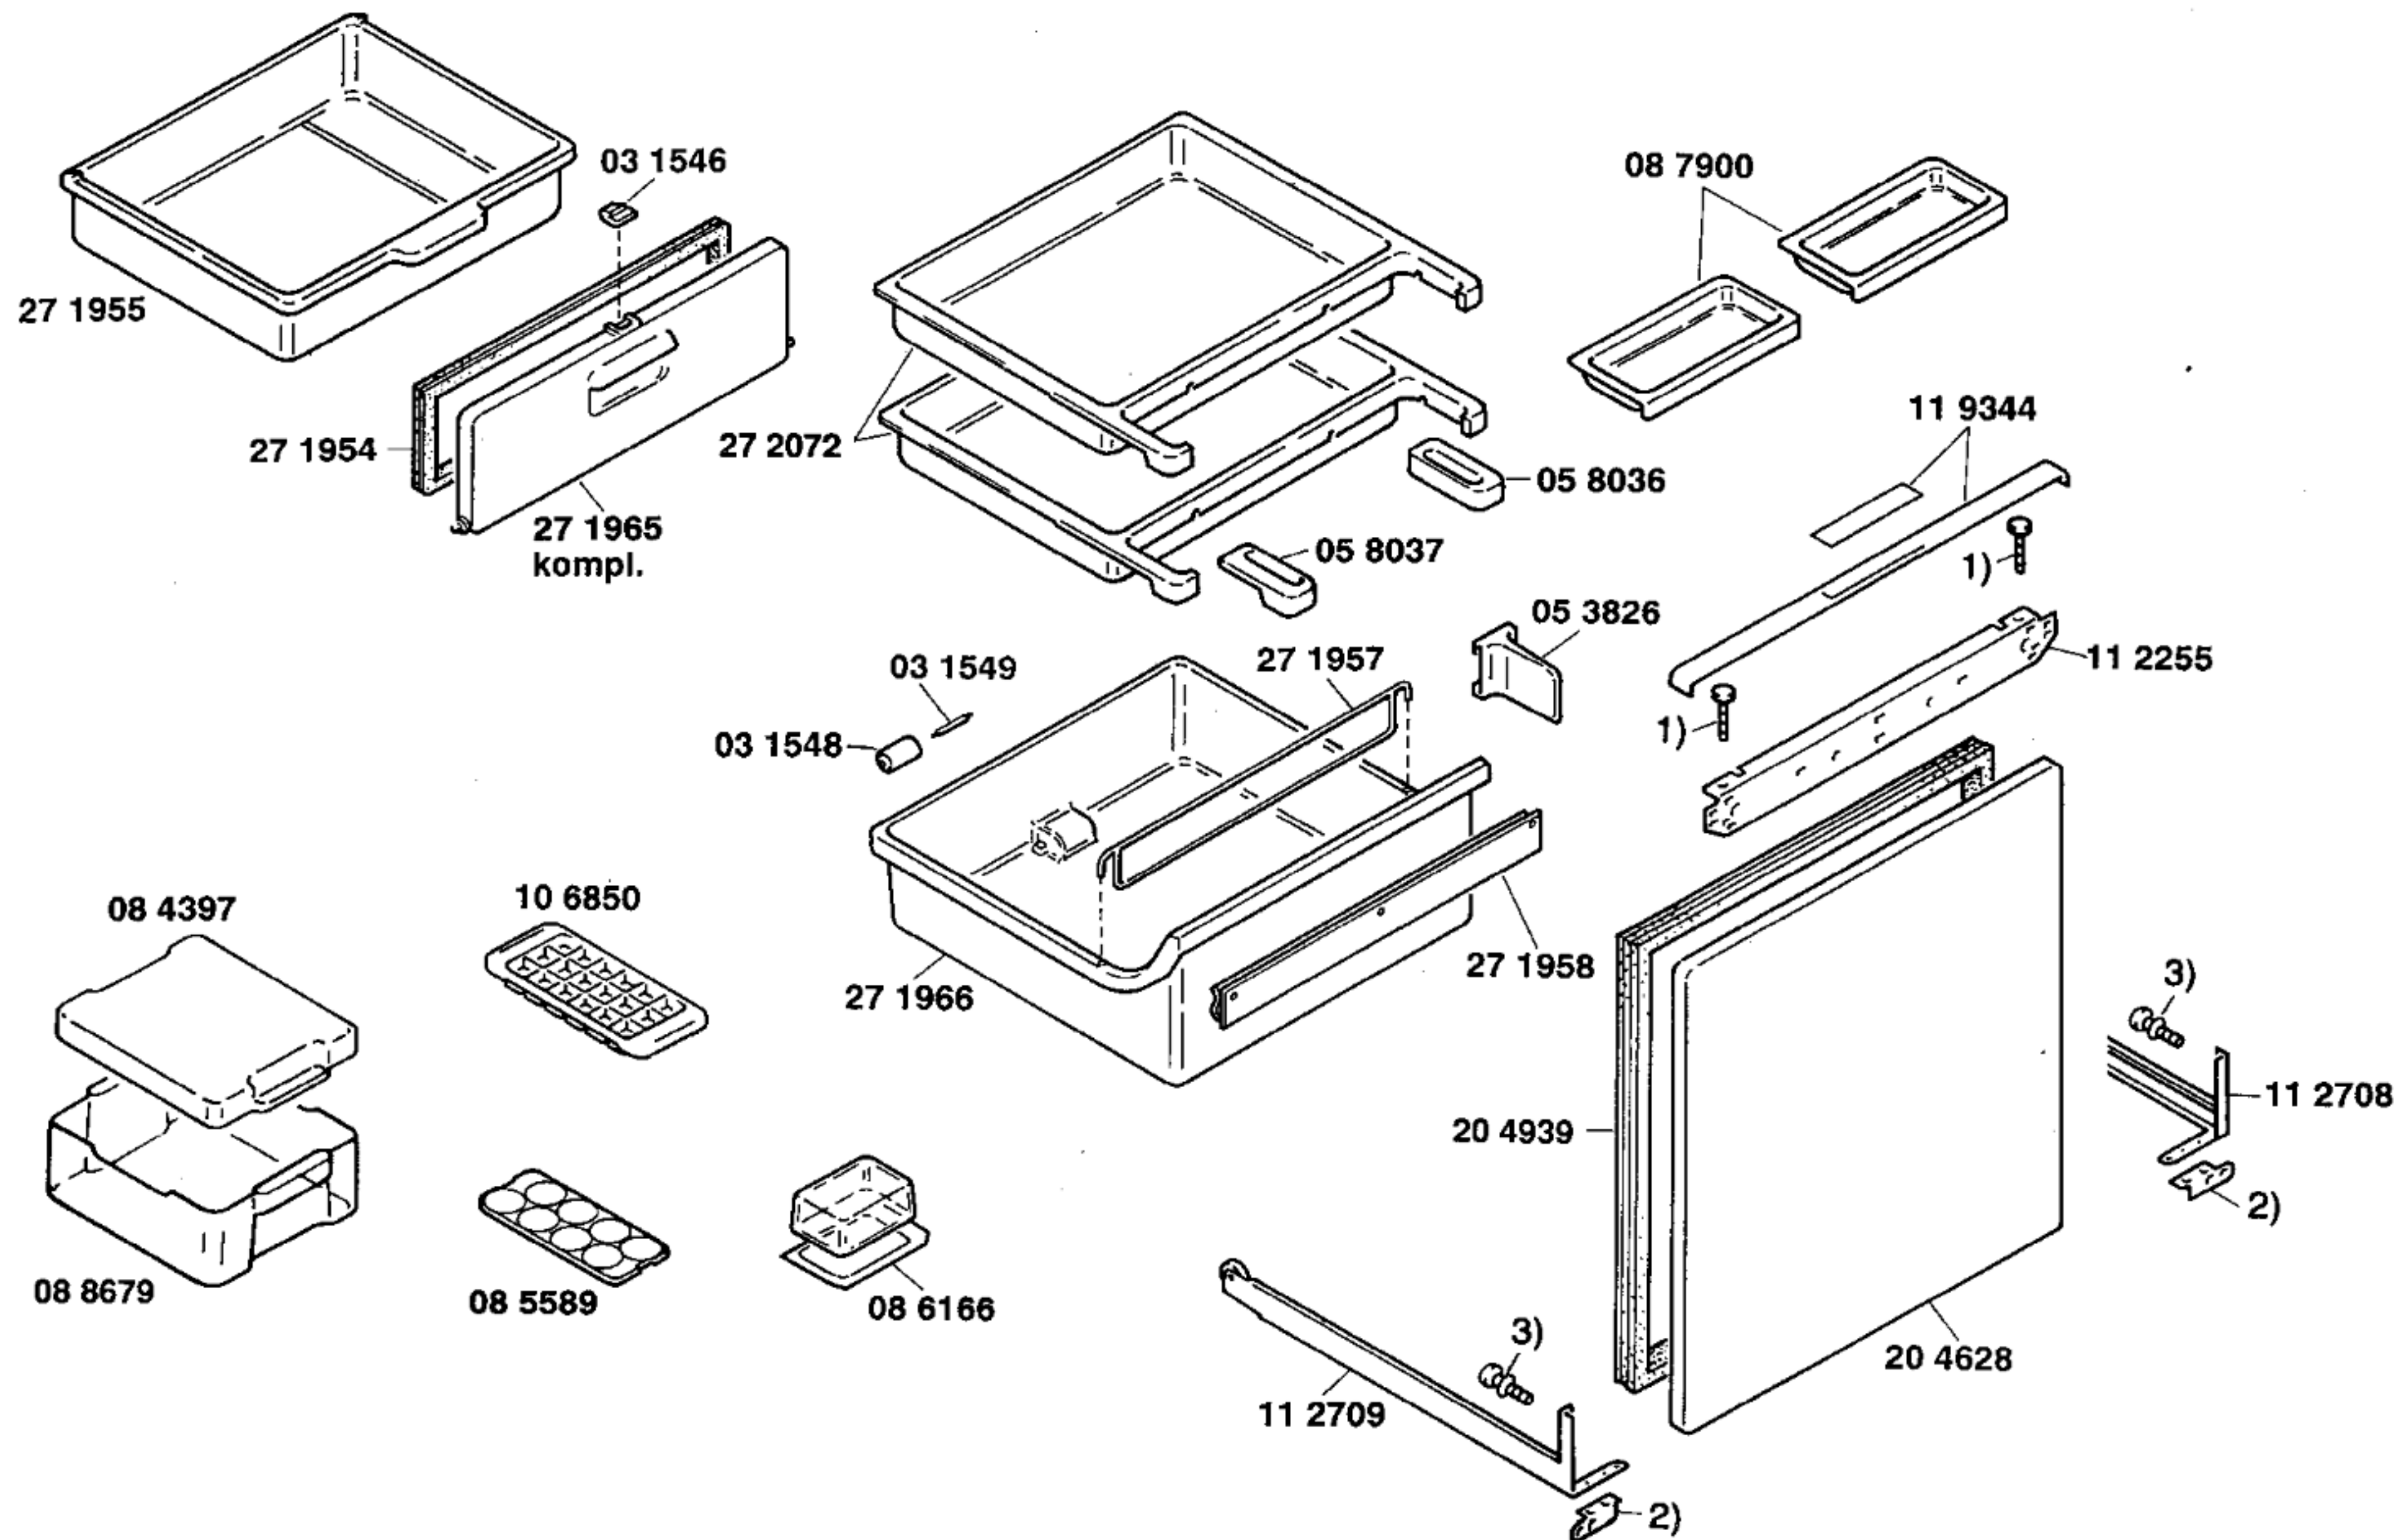

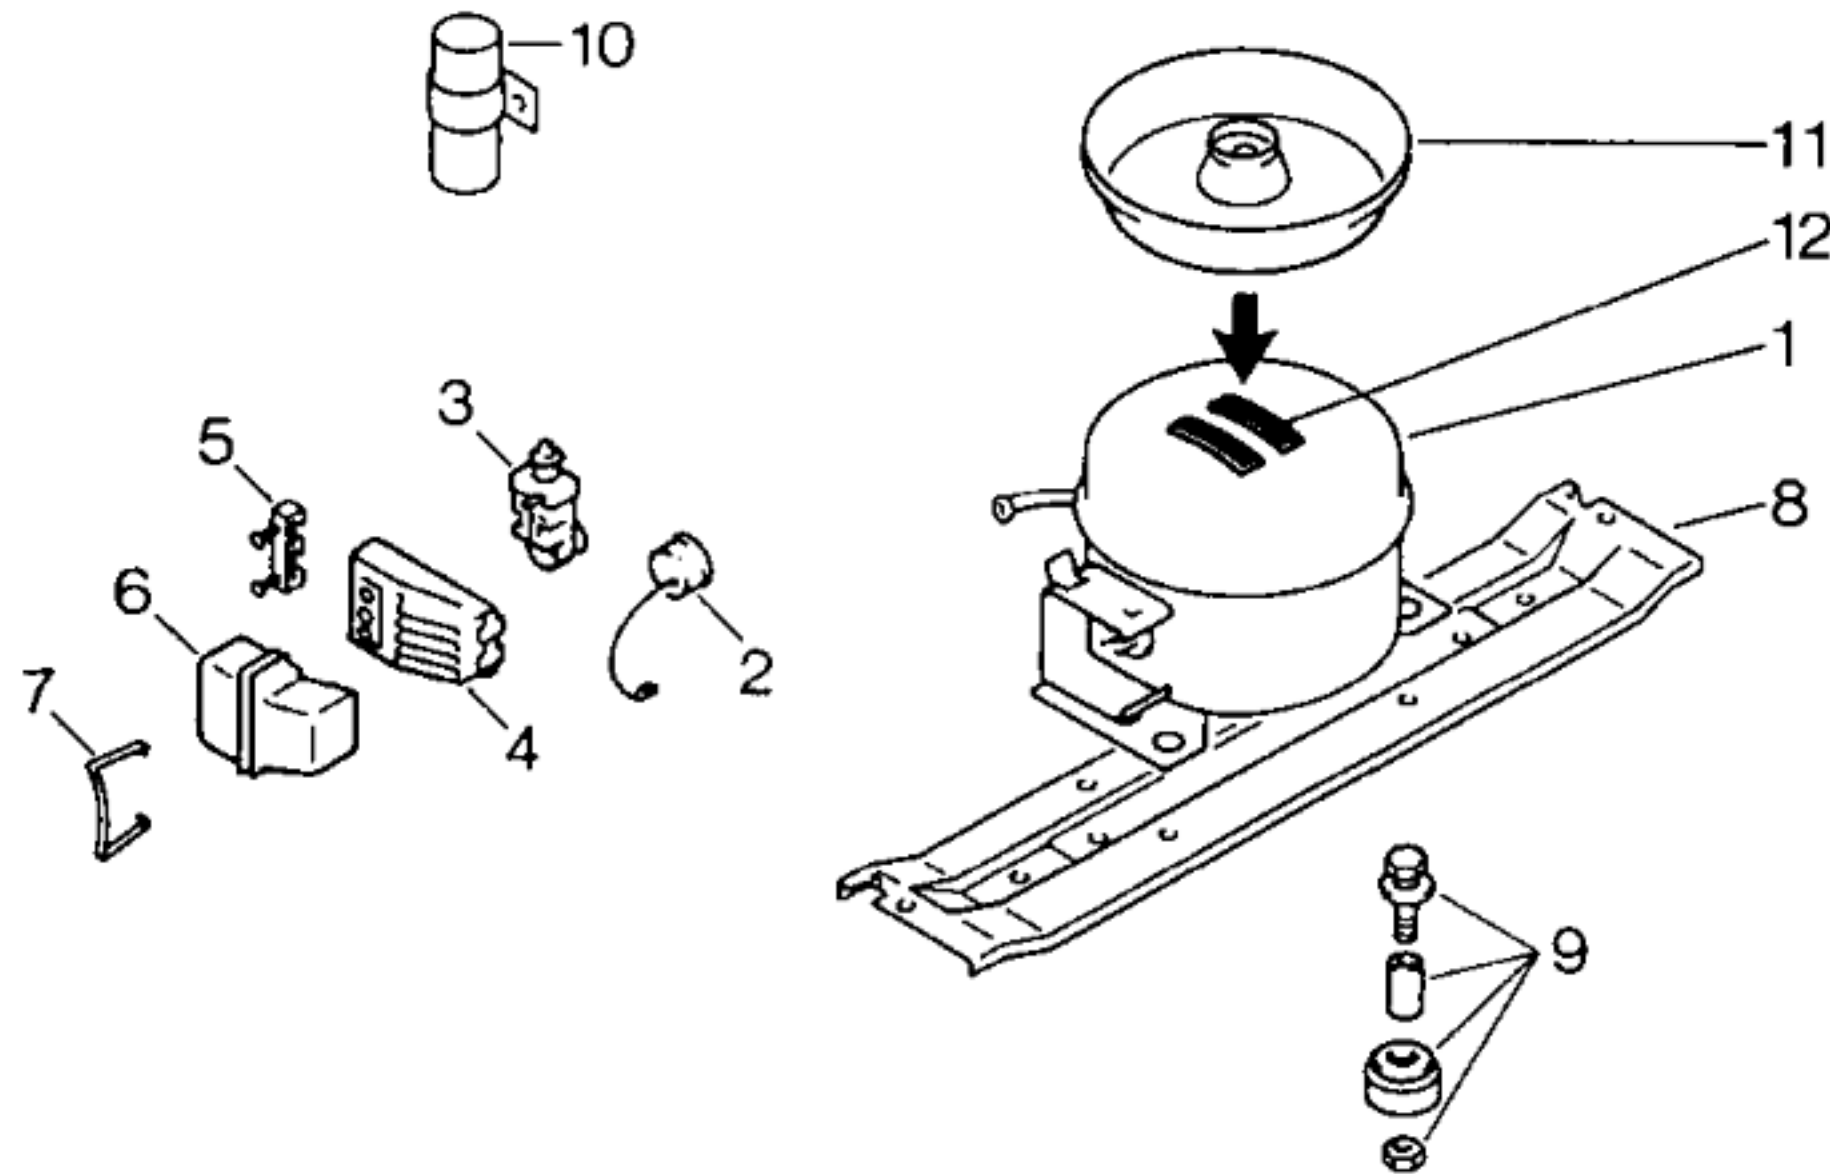

Pos.	EU1,CH1,SF1	EU2,CH2,SF2	
	Aspera	Matsushita	
	BP 1084 A	S075LKAA	
1	14 0345	14 0599	
2	02 7426		
3	02 7424	03 2034	
4			
5	02 7425		
6	05 5145	05 8457	
7			
8			
9	05 0166	05 0166	
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Aspera	Matsushita
Typ/Type		BP 1084 A	S075LCAA
Förderleistung/Delivery/Débit	l/h	774	641
Anlaufstrom/Starting current/Cour. de démarrage	A	4,15	5,7
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	24,4	24,4
	Hi/aux Ω	27,8	39,8
Temp.-Regler/Thermostat		WHF	
Typ/Type		TF 57 F1	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+ 5	+ 5
Valeurs de commutation	„aus“	- 30	- 14
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R12 g	120	
Anschlußwert/Conn.load/Puiss. connectée	W	110	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		