



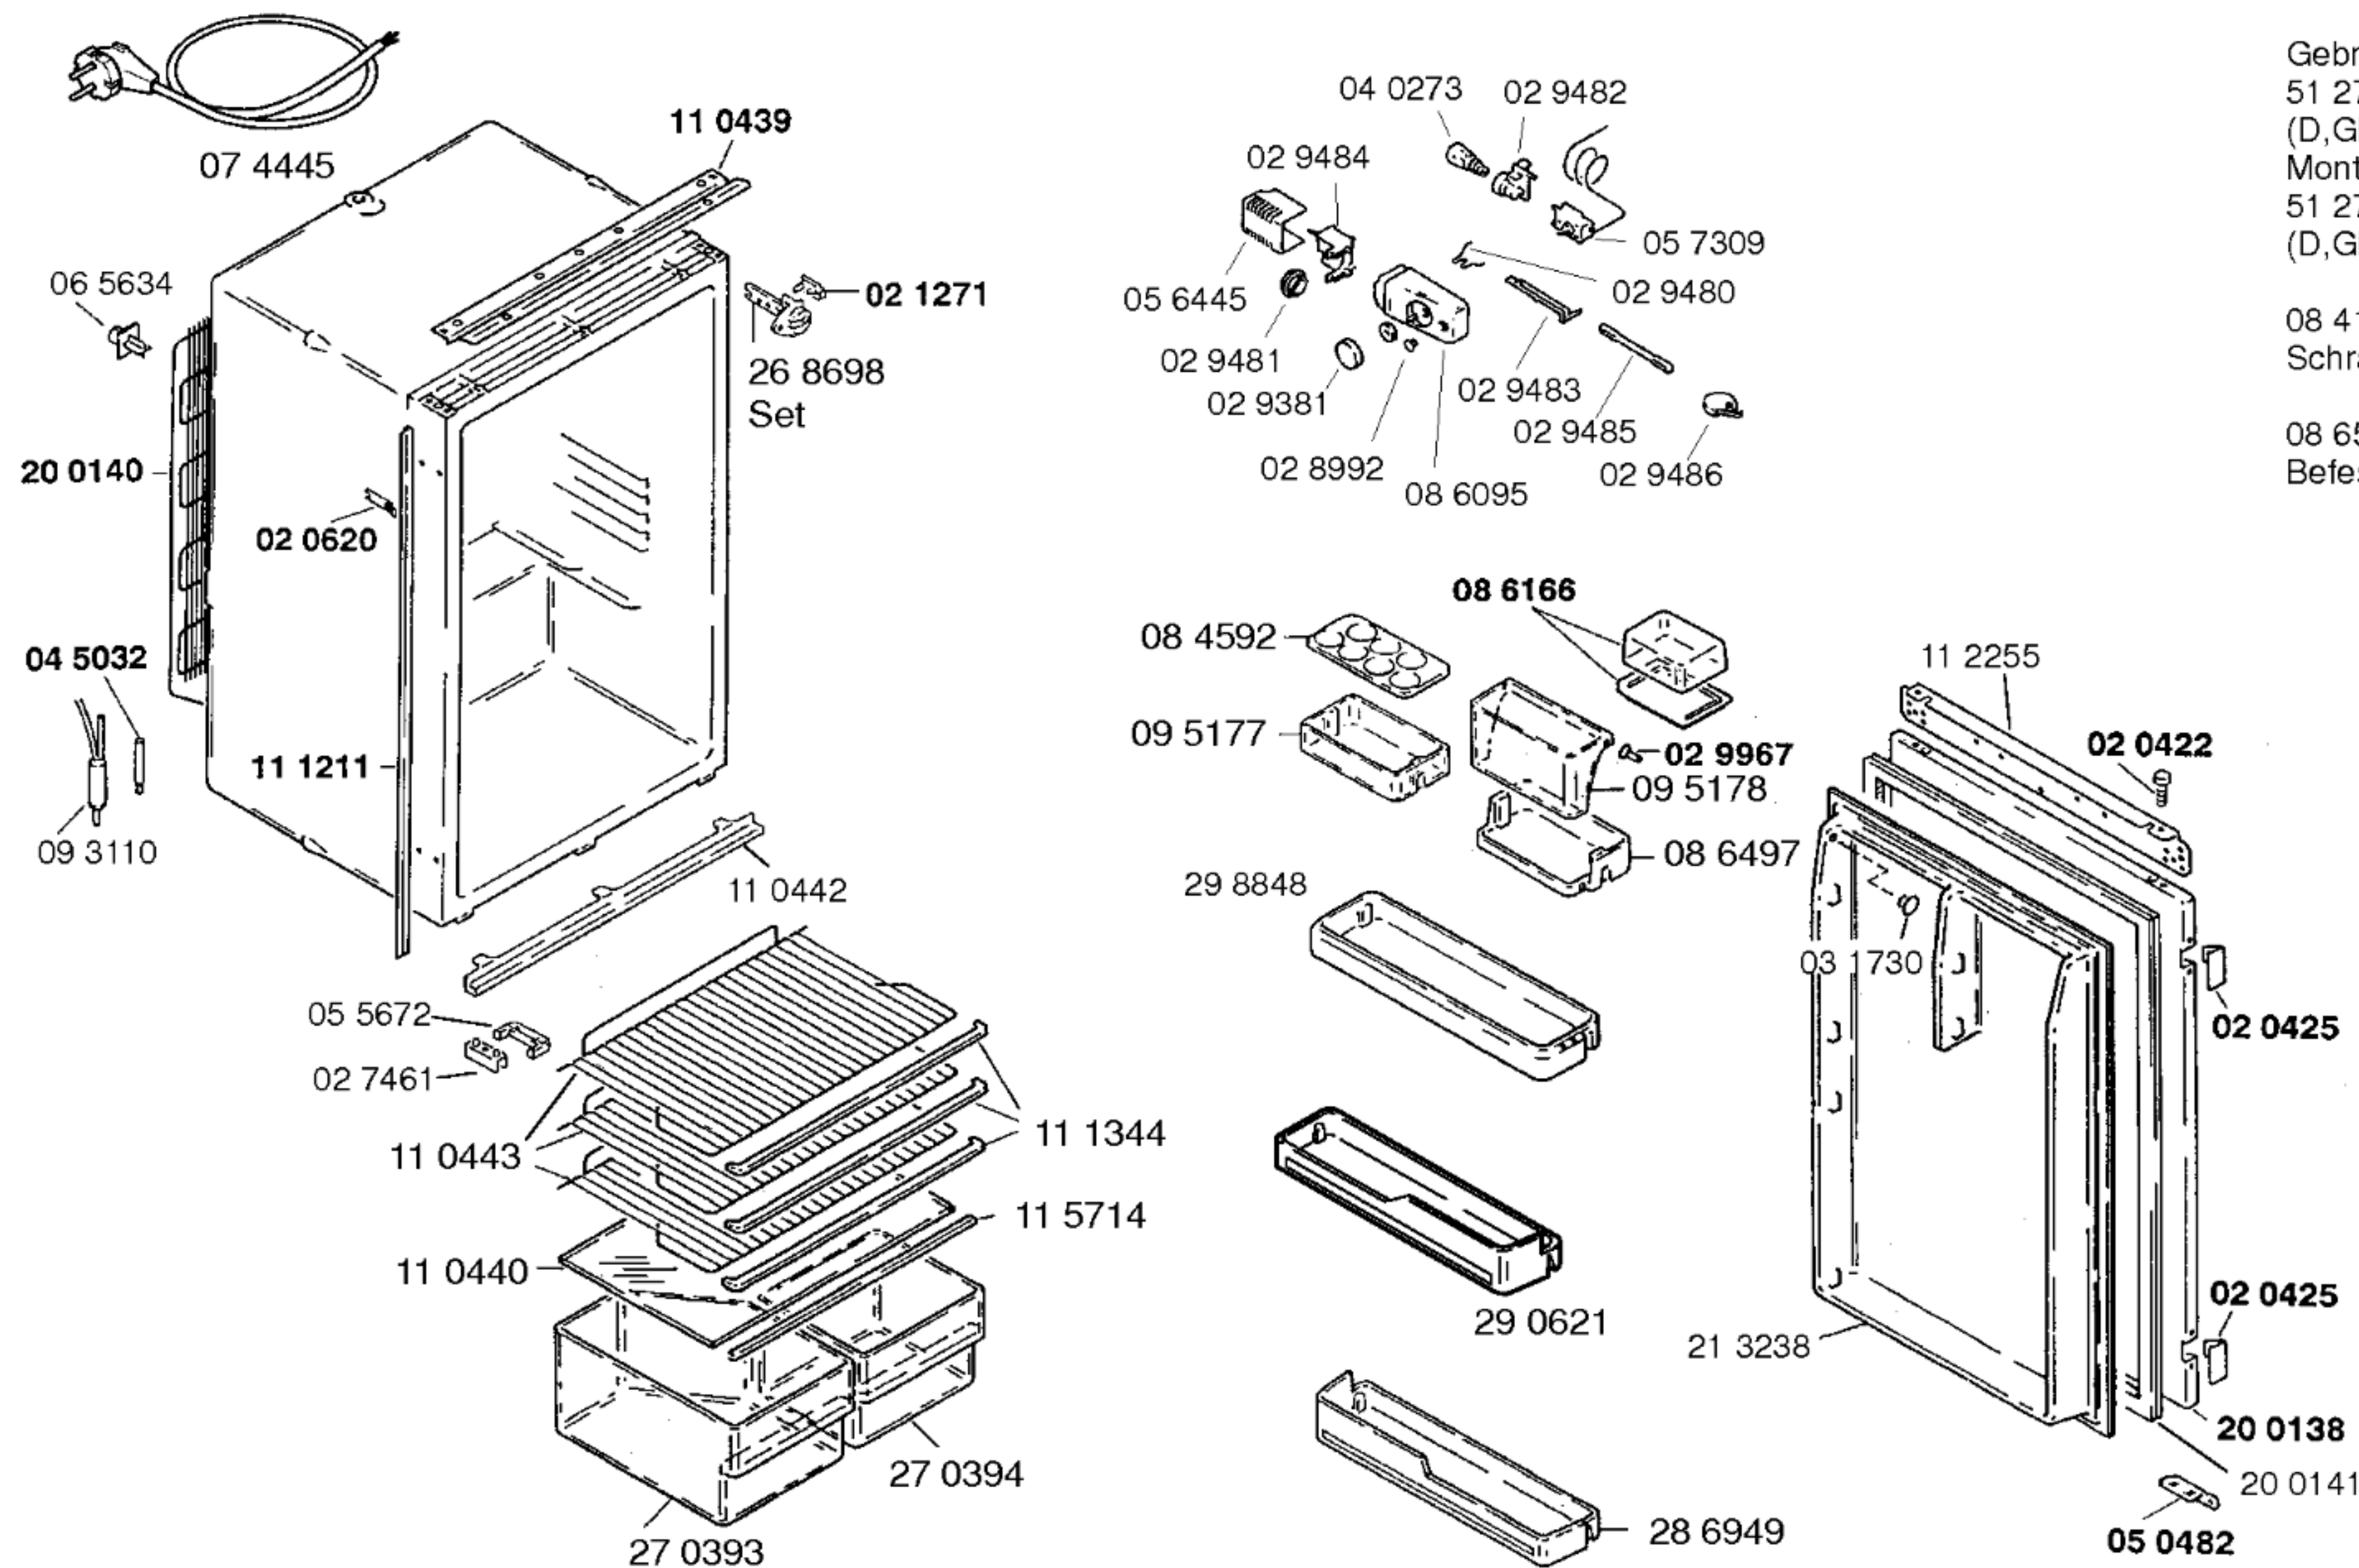

Gebrauchsanweisung
51 2718
(D,GB,F,I,NL,DK,N,S,SF,E)
Montageanweisung
51 2737
(D,GB,F,I,NL,DK,N,S,SF,E)

08 4136
Schraubensatz

08 6512
Befestigungssatz

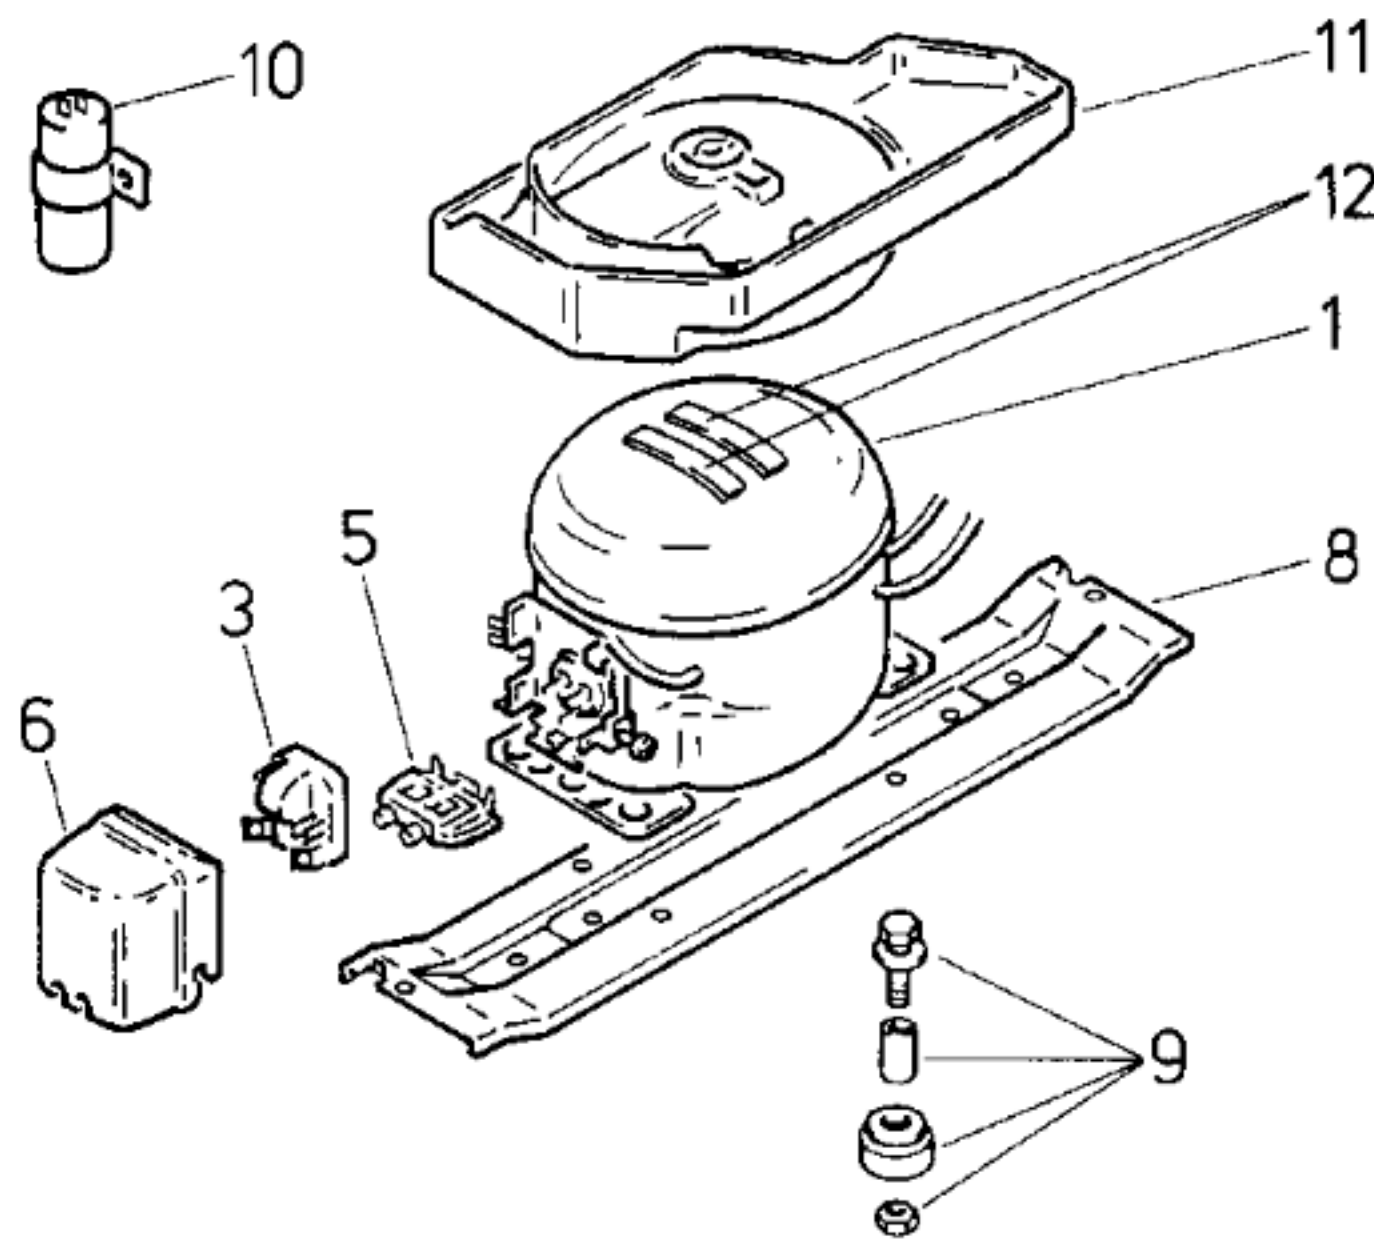

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		Matsushita
Typ/Type		TLES 6 K		SD 65 E
Förderleistung/Delivery/Débit	l/h	1026		1170
Anlaufstrom/Starting current/Cour de démarrage	A	4,0		
Widerstand/Resistance/Résistance	Ha/main/prin.	18,9		
	Hi/aux	15,3		
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF57F1		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“	+5	+5	
Valeurs de commutation	„aus“	-27	-12	
(„abtauen“ od.)	„alarm“			
Füllmenge/Fill.quantity/Charge	R600a	g	21	20
Anschlußwert/Conn.load/Puiss. connectée	W			
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

Pos.	V01	V02	
	Danfoss	Matsushita	
	TLES 6 K	SD 65 E	
1	14 1306	14 1316	
2			
3	15 1055	03 2035	
4			
5	15 0760		
6	15 1072	05 8458	
7			
8	27 8207	27 1375	
9	05 0166	05 0166	
10			
11	08 4744	08 8893	
12	05 6008	05 6008	