



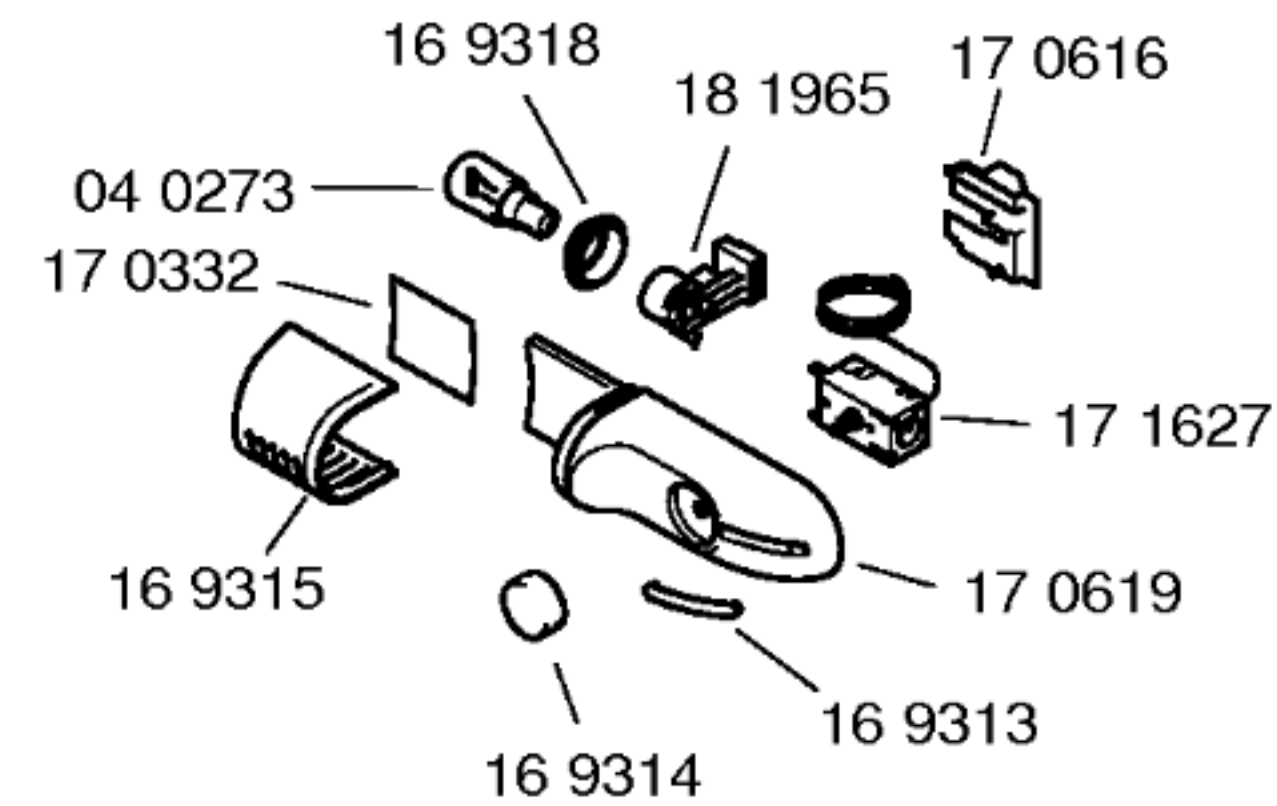


07 4445

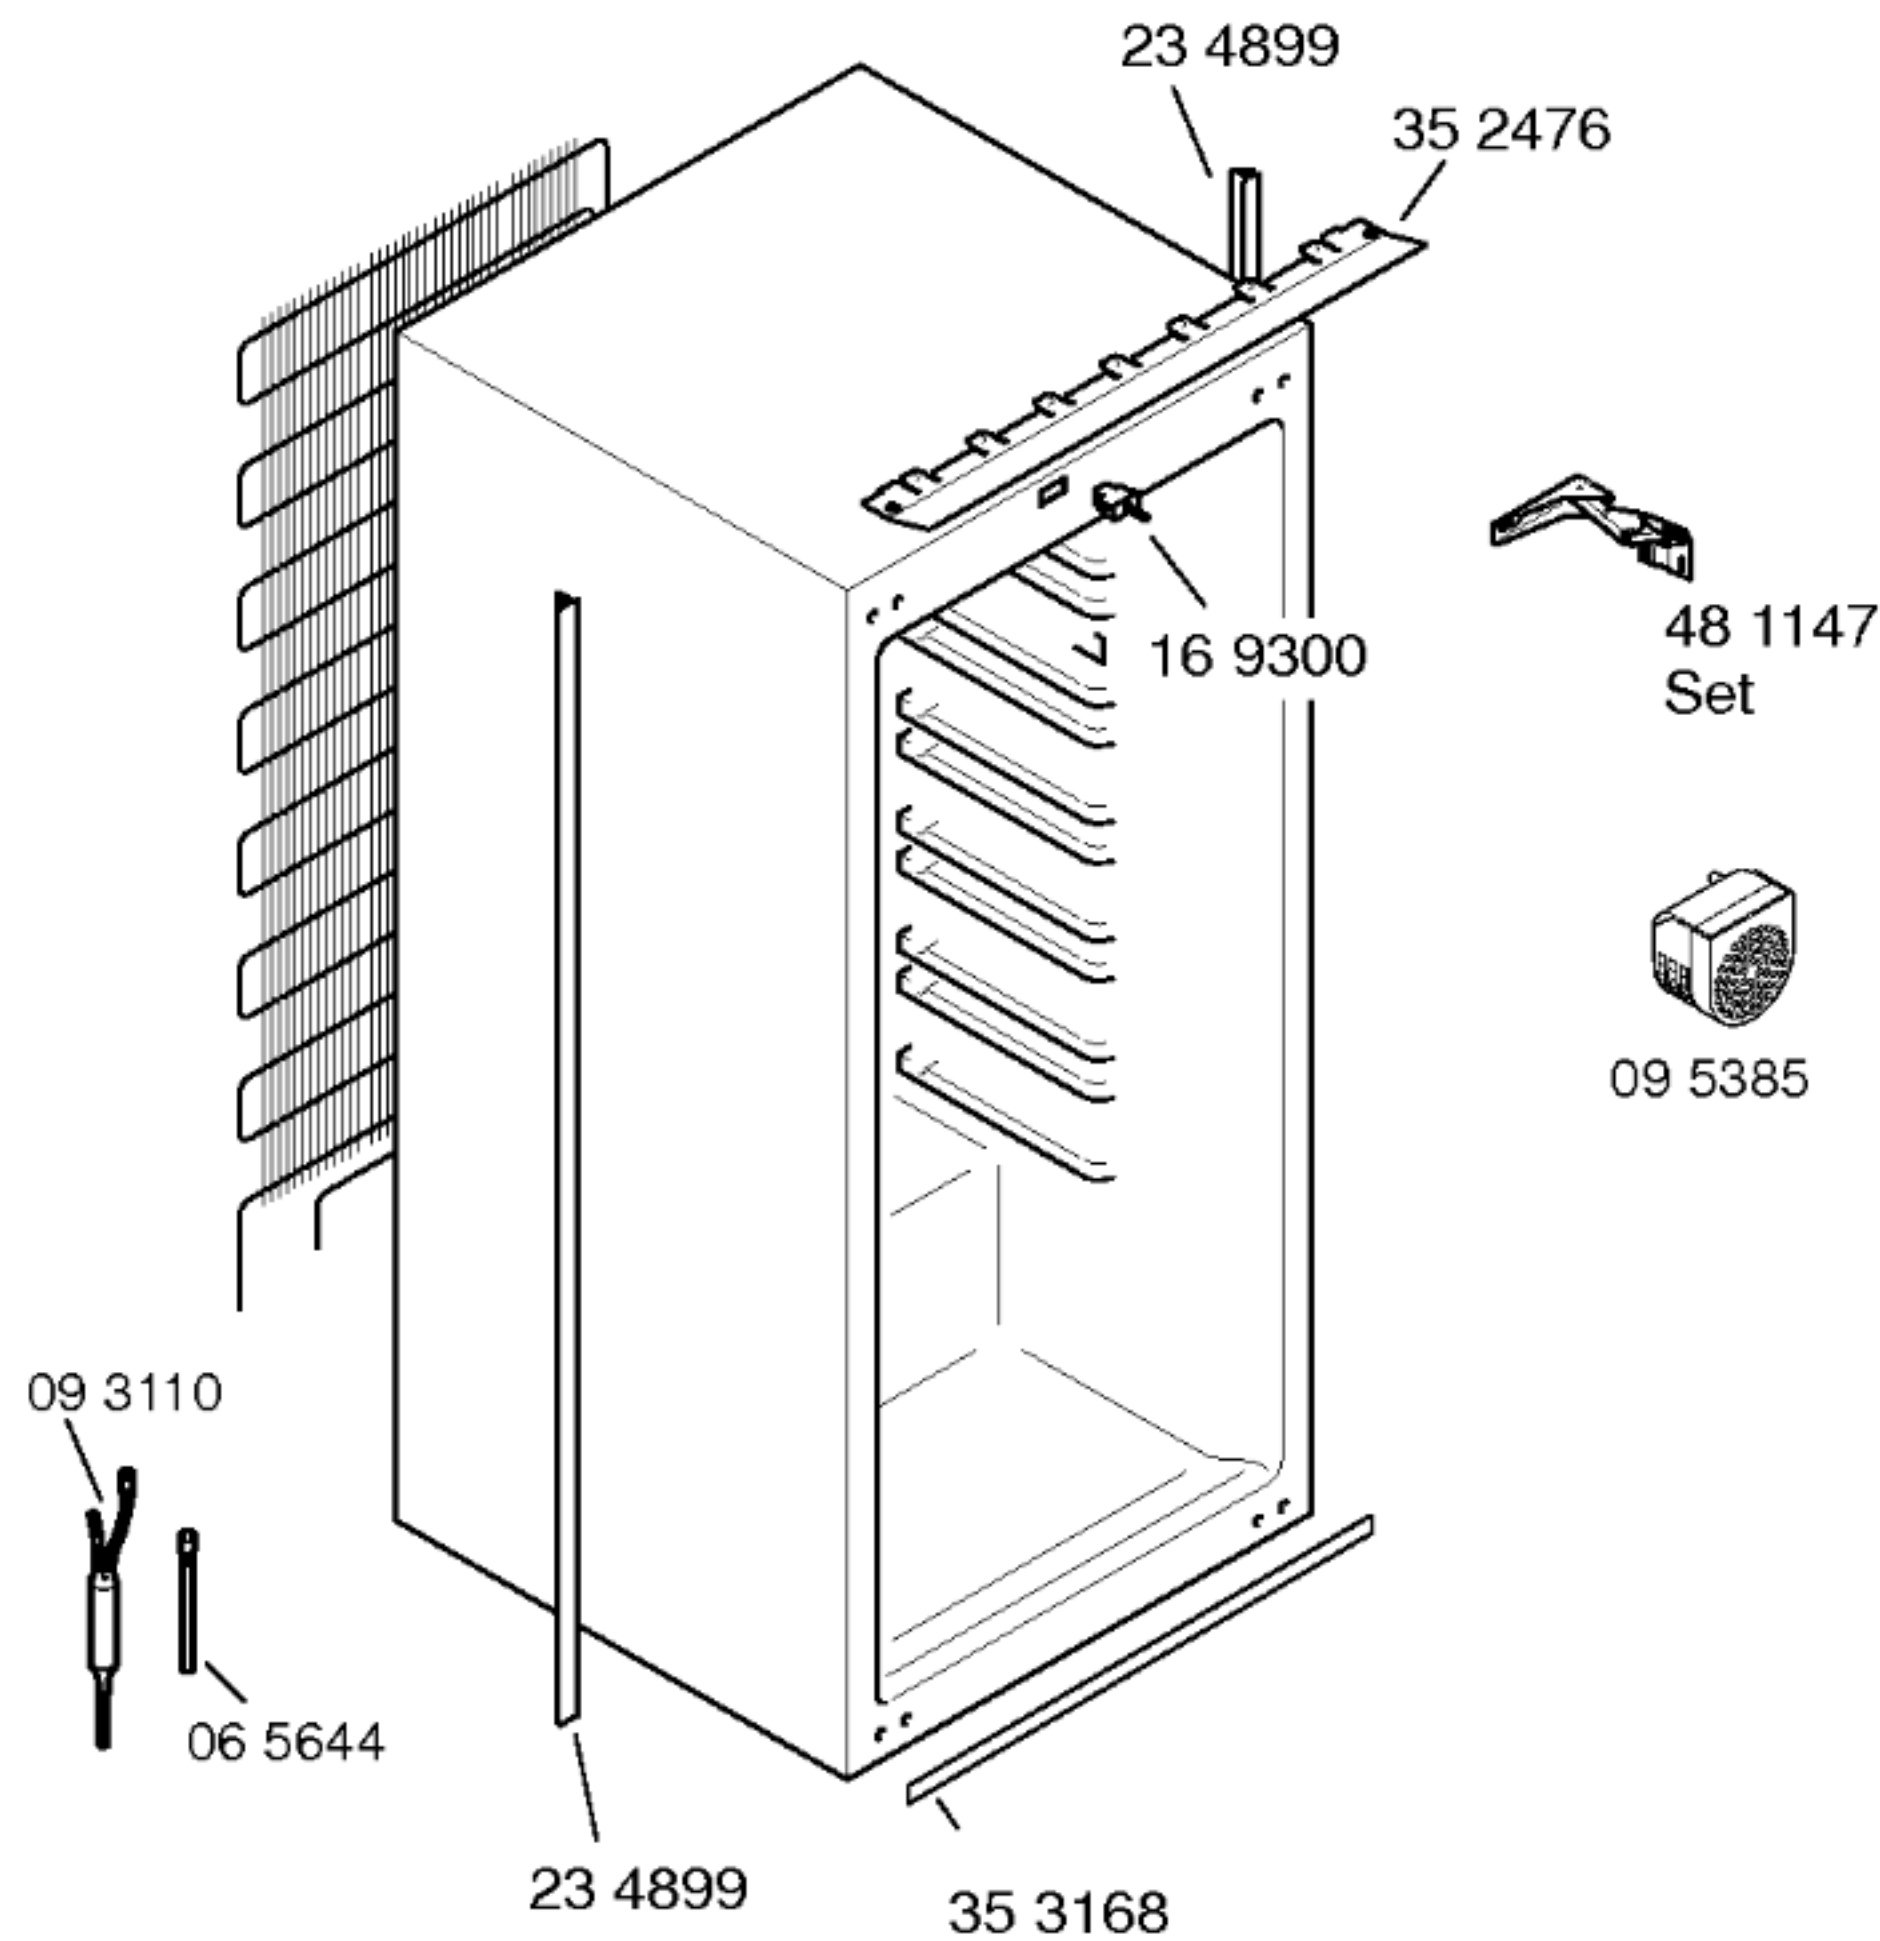


Gebrauchsanweisung
52 7968
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5163

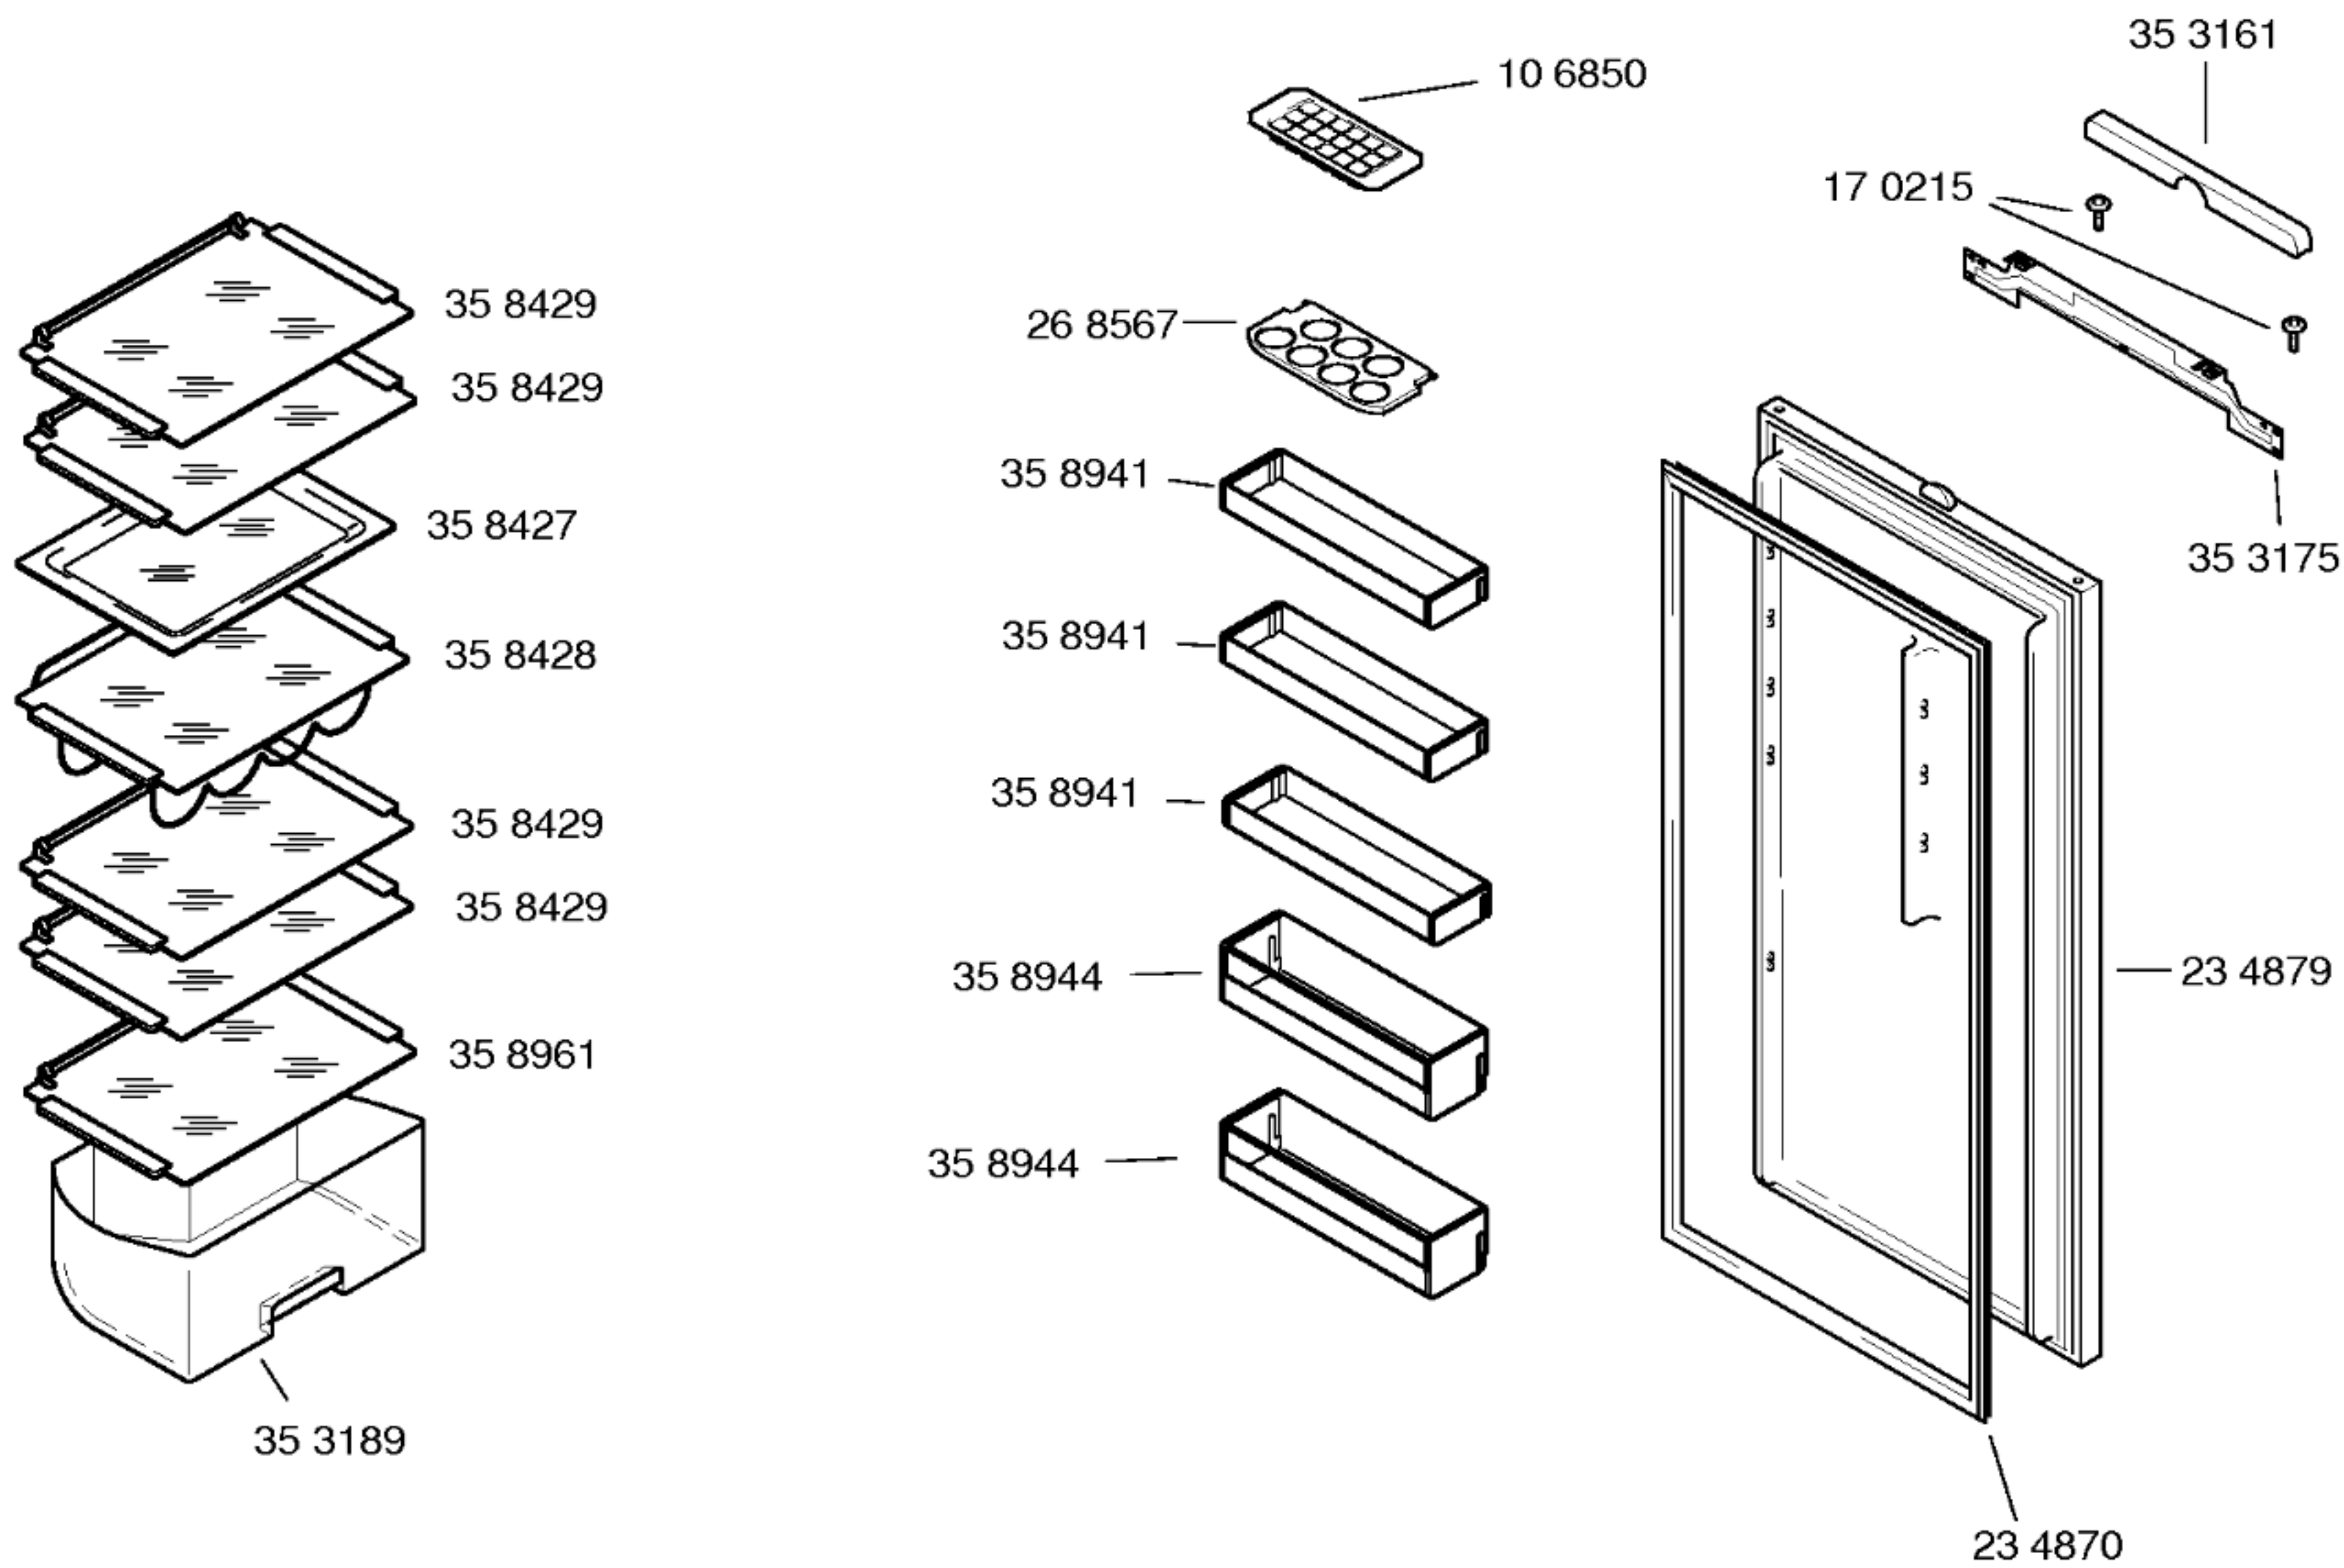

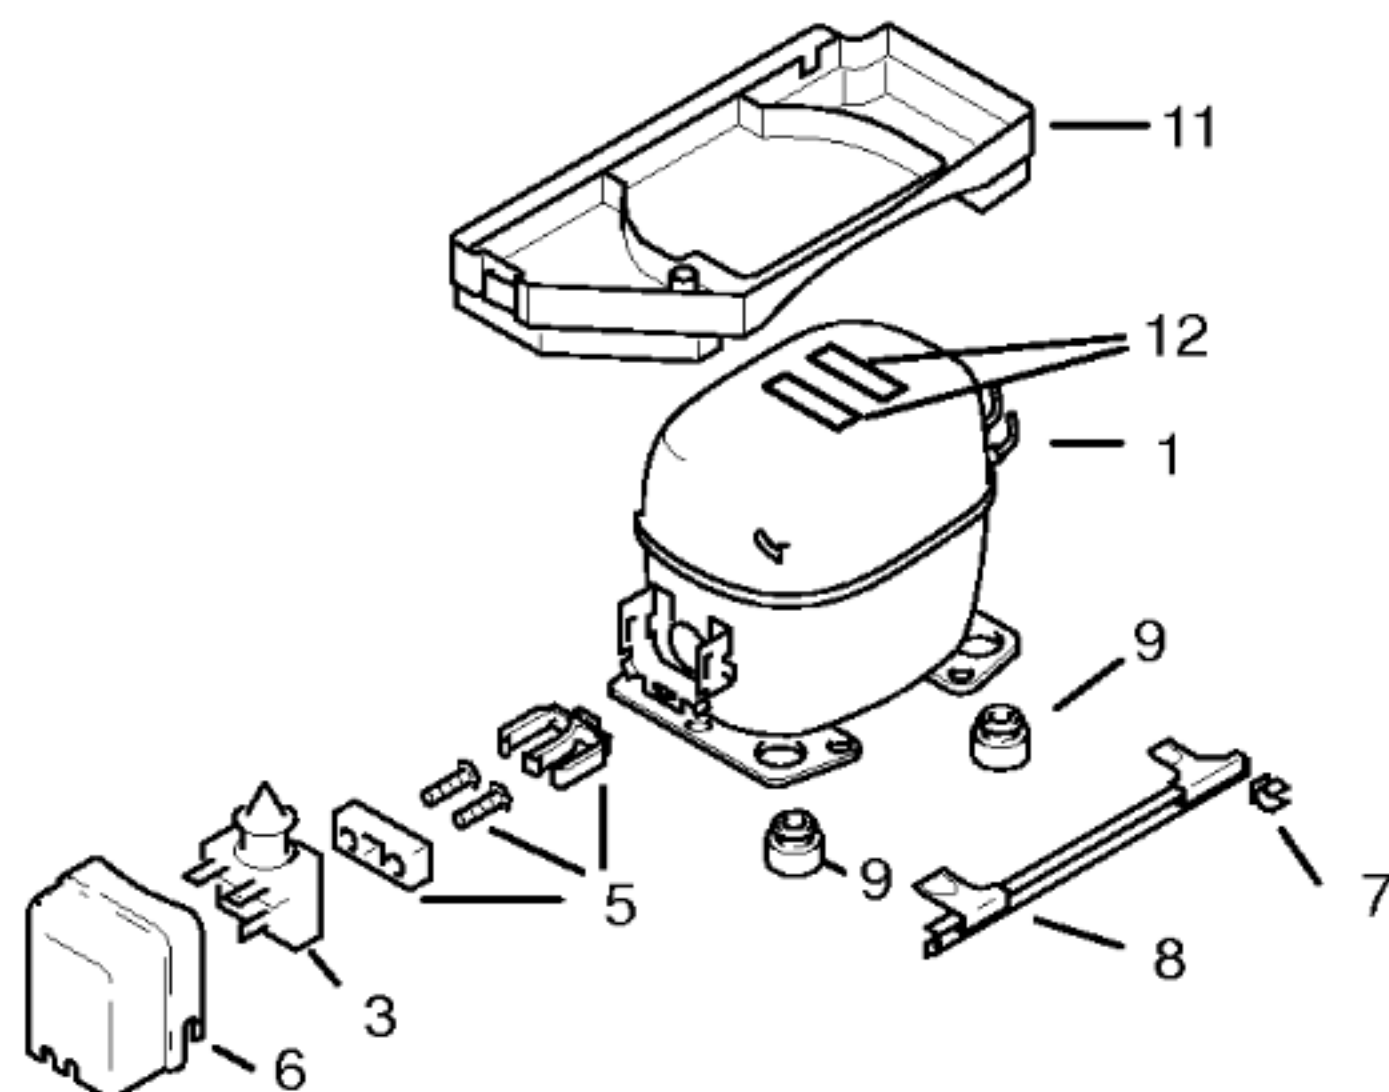

Pos.	V01,V03	V02	
	Danfoss TLY4KK2	Aspera BPK1046Y	
1	14 2057	14 2099	
2			
3	15 1055	18 0752	
4			
5	15 0760	17 0882	
6	15 1072	17 0881	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	050166	050166	
10			
11	26 4878	36 5099	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss	Aspera	
Typ/Type		TLY4KK2	BPK1046Y	
Förderleistung/Delivery/Débit		l/h	695	612
Anlaufstrom/Starting current/Cour de démarrage		A	5,9	3,2
Widerstand/Resistance/Résistance Ha/main/prin		Ω	49,0	60,9
Hi/aux		Ω	15,0	44,9
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K59		
Regelstellung/Position		kalt	warm	
Schaltwerte/Switching values		"warm"	+5,0	+5,0
Valeurs de commutation		"kalt"	-23,0	-10,0
"alarm"				
Füllmenge/Fill.quantity/Charge		R600a	*	*
Anschlußwert/Conn.load/Puiss. connectée		W	44	44
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild