
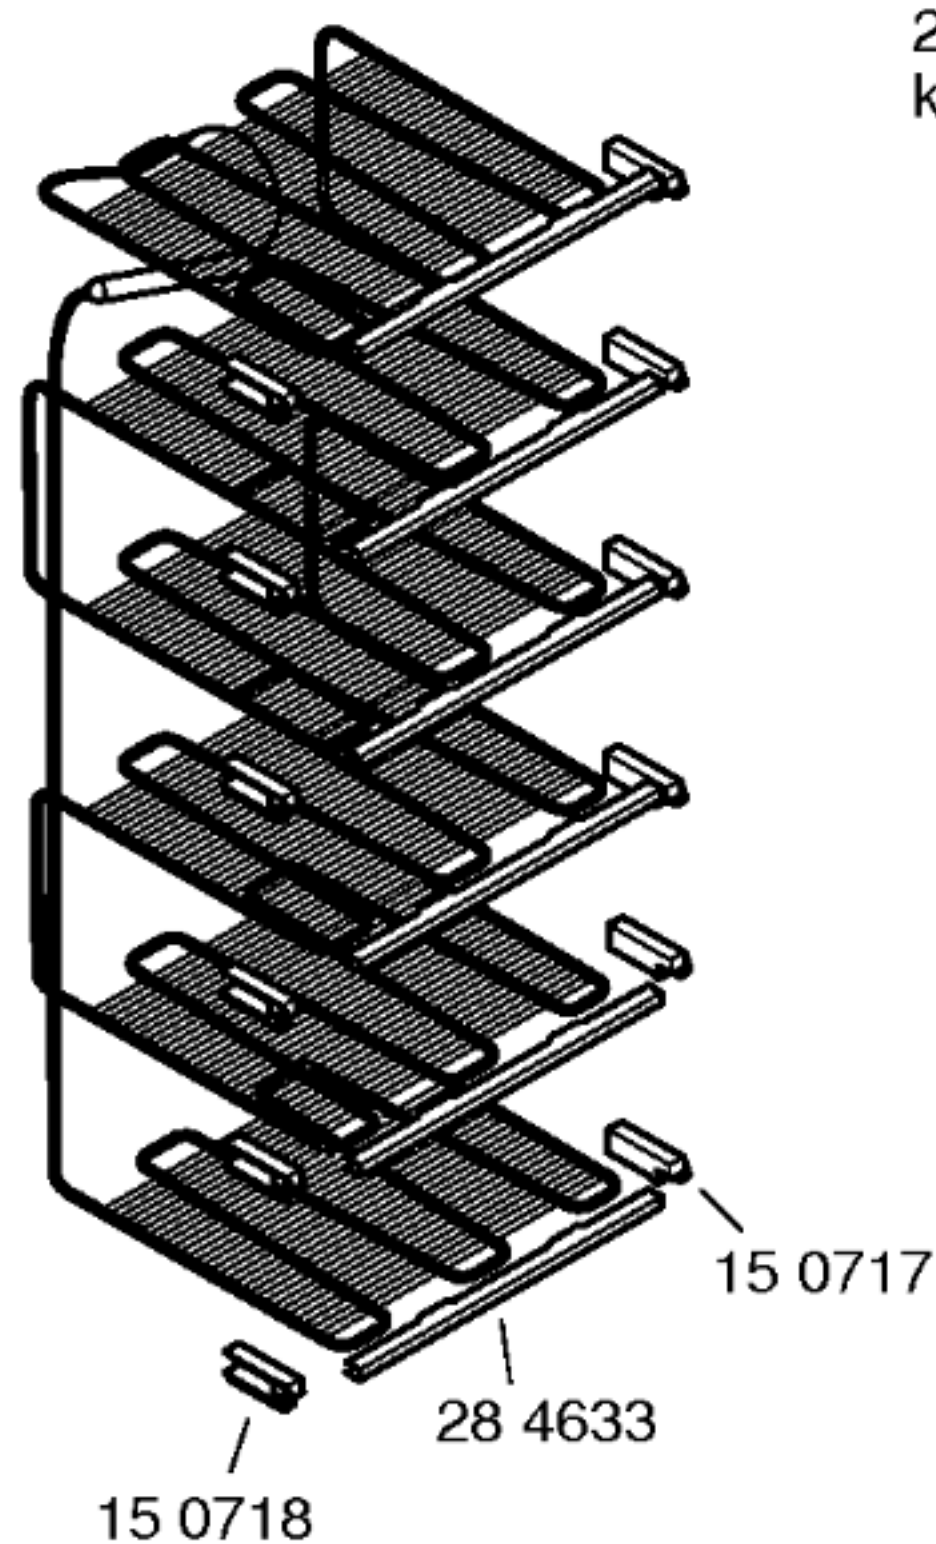
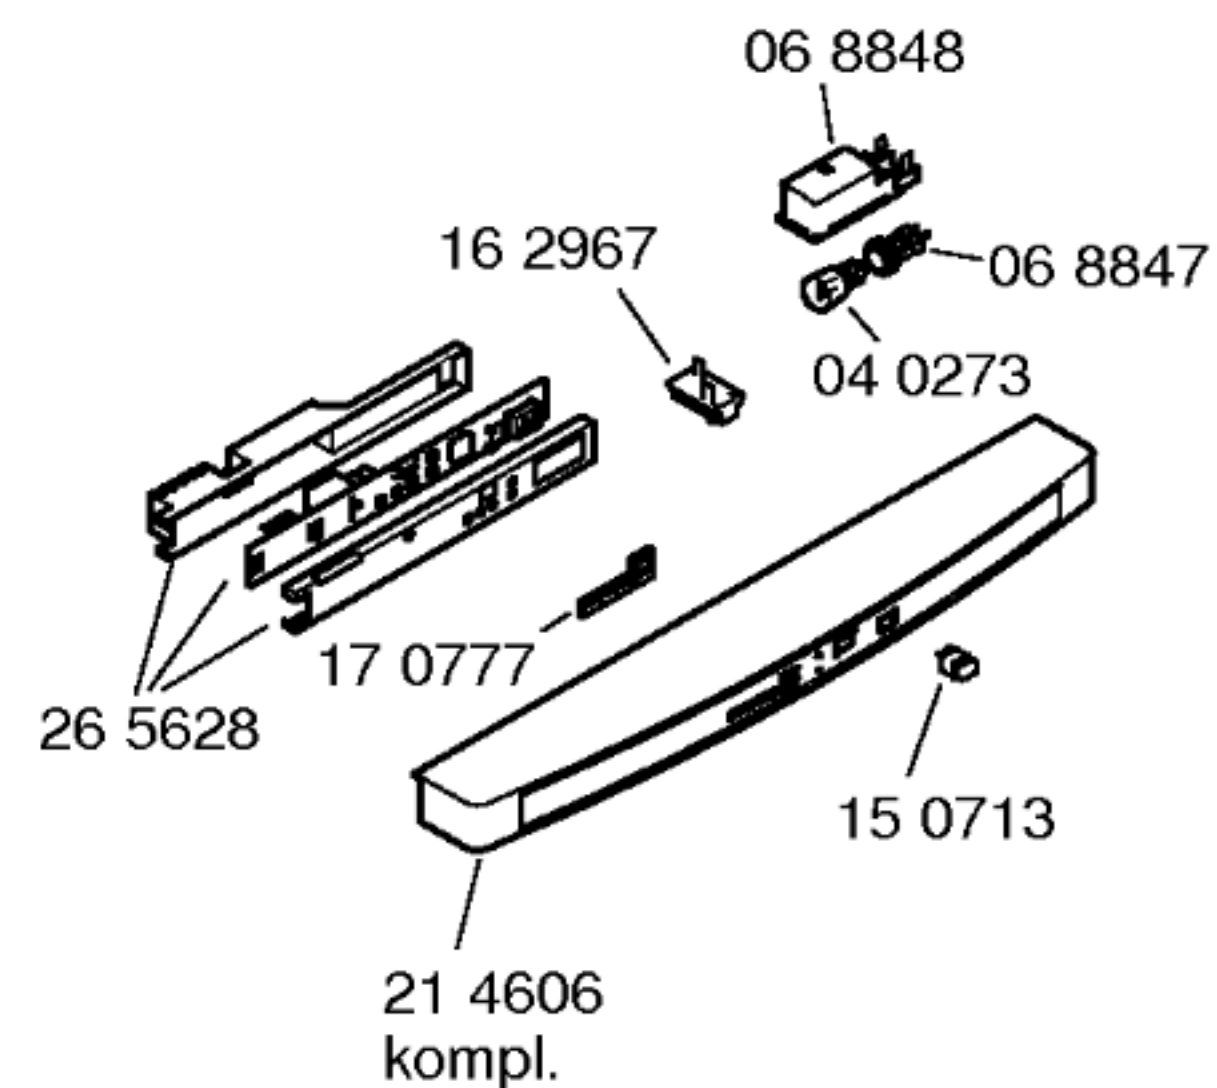




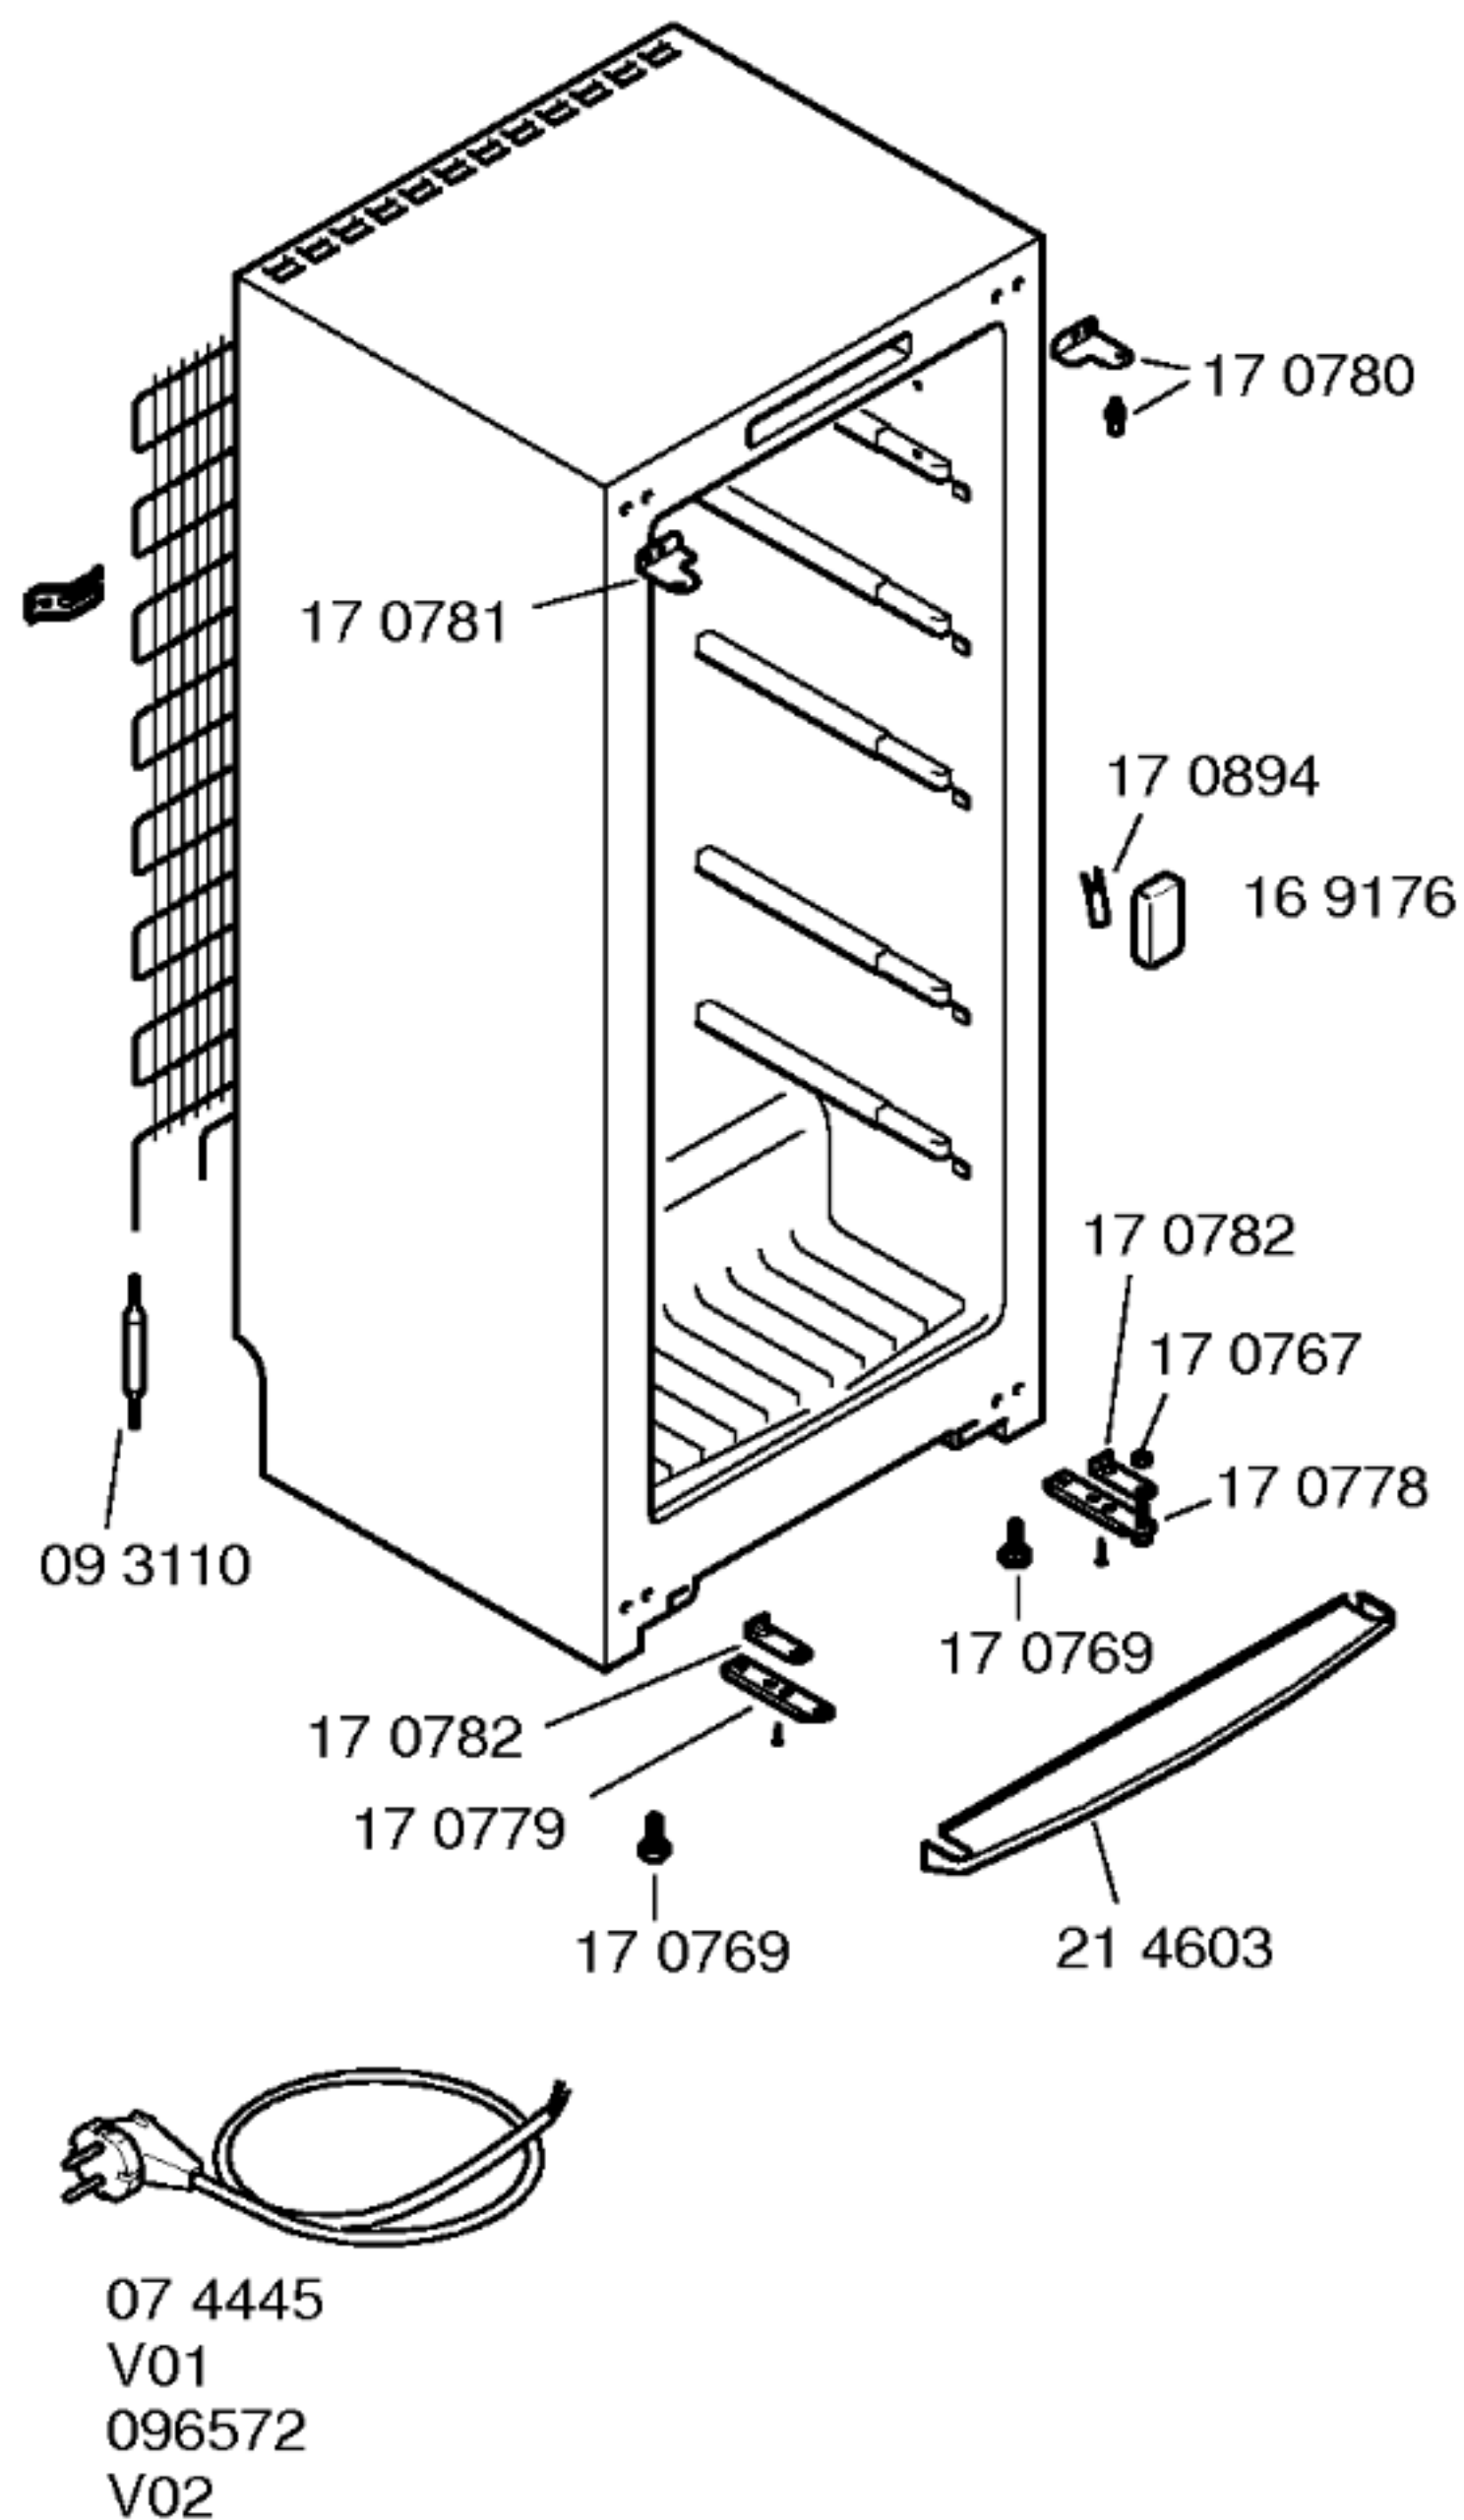



Gebrauchsanweisung
52 2791
(D,GB,F,I,NL)

Montageanleitung
52 2772
(D,GB,F,I,NL,DK,N,SF,SE,TR)

Beistellsatz
26 5629

Side by Side
Beistellsatz zu KSR/KSK
48 1044

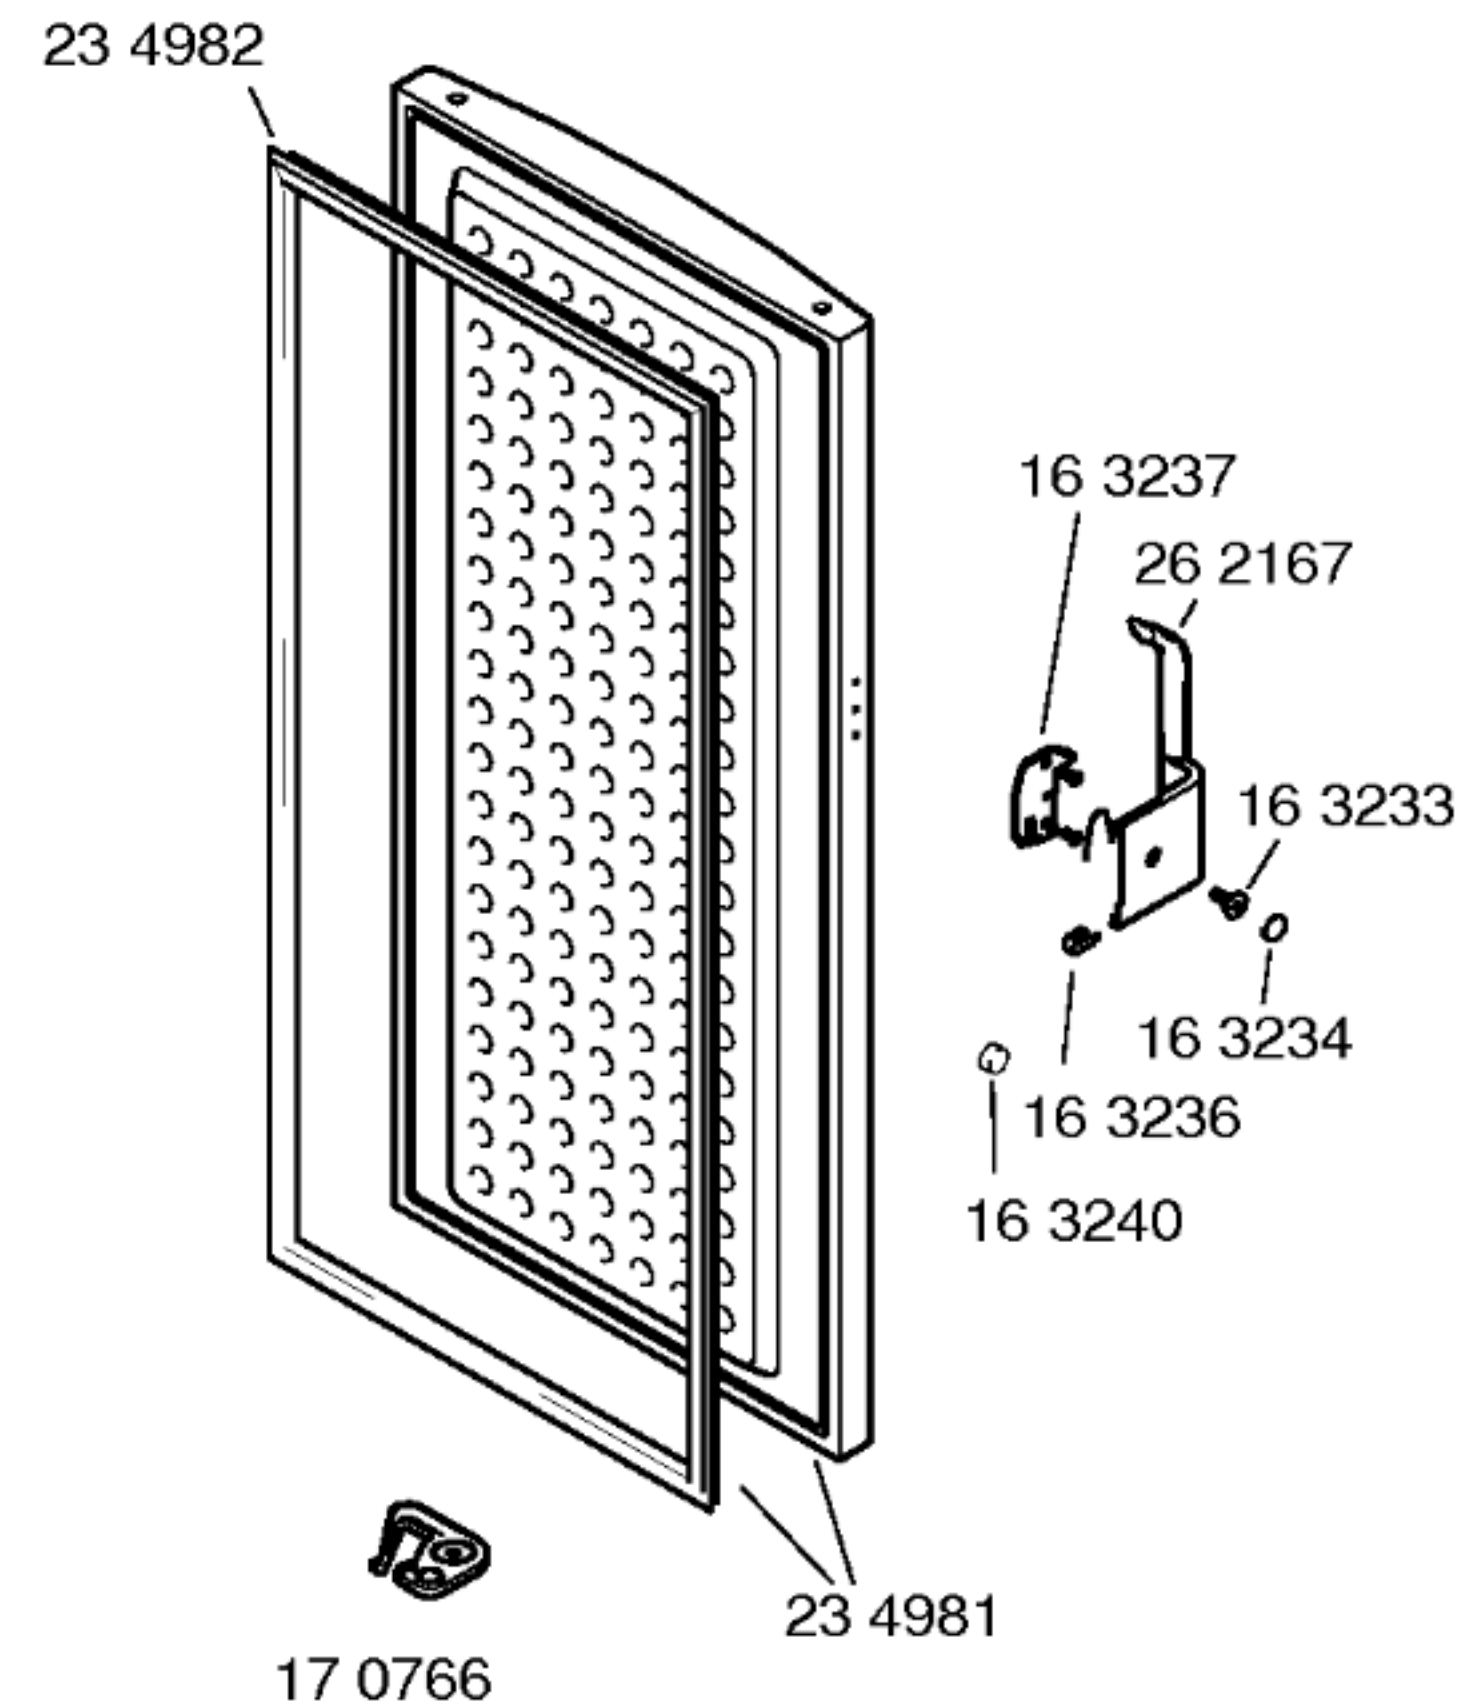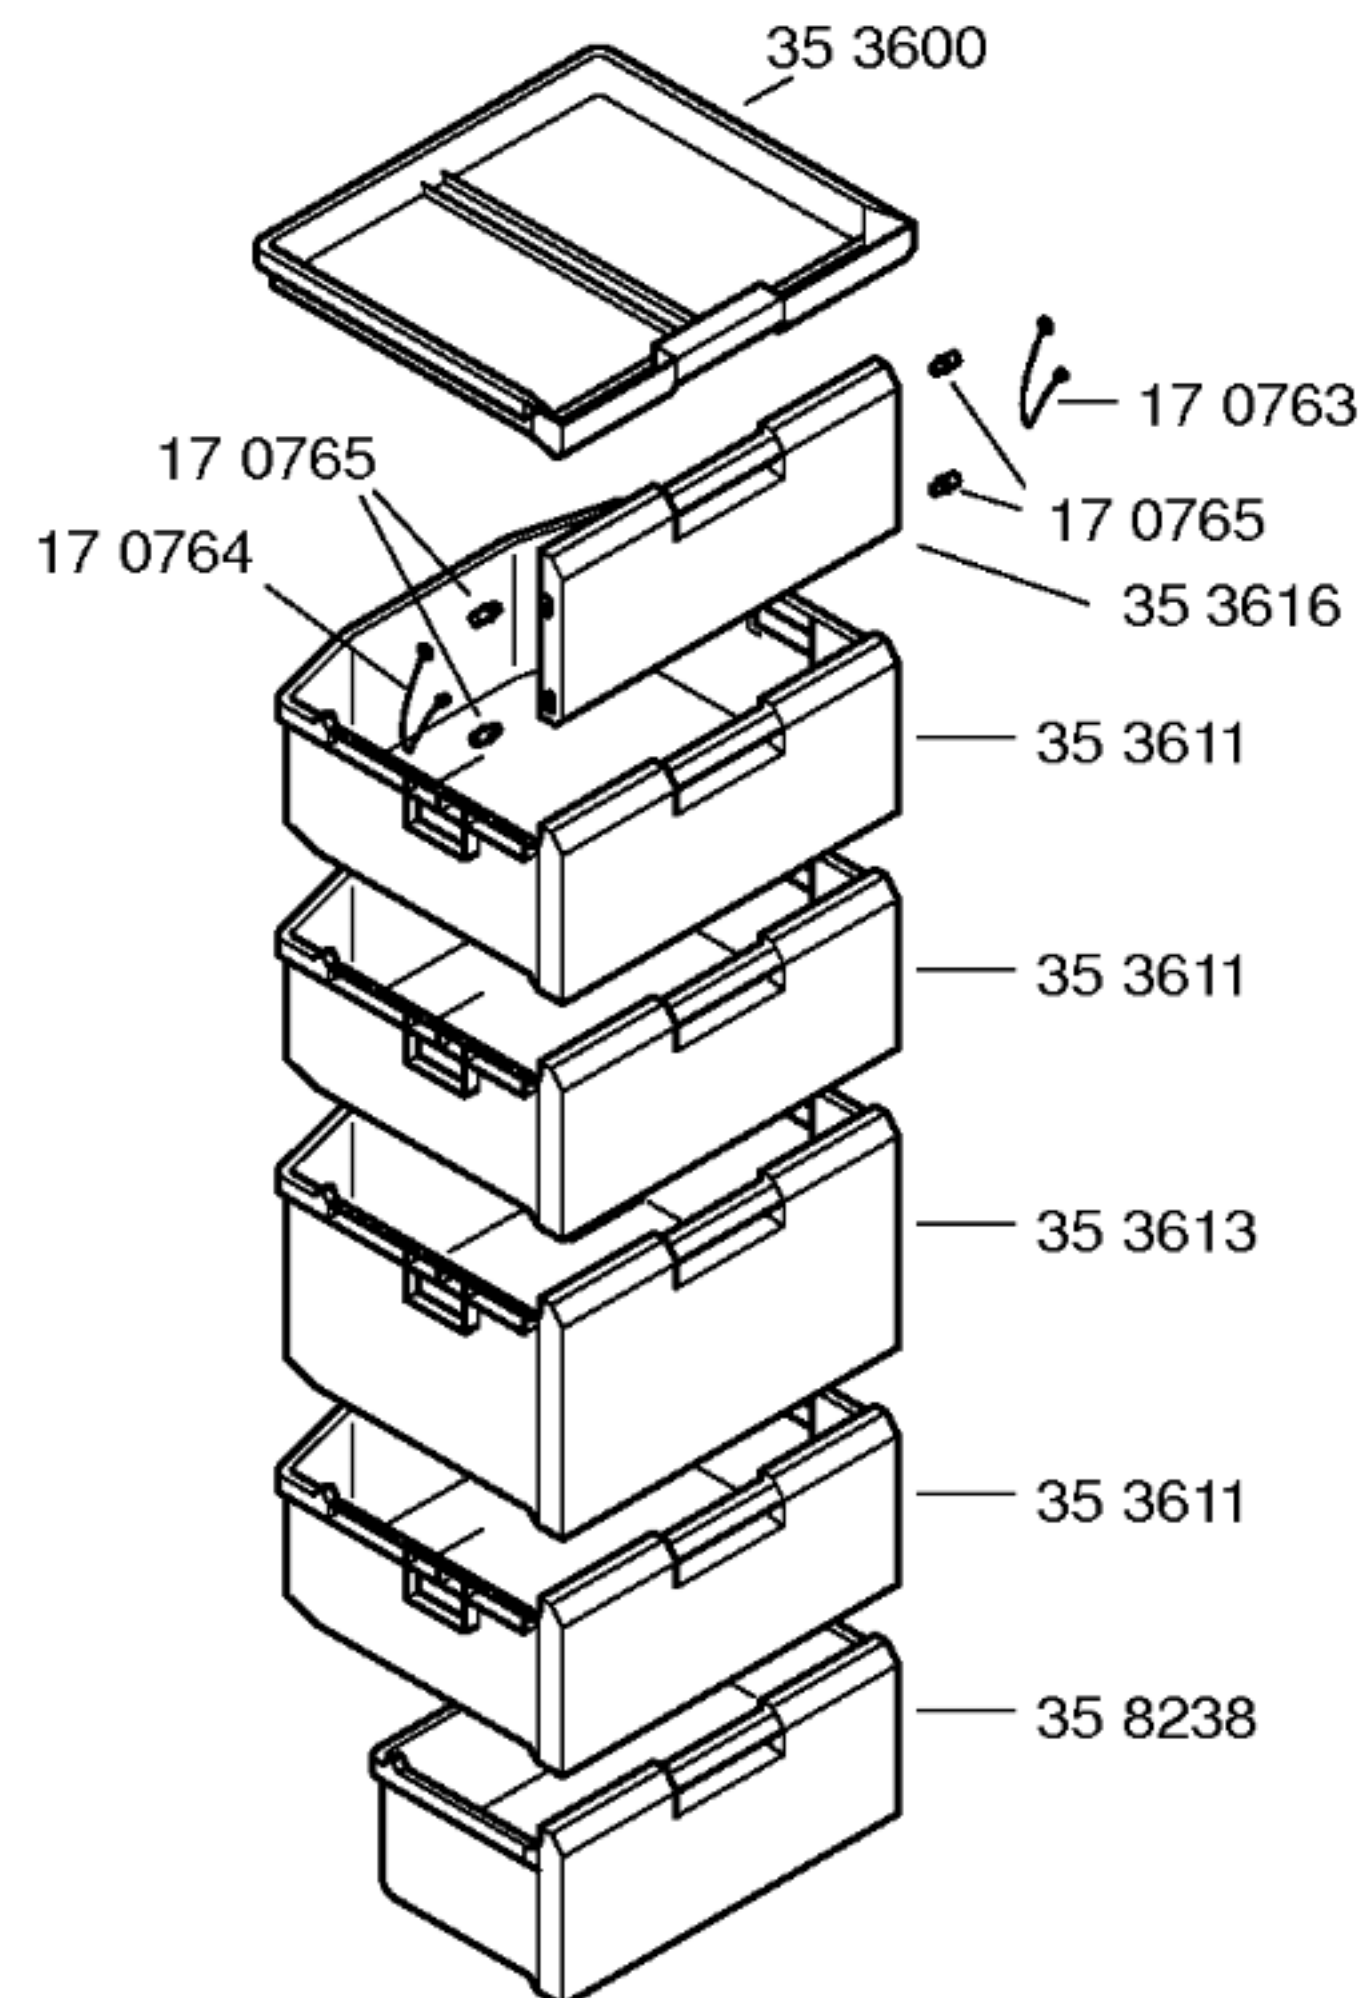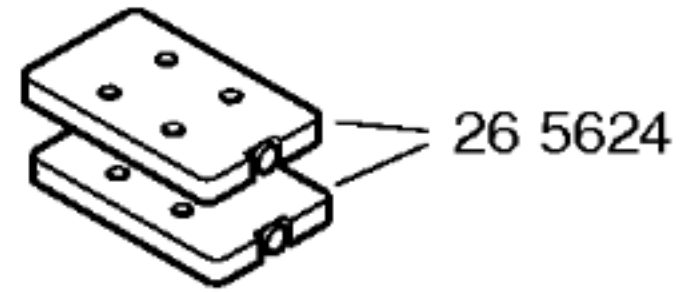

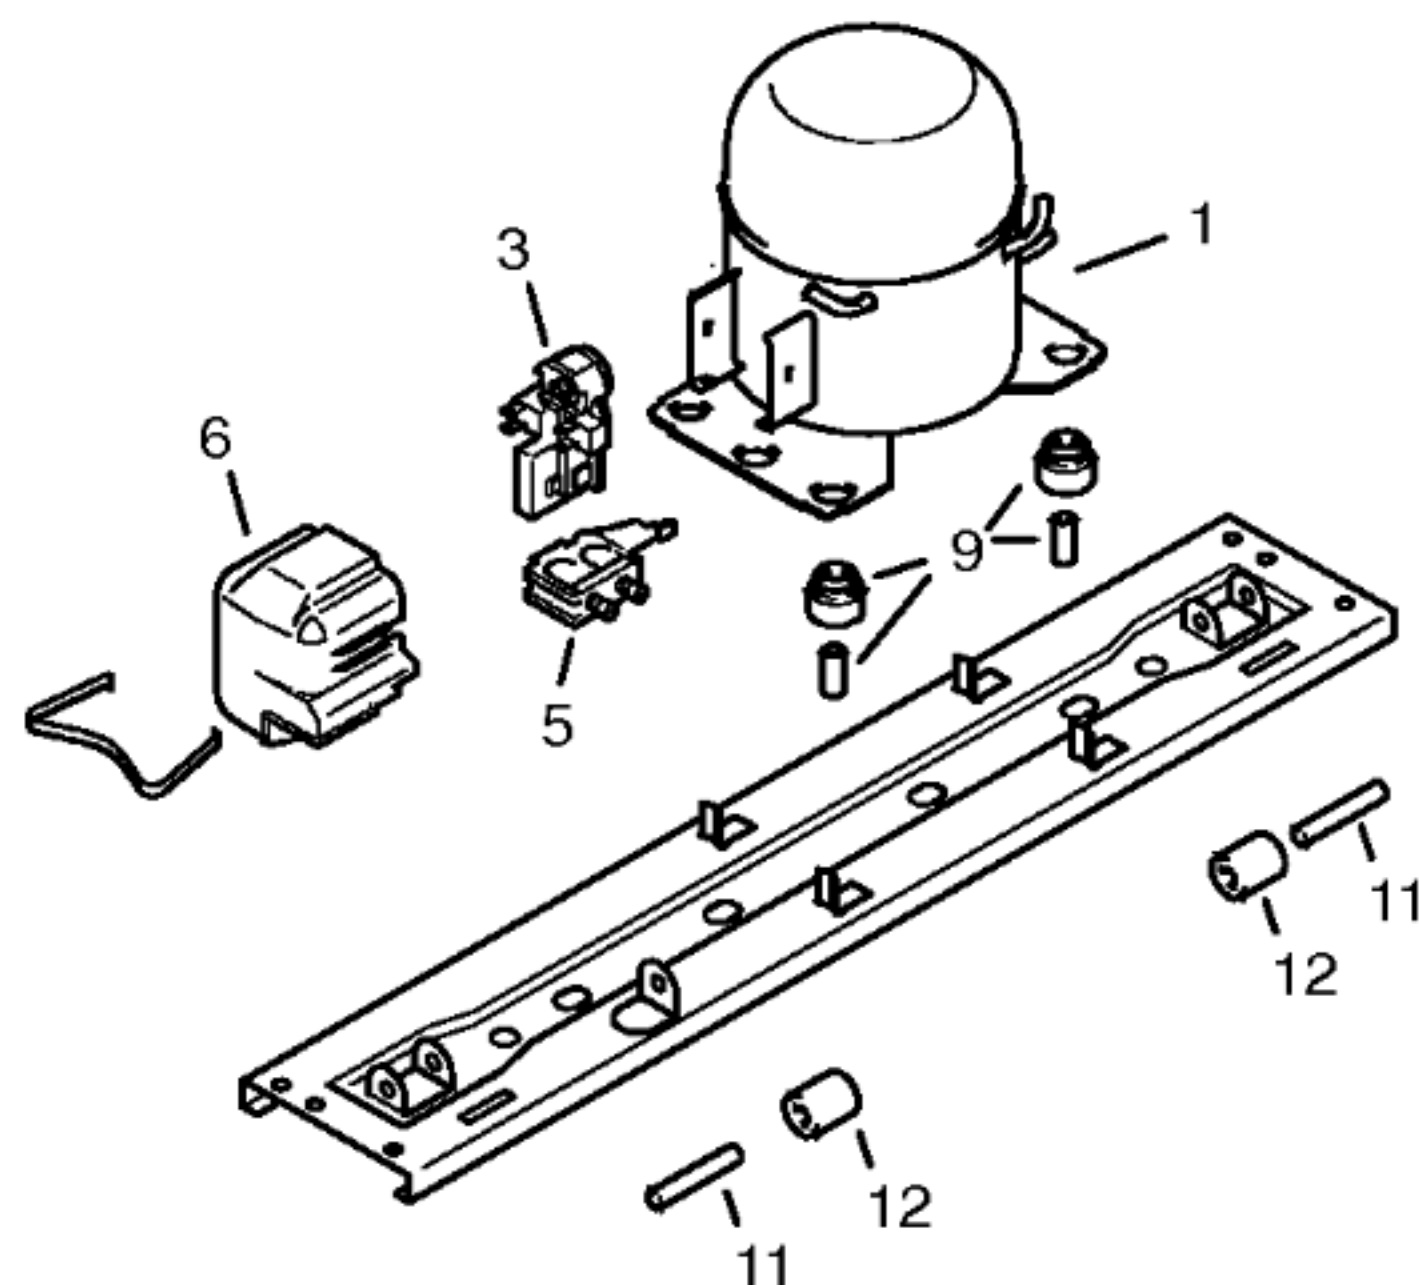

Pos.	V01,V02	V03,V04	
	Aspera	Matsushita	
	NBT1116Y	DC 125 E	
1	14 1845	14 1965	
2			
3	17 0623	17 2967	
4			
5	16 8903	16 2549	
6	16 8902	16 6782	
7			
8	21 4604	21 4604	
9	05 0166	05 0166	
10			
11	01 9017	01 9017	
12	01 1916	01 9016	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Aspera	Matsushita	
Typ/Type		NBT 1116 Y	DC 125 E	
Förderleistung/Delivery/Débit	l/h	2214	2246	
Anlaufstrom/Starting current/Cour de démarrage	A		9,2	
Widerstand/Resistance/Résistance	Ha/main/prin	13,2	12,1	
	Hi/aux	17,6	13,8	
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values	"warm"			
Valeurs de commutation	"kalt"			
	"alarm"			
Füllmenge/Fill.quantity/Charge		R600a		
Anschlußwert/Conn.load/Puiss. connectée		W	124	120
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
NTC-Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	-18
		+5	12,70 ±0,18	-22
		0	16,33 ±0,16	-26
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			