


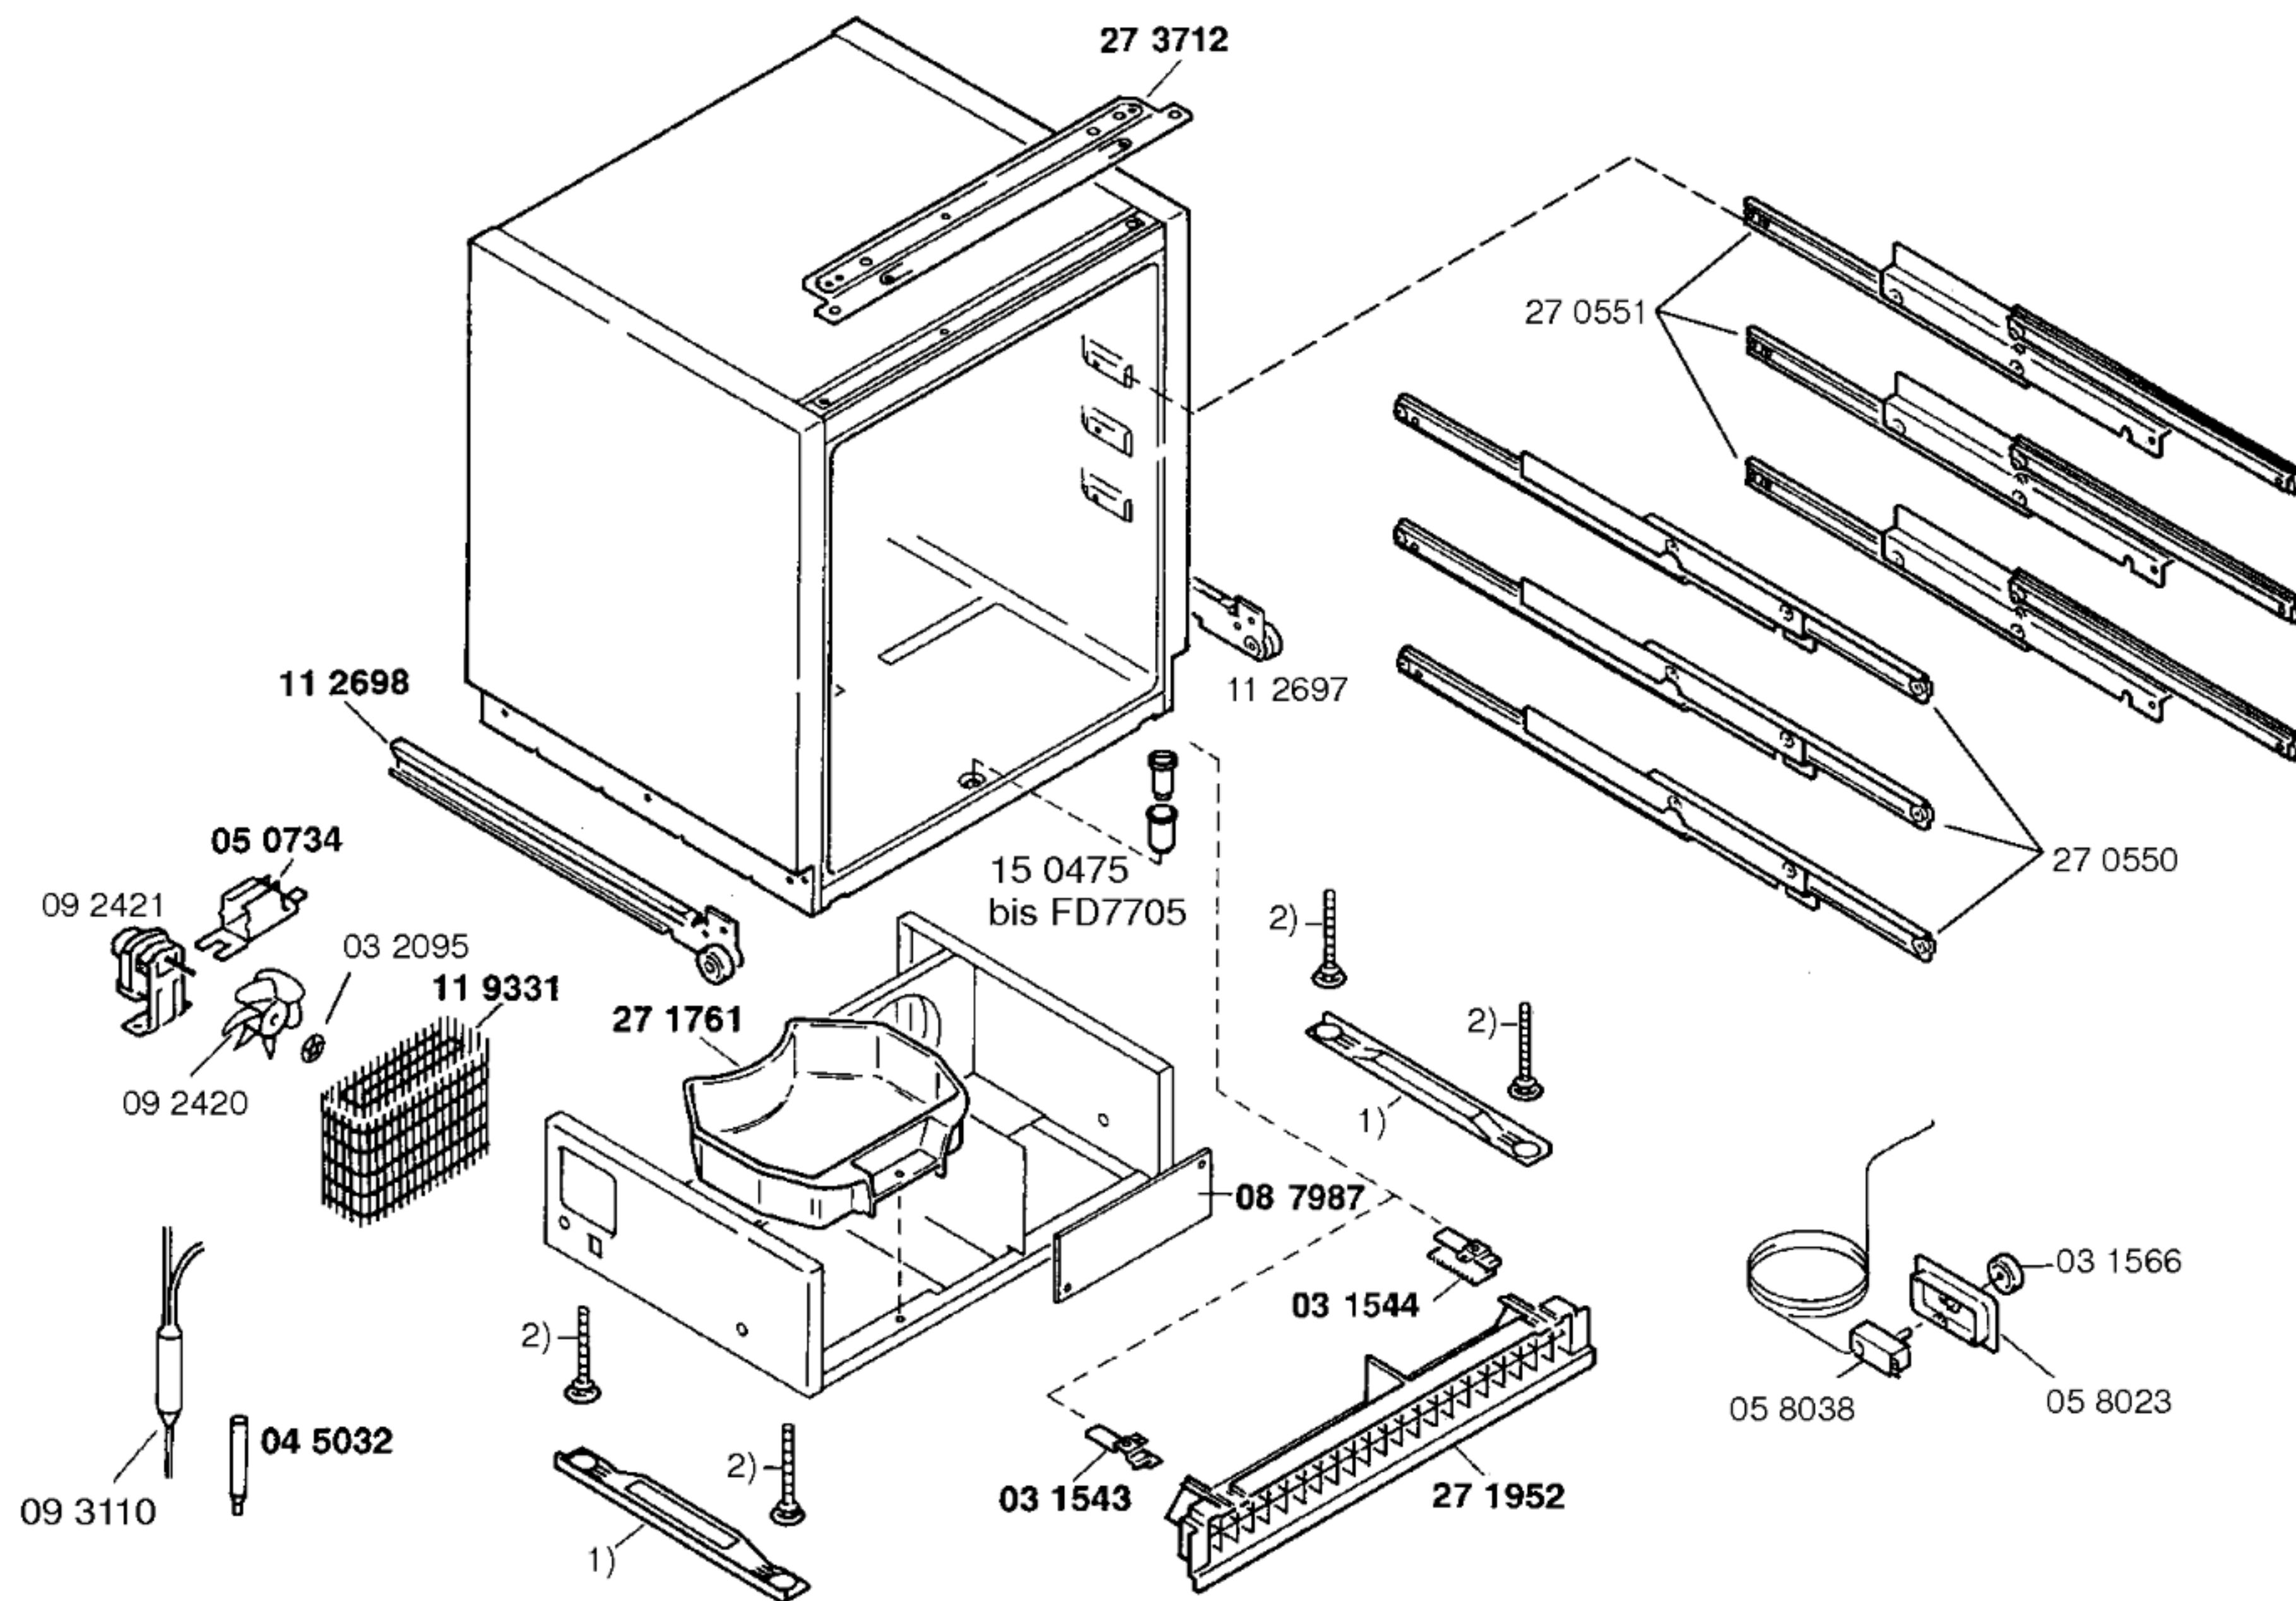



Gebrauchsanweisung  
51 4405  
(D,GB,F,I,NL,E)

51 4399  
Montageanweisung  
(D)

05 6188  
Befestigungssatz

1) 11 2700  
2) 05 4927

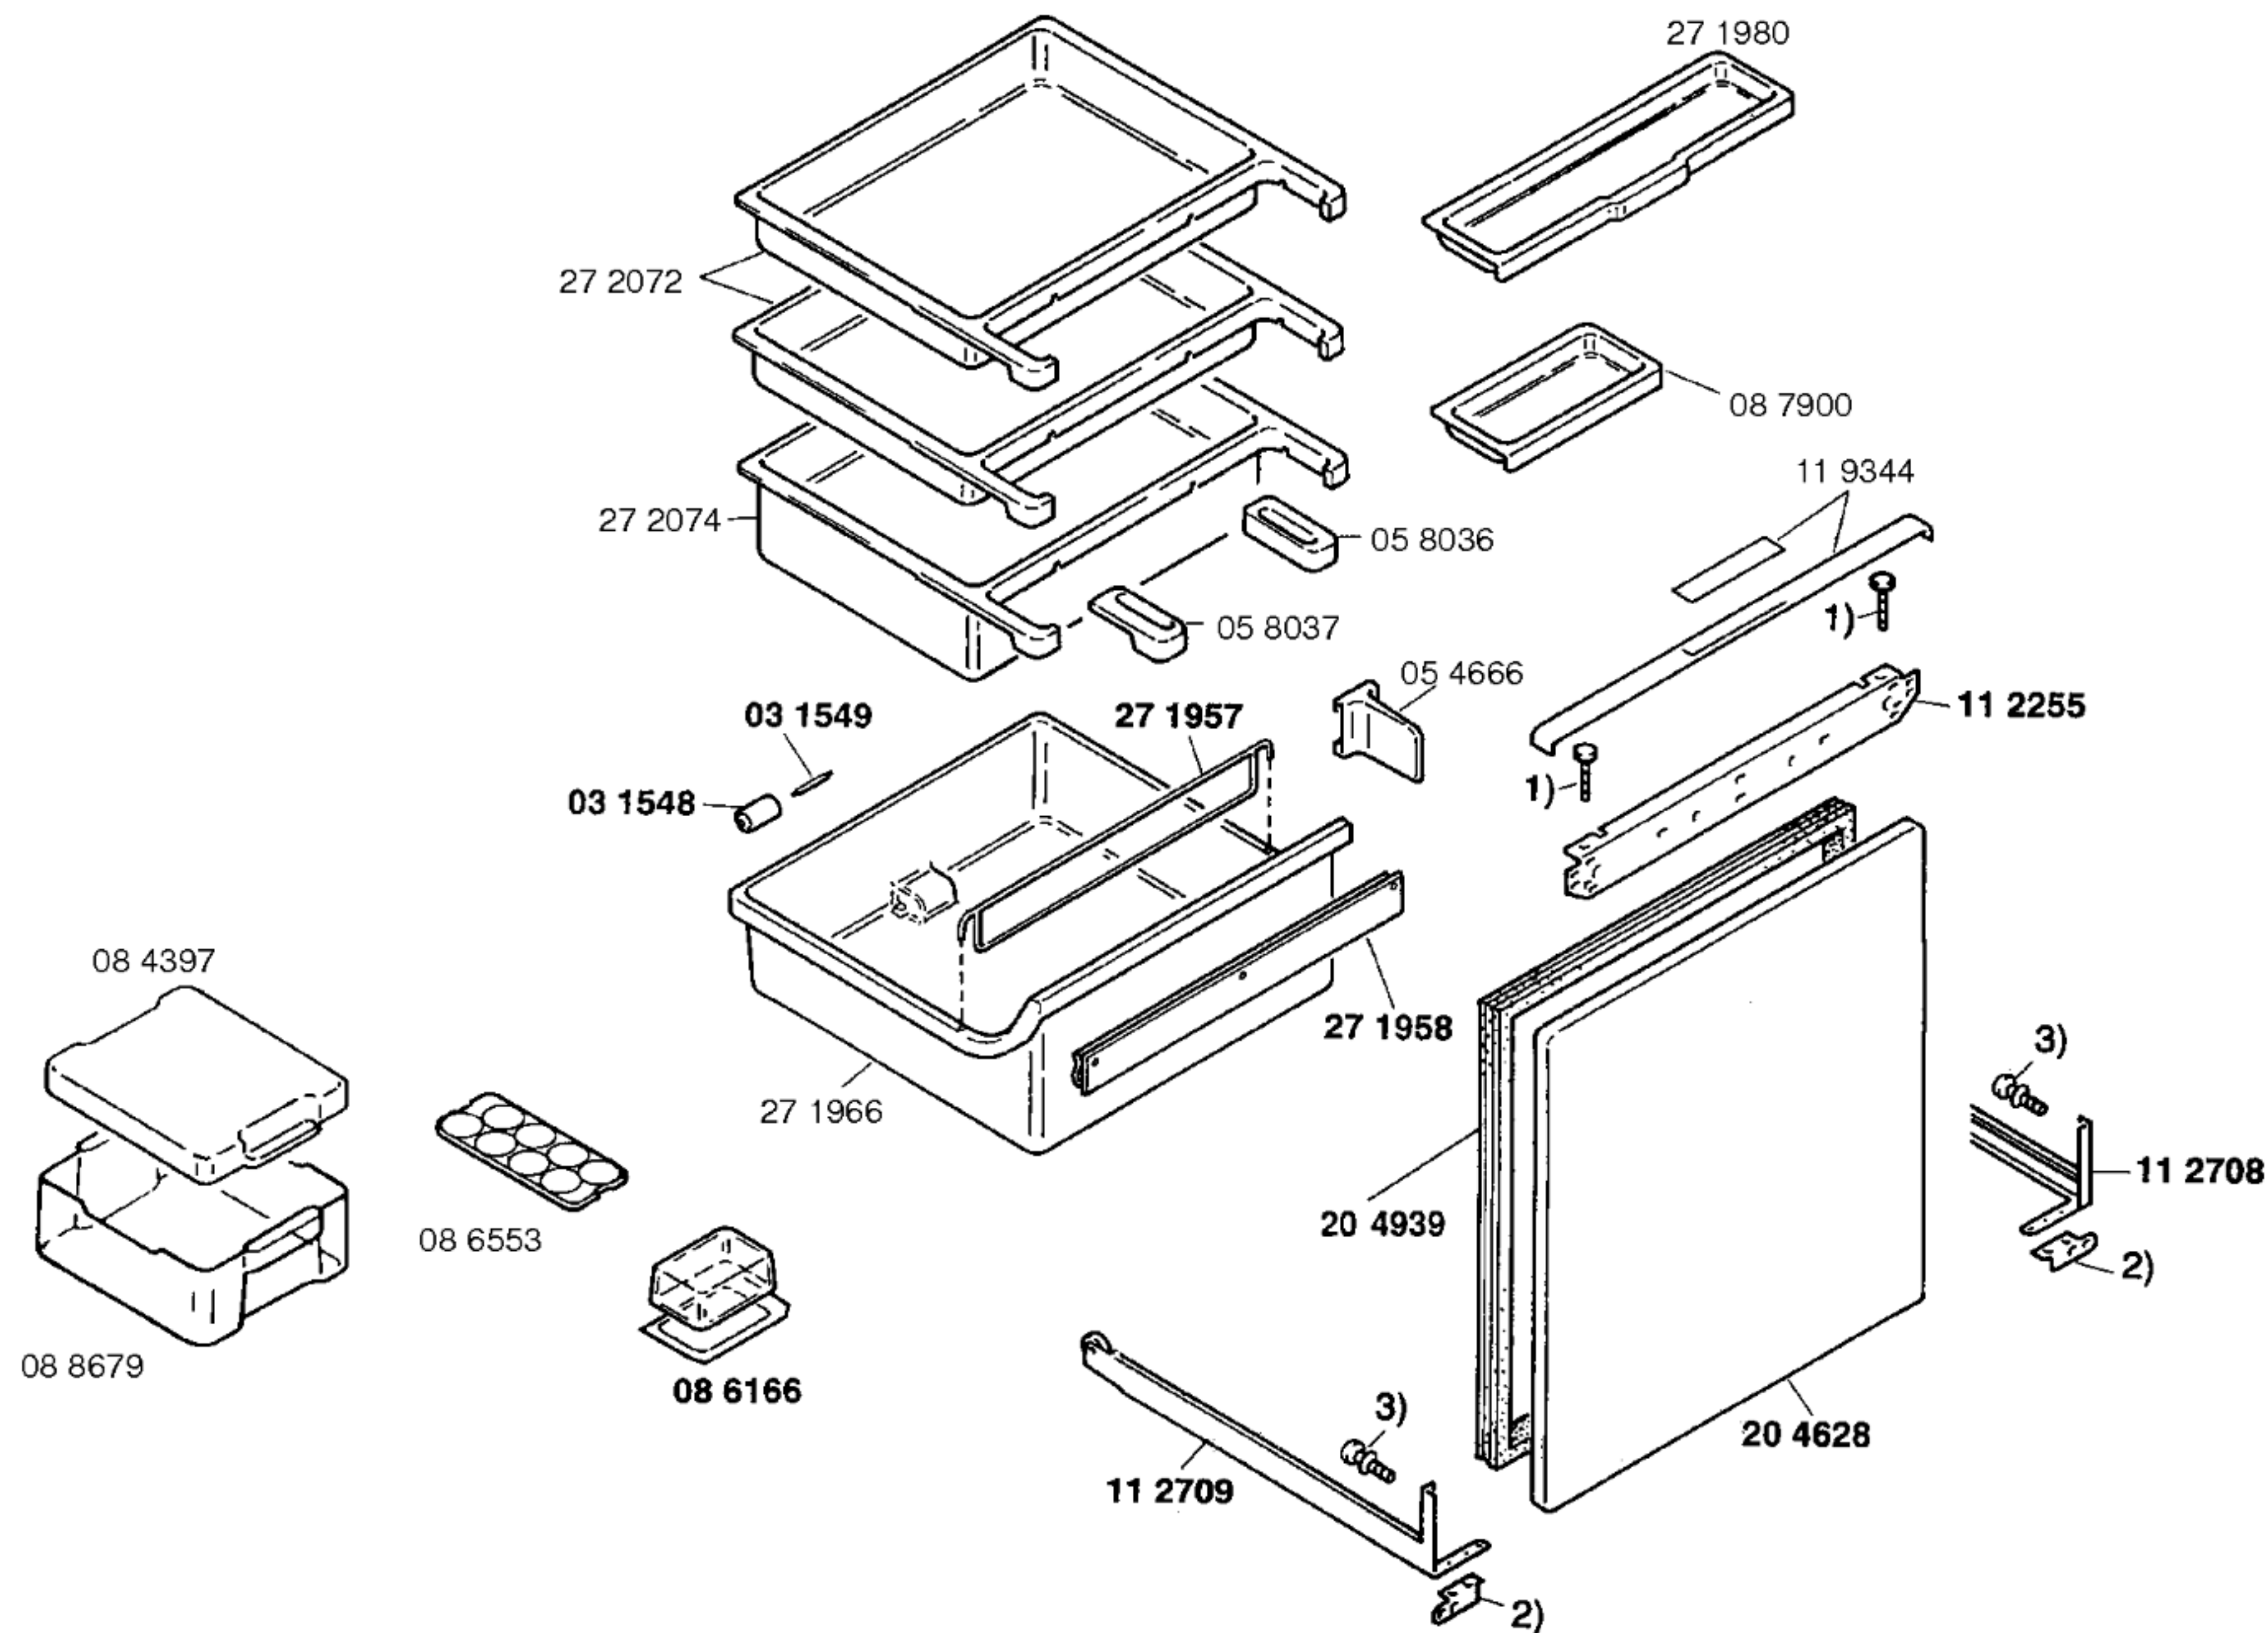

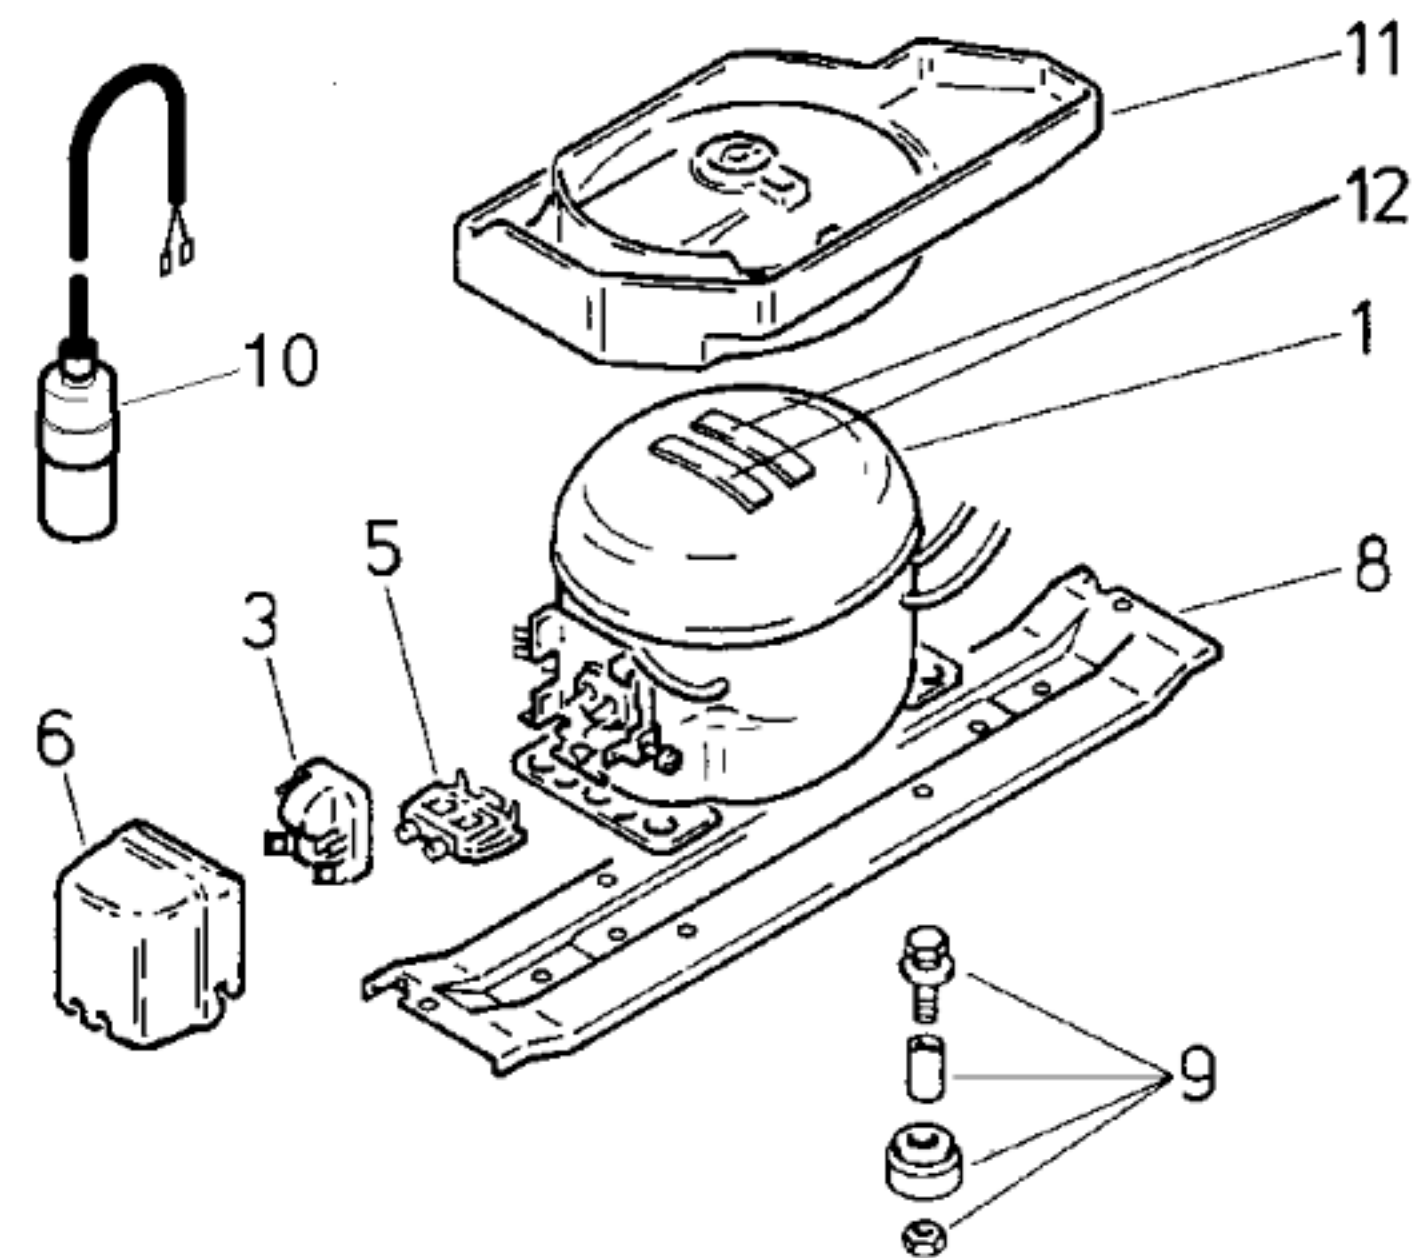

| Pos. |          |  |  |
|------|----------|--|--|
|      | Danfoss  |  |  |
|      | TLES 7 K |  |  |
| 1    | 14 1239  |  |  |
| 2    |          |  |  |
| 3    | 15 1055  |  |  |
| 4    |          |  |  |
| 5    | 15 0760  |  |  |
| 6    | 15 1072  |  |  |
| 7    |          |  |  |
| 8    |          |  |  |
| 9    | 05 0166  |  |  |
| 10   |          |  |  |
| 11   |          |  |  |
| 12   |          |  |  |

| TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES |  |                          |      |     |
|--------------------------------------------------------|--|--------------------------|------|-----|
| Verdichter/Compressor/Compresseur                      |  | Danfoss                  |      |     |
| Typ/Type                                               |  | TLES 7 K                 |      |     |
| Förderleistung/Delivery/Débit                          |  | l/h                      | 1168 |     |
| Anlaufstrom/Starting current/Cour de démarrage         |  | A                        | 4,5  |     |
| Widerstand/Resistance/Résistance                       |  | Ha/main/prin. $\Omega$   | 16,5 |     |
|                                                        |  | Hi/aux $\Omega$          | 16,9 |     |
| Temp.-Regler/Thermostat                                |  | WHF                      |      |     |
| Typ/Type                                               |  | TF 57 F1                 |      |     |
| Reglerstellung/Position                                |  | kalt      warm           |      |     |
| Schaltwerte/Switching values/                          |  | „ein“ $^{\circ}\text{C}$ | +5   | +5  |
| Valeurs de commutation                                 |  | „aus“                    | -30  | -14 |
|                                                        |  | („abtauen“ od.) „alarm“  |      |     |
| Füllmenge/Fill.quantity/Charge                         |  | R600a                    | g    | 25  |
| Anschlußwert/Conn.load/Puiss. connectée                |  |                          | W    | 110 |
| Heizung/Heater/Chauffage                               |  |                          |      |     |
| Widerstand/Resistance/Résistance                       |  | $\Omega$                 |      |     |
| Leistung/Power/Puissance                               |  | W                        |      |     |
| Ventilator/Blower/Ventilateur                          |  |                          |      |     |
| Widerstand/Resistance/Résistance                       |  | $\Omega$                 |      |     |
| Schaltuhr/Timer/Minuterie de contact                   |  |                          |      |     |
| Widerstand/Resistance/Résistance                       |  | $\Omega$                 |      |     |
| Magnetventil/Magnetic valve/Electrovanne               |  |                          |      |     |
| Widerstand/Resistance/Résistance                       |  | $\Omega$                 |      |     |
| Spannung/Voltage/Tension                               |  | V                        |      |     |