
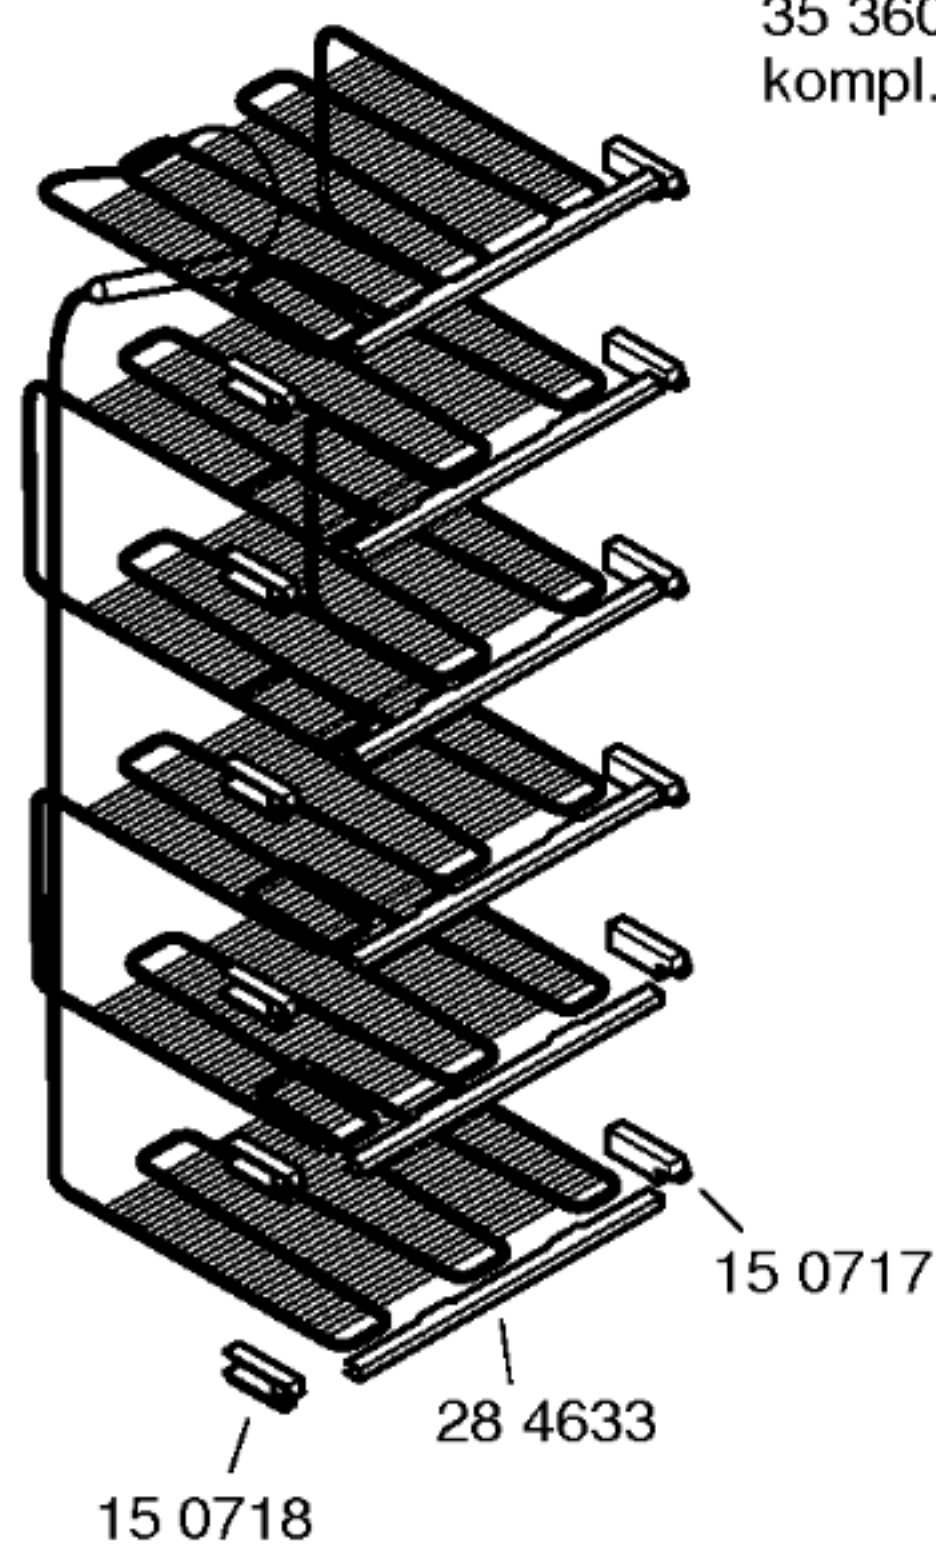
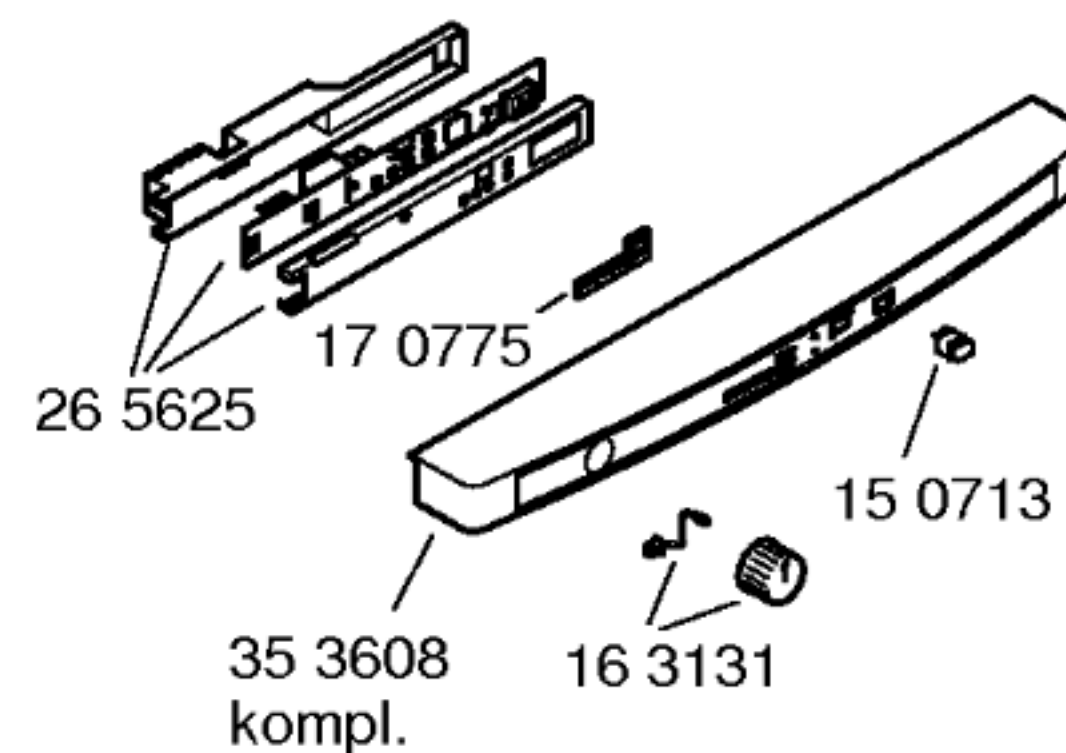



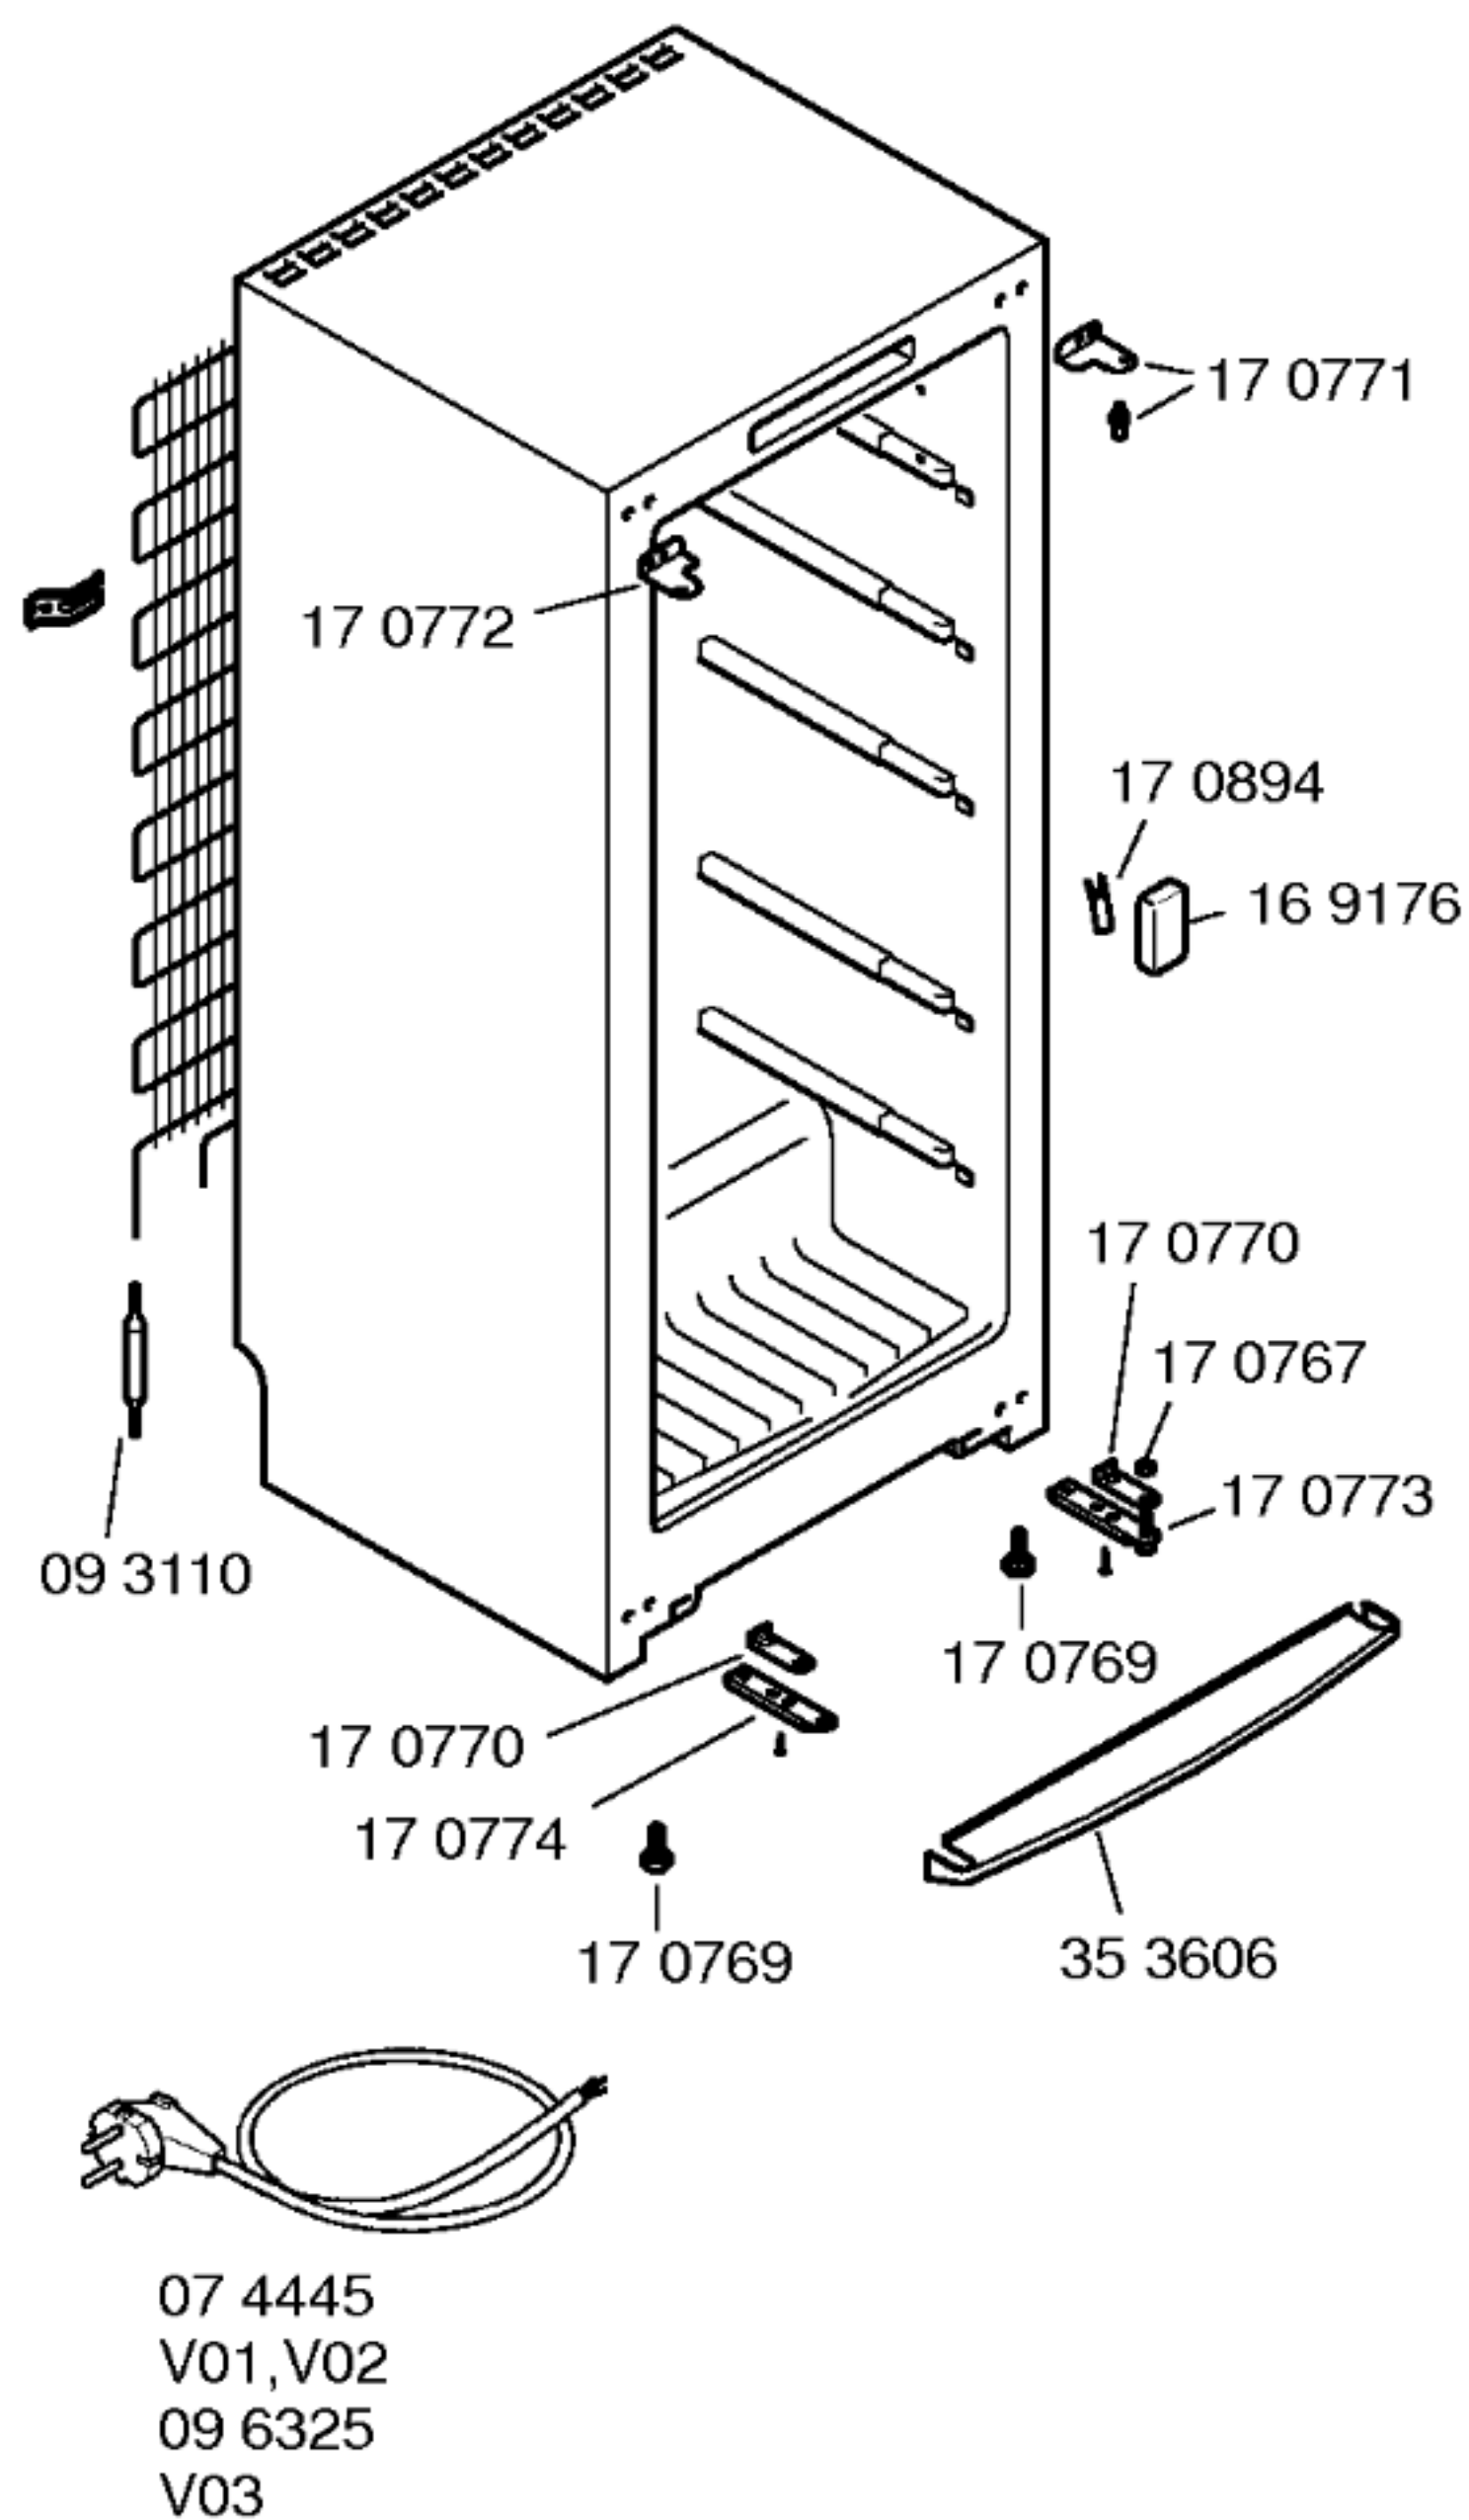



Gebrauchsanweisung
52 2770
(D,GB,F,I,NL)

Montageanleitung
52 2772
(D,GB,F,I,NL,DK,N,SF,SE,TR)

Beistellsatz
26 5629

Side by Side
Beistellsatz zu KSR/KSK
48 1044

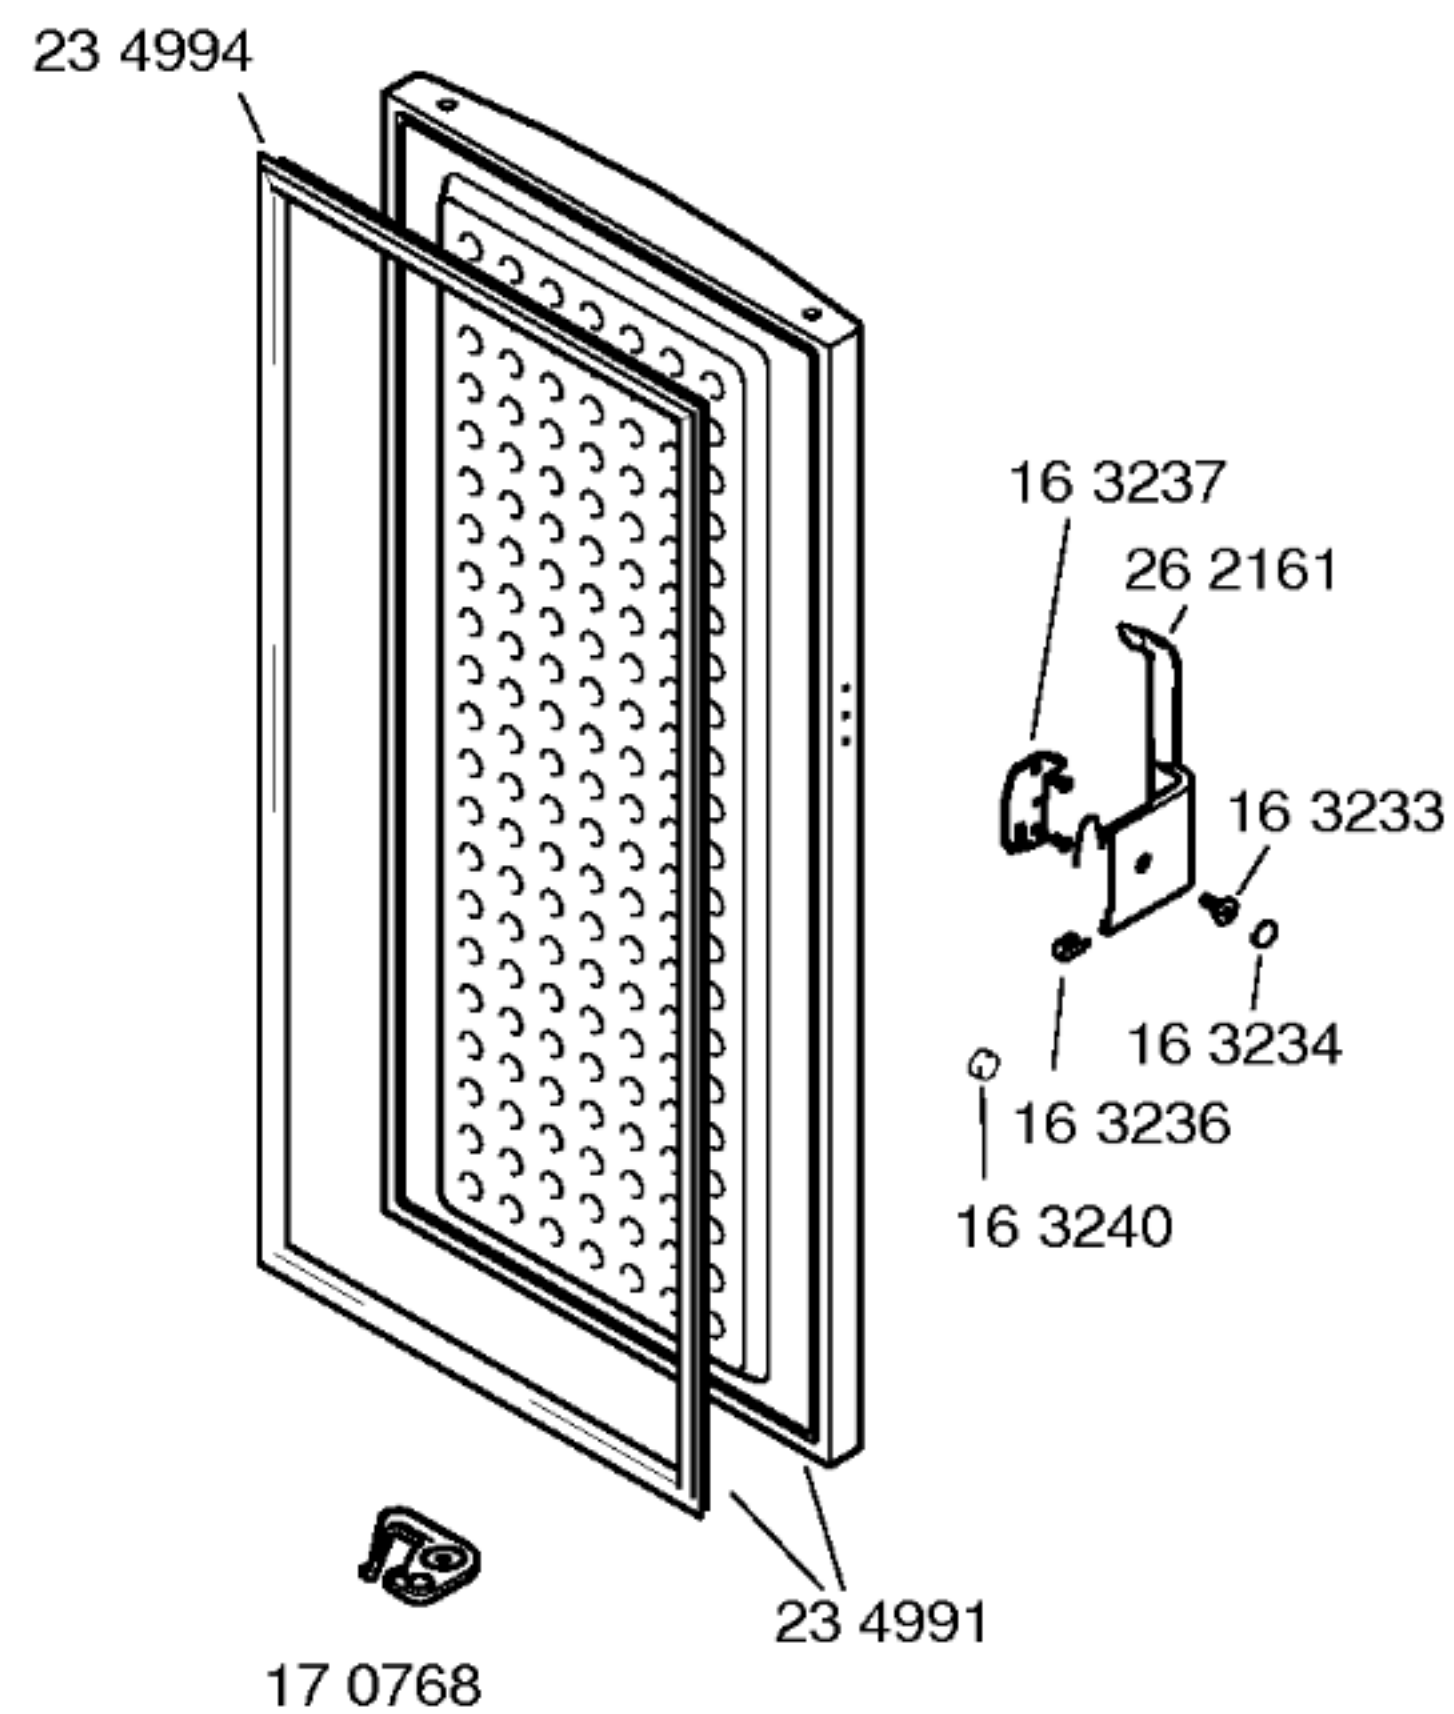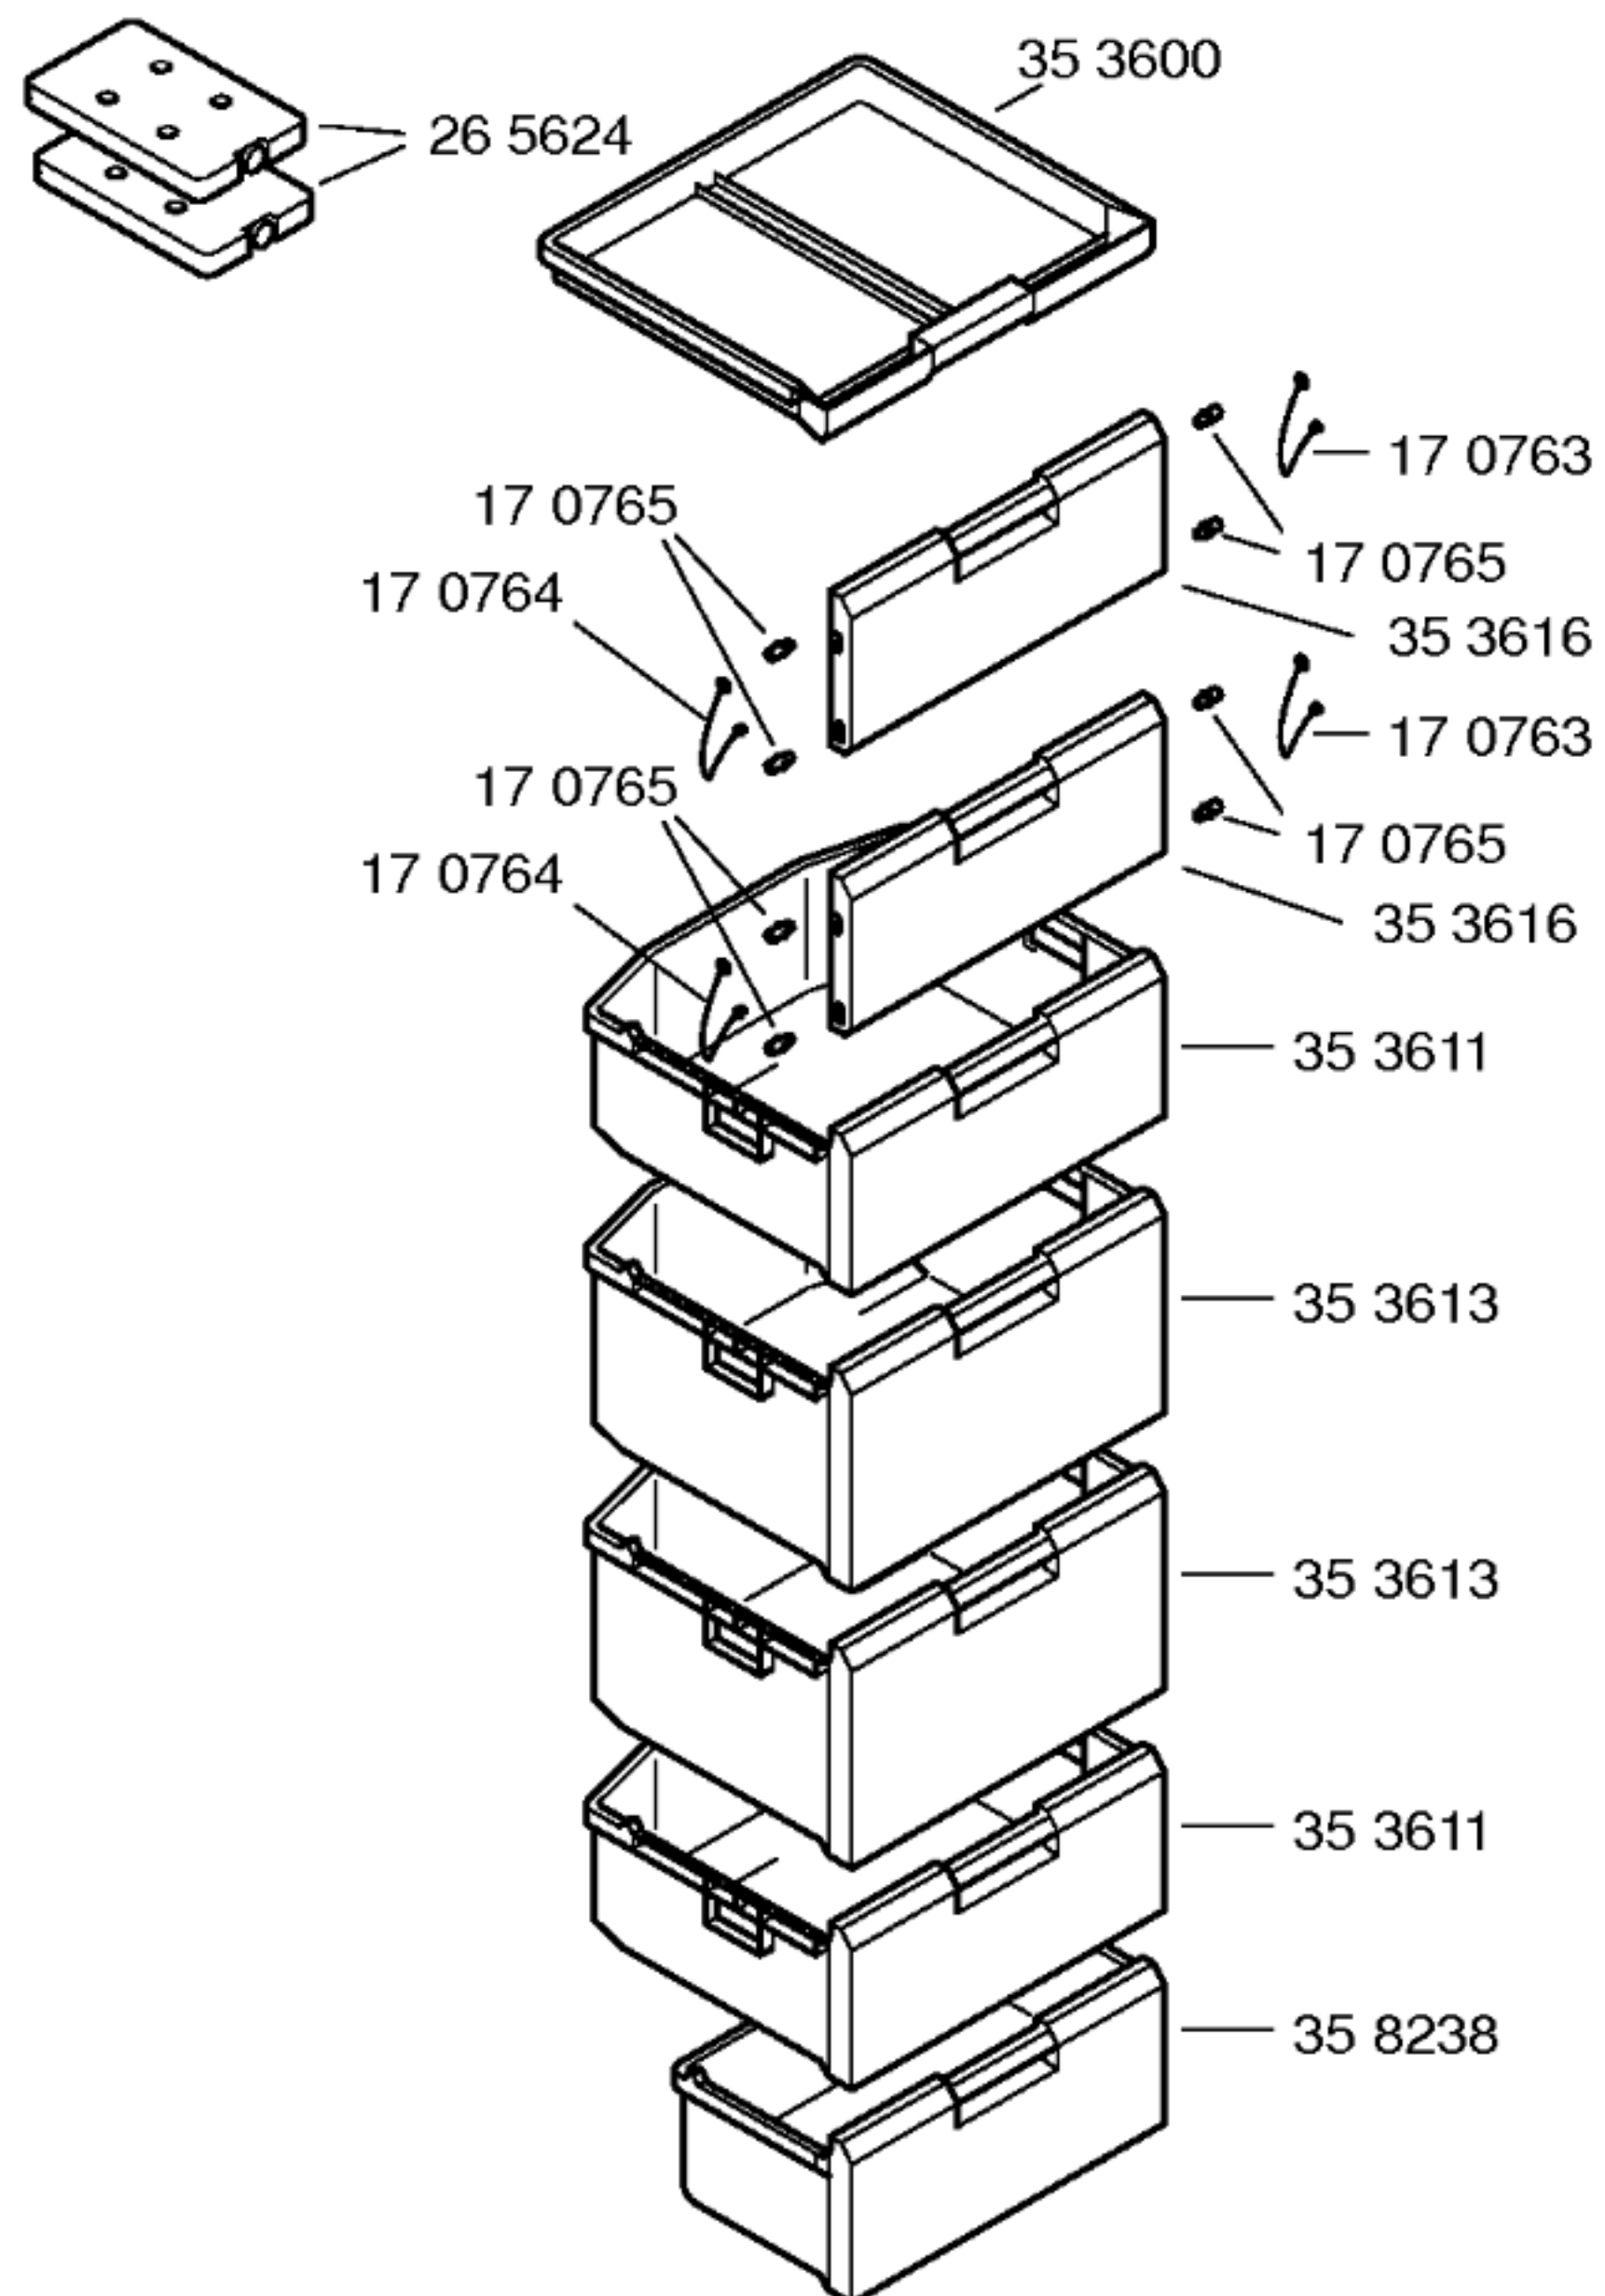

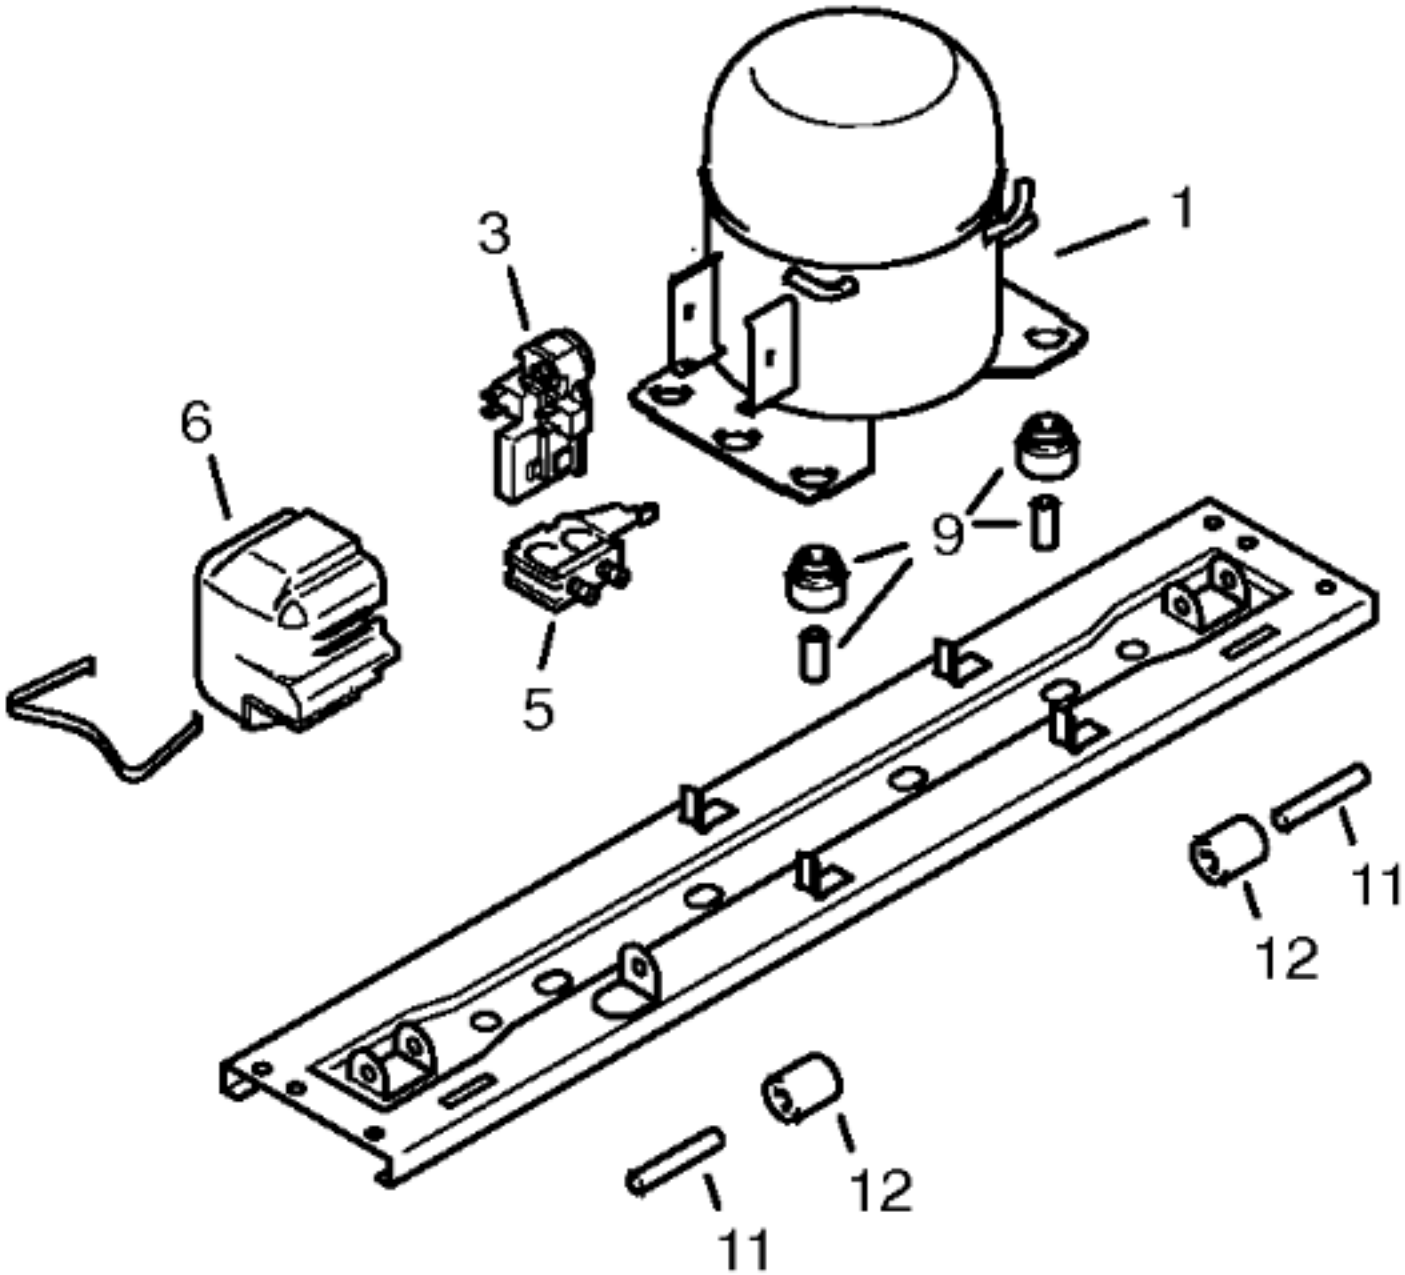

Pos.	V01	V02,V03	
	Aspera	Matsushita	
	NBK1116Y	DC 125 E	
1	14 1844	14 1965	
2			
3	17 0932	17 2967	
4			
5	16 8903	16 2549	
6	16 8902	16 6782	
7			
8	21 4604	21 4604	
9	05 0166	05 0166	
10			
11	01 9017	01 9017	
12	01 9016	01 9016	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Aspera	Matsushita	
Typ/Type		NBK 1116 Y	DC 125 E	
Förderleistung/Delivery/Débit		l/h	2214	2246
Anlaufstrom/Starting current/Cour de démarrage		A	6,3	9,2
Widerstand/Resistance/Résistance		Ha/main/prin	Ω	12,5
		Hi/aux	Ω	22,6
Hi/aux		Ω	22,6	13,8
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a		
Anschlußwert/Conn.load/Puiss. connectée		W	124	120
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
NTC-Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	-18
		+5	12,70 ±0,18	-22
		0	16,33 ±0,16	-26
				43,31 ±1,10
				54,66 ±1,59
				69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		