



ELECTROLUX HOME PRODUCTS PTY LTD
ABN 51 004 762 341

Technical Publication Nº CE251

Issue: 1
Date: 4/07

WEB SITE ADDRESS: www.partnship.com.au

WESTINGHOUSE

***ELECTRIC
SQUARE CERAMIC COOKTOPS
“L” SERIES***

MODELS:
PHL285W*32
PHL564W*32

VARIANT CHANGE SUMMARY	
*32	Replace standard knobs with Electrolux white knobs.

First Built Dates:	
PHL285W*32	6/07
PHL564W*32	6/07


CONTENTS	PAGE Nº
FIRST BUILT DATES	2
CONTENTS	3
COOKTOP ASSEMBLY PHL285	4
COOKTOP ASSEMBLY PHL564	5
CIRCUIT DIAGRAM	6

NOTE: In Parts Listings

N.I. = Not Illustrated
N.P.A. = No Part Available
N.P.N. = Not Used on this Model

MODEL: PHL285W*32


EX. VIEW DRAWING 4508
COOKTOP ASSEMBLY

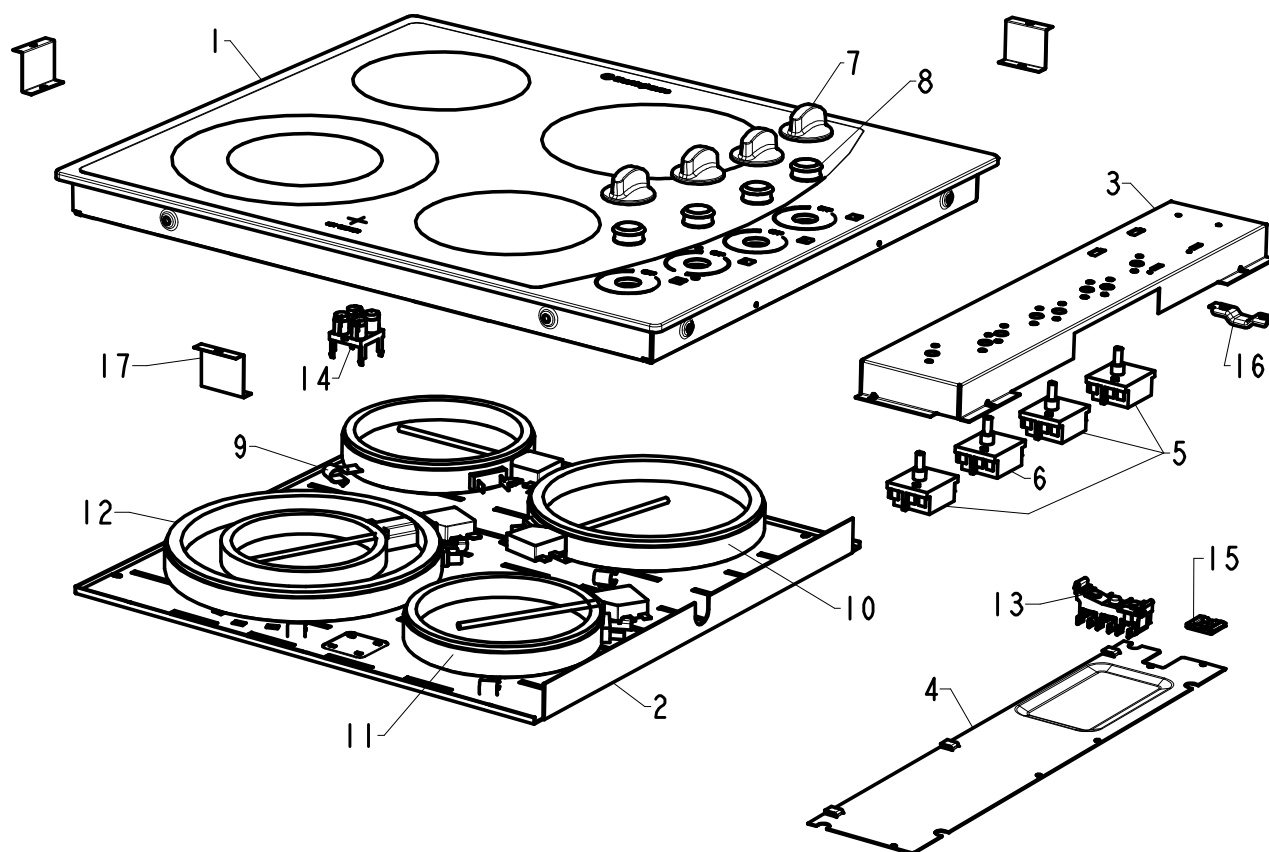


ITEM	PART N°	DESCRIPTION	EX. 4508	QTY
1	NZ75499	GLASS & FRAME ASSY WHT PHL285W		1
2	0038 830 018	PANEL BOTTOM		1
3	NZ75326	PLATE SWITCHES C/TOP		1
4	NZ75325	PLATE SWITCH COVER C/TOP		1
5	0534 001 654	SWITCH INF HEAT MP-101-EA		3
6	0534 001 720	SWITCH INF HEAT MDP-110-EA DUAL		1
7	0019 008 106	KNOB WHITE 7801 W/HOUSE ELEC		4
8	0208 003 453	SEAL SWITCH KNOB BLACK CERAM C/TOP		4
9	0125 008 346	CLIP ELEMENT CERAM SECURING		8
10	389 0701 32	ELEMENT 200 DIA 1800W (S/L)		1
11	389 0700 22	ELEMENT 165 DIA 1200W (S/L)		2
12	389 0827 02	ELEMENT 230 DIA DUAL 2200/750W (S/L)		1
13	NZ84340	BAR CONNECTOR METALLUK		1
14	0060 002 090	LIGHT HOTZONE INDICATOR		1
15	NZ72447	GROMMET EDGING SADDLE 17X17MM		1
16	0005 001 163	CLAMP SERVICE CORD NZ		1
17	0030 024 169	BRKT CATCH C/T CERAMIC		3
N.I.	0065 009 209	NUT SWITCH SECURING METRIC M10 X 0.75		4
N.I.	NZ16009	SLEEVE CONDUIT SILICONE 90MM		1
N.I.	ACC014	SCRAPER CERAMIC GLASS		1
N.I.	ACC018	CERASEAL GLASS CT PROTECTOR		X
N.I.	ACC019	CLEANER CERAMIC COOKTOP 250ML		X

MODEL: PHL564W*32

EX. VIEW DRAWING 4509
COOKTOP ASSEMBLY

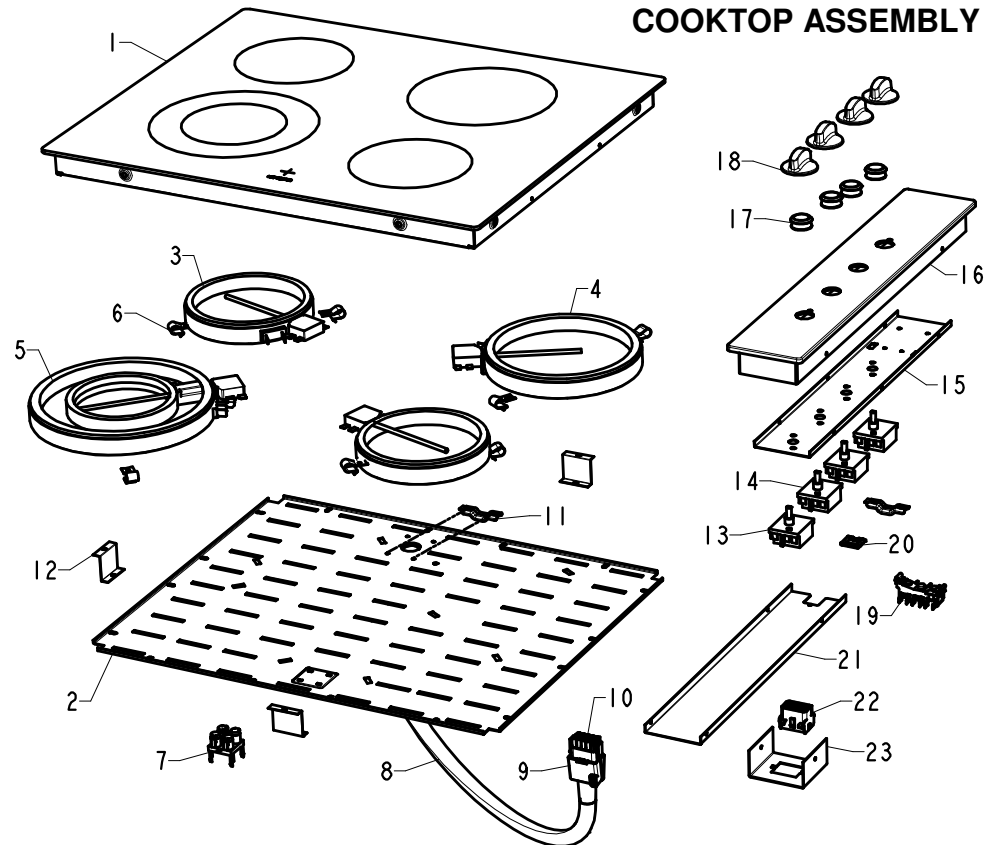

ITEM	PART N°	DESCRIPTION	EX. 4509	QTY
1	NZ75486	GLASS & FRAME ASSY PHL564		1
2	NZ75523	PANEL BOTTOM CERAM C/TOP		1
3	389 0700 22	ELEMENT 165 DIA 1200W (S/L)		2
4	389 0701 32	ELEMENT 200 DIA 1800W (S/L)		1
5	389 0827 02	ELEMENT DUAL 230 DIA 2200/750W (S/L)		1
6	0125 008 346	CLIP ELEMENT SECURING		8
7	0060 002 090	LIGHT HOTZONE INDICATOR		1
8	0126 010 068	SLEEVE CONDUIT SILICONE 800MM		1
9	NZ41055	CONNECTOR 15-WAY COVER		2
10	0173 100 151	WIRING LOOM SWITCH ASSY		1
	NZ41053	CONNECTOR 15-WAY PLUG		1
11	0005 001 163	CLAMP SERVICE CORD NZ		2
12	NZ75418	BRACKET RETAINING C/TOP		3
13	0534 001 654	SWITCH INF HEAT MP-101-EA		3
14	0534 001 720	SWITCH INF HEAT MDP-110-EA DUAL		1
15	NZ75230	PLATE MOUNTING SWITCHES C/TOP		1
16	NZ75488	PANEL SWITCH FRAME ASSY (WHITE)		1
17	0208 003 453	SEAL SWITCH KNOB BLACK CERAM C/TOP		4
18	0019 008 106	KNOB WHITE 7801 W/HOUSE ELEC		4
19	NZ84340M	BAR CONNECTOR METALLUK (MOD)		1
20	NZ72447	GROMMET EDGING SADDLE 17X17MM		1
21	NZ75344	PLATE SWITCH COVER 2 PCE C/TOP		1
22	NZ41052	CONNECTOR 15-WAY CAP		1
23	NZ75229	PLATE MTG CONNECTOR		1
N.I.	0065 009 209	NUT SWITCH SECURING METRIC M10 X 0.75		4
N.I.	ACC014	SCRAPER CERAMIC GLASS		1
N.I.	ACC018	CERASEAL GLASS CT PROTECTOR		X
N.I.	ACC019	CLEANER CERAMIC COOKTOP 250ML		X

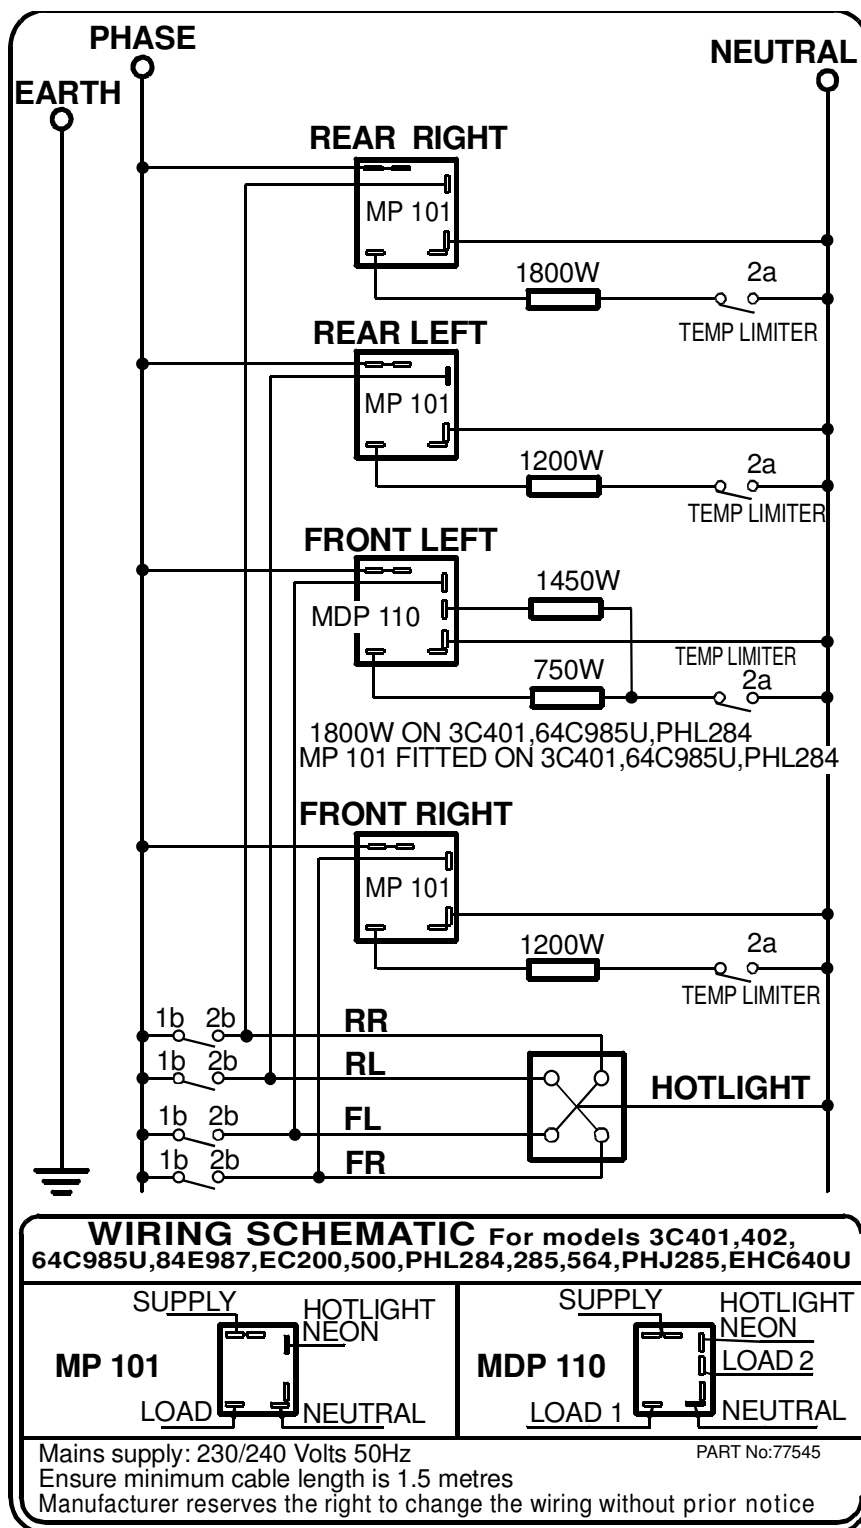**WARNING**

IT IS ILLEGAL FOR PERSONS OTHER THAN LICENSED ELECTRICAL MECHANICS OR PERSONS AUTHORISED BY LEGISLATION TO WORK ON THE FIXED WIRING OF ANY ELECTRICAL INSTALLATION. PENALTIES FOR CONVICTION ARE SEVERE.

IMPORTANT SAFETY NOTICE

This diagram has been prepared for use by electrically qualified service technicians. Electrolux cannot be held responsible for the interpretation of its service publications nor for any injury or damage that may occur in connection with their use.