



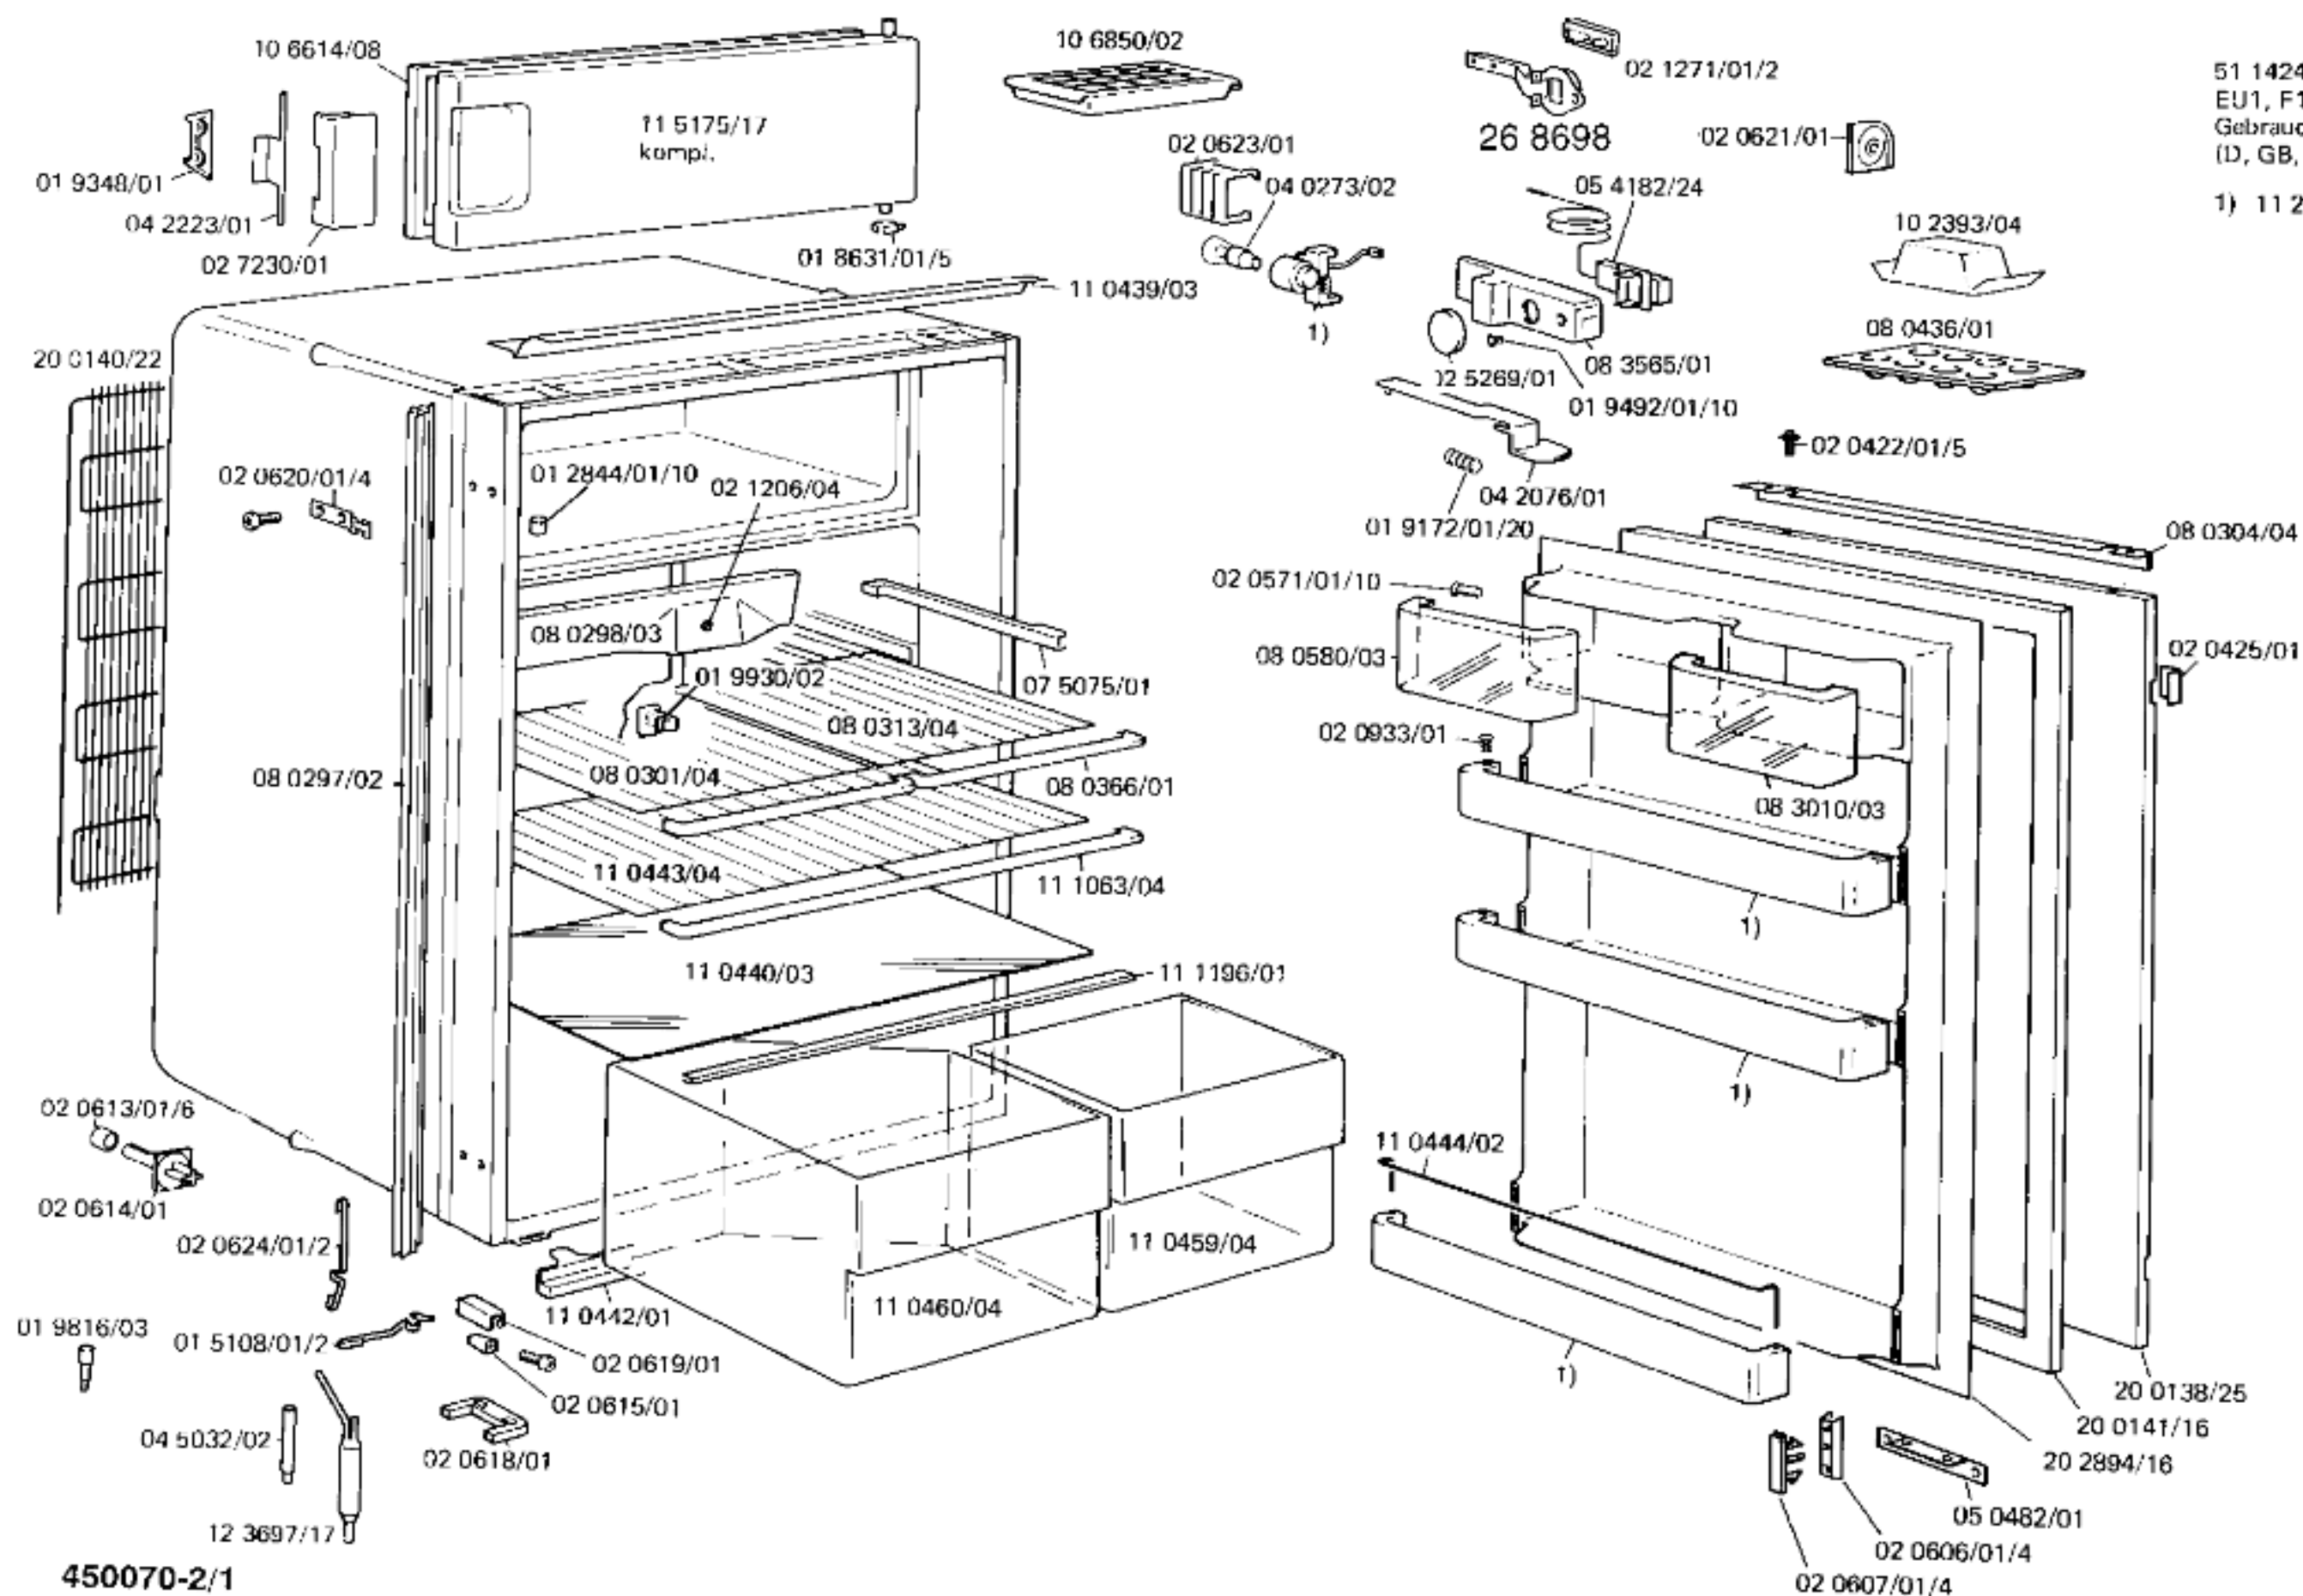

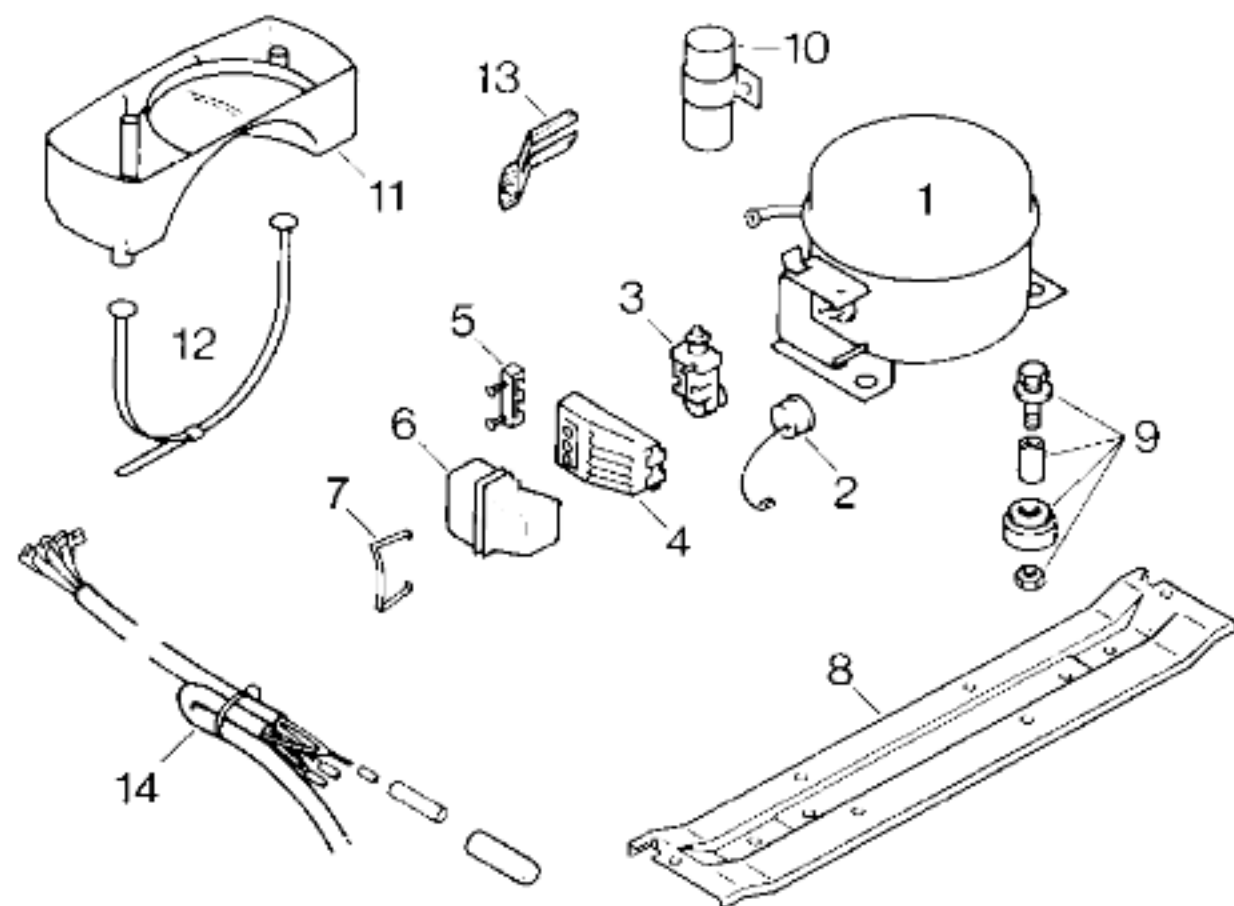

Pos.	EU1, F1, EU2, F2			
	Danfoss			
1	13 1064/45			
2				
3	02 0108/27			
4				
5	02 1361/04			
6	05 1413/06			
7				
8	11 0437/04			
9	05 0166/05/4			
10				
11	11 1243/01			
12				
13				
14				

TECHNISCHE DATEN / TECHNICAL DATA / DONNÉES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		TL 4 A			
Förderleistung/Delivery/Débit	l/h	702			
Anlaufstrom/Starting current/Cour. de démarrage	A	7,8			
Widerstand/Resistance/Résistance	Ha/main/prin.	23,8			
	Hi/aux	17,0			
Temp.-Regler/Thermostat		M + J			
Typ/Type		TF			
Reglerstellung/Position		kalt	warm		
Schaltwerte/Switching values/	„ein“	+ 4	+ 4		
Valeurs de commutation	„aus“	- 30	- 15		
	(„abtauen“ od.)	„alarm“			
Füllmenge/Fill quantity/Charge	R12	g	120		
Anschlußwert/Conn. load/Puiss. connectée		W	110		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			