


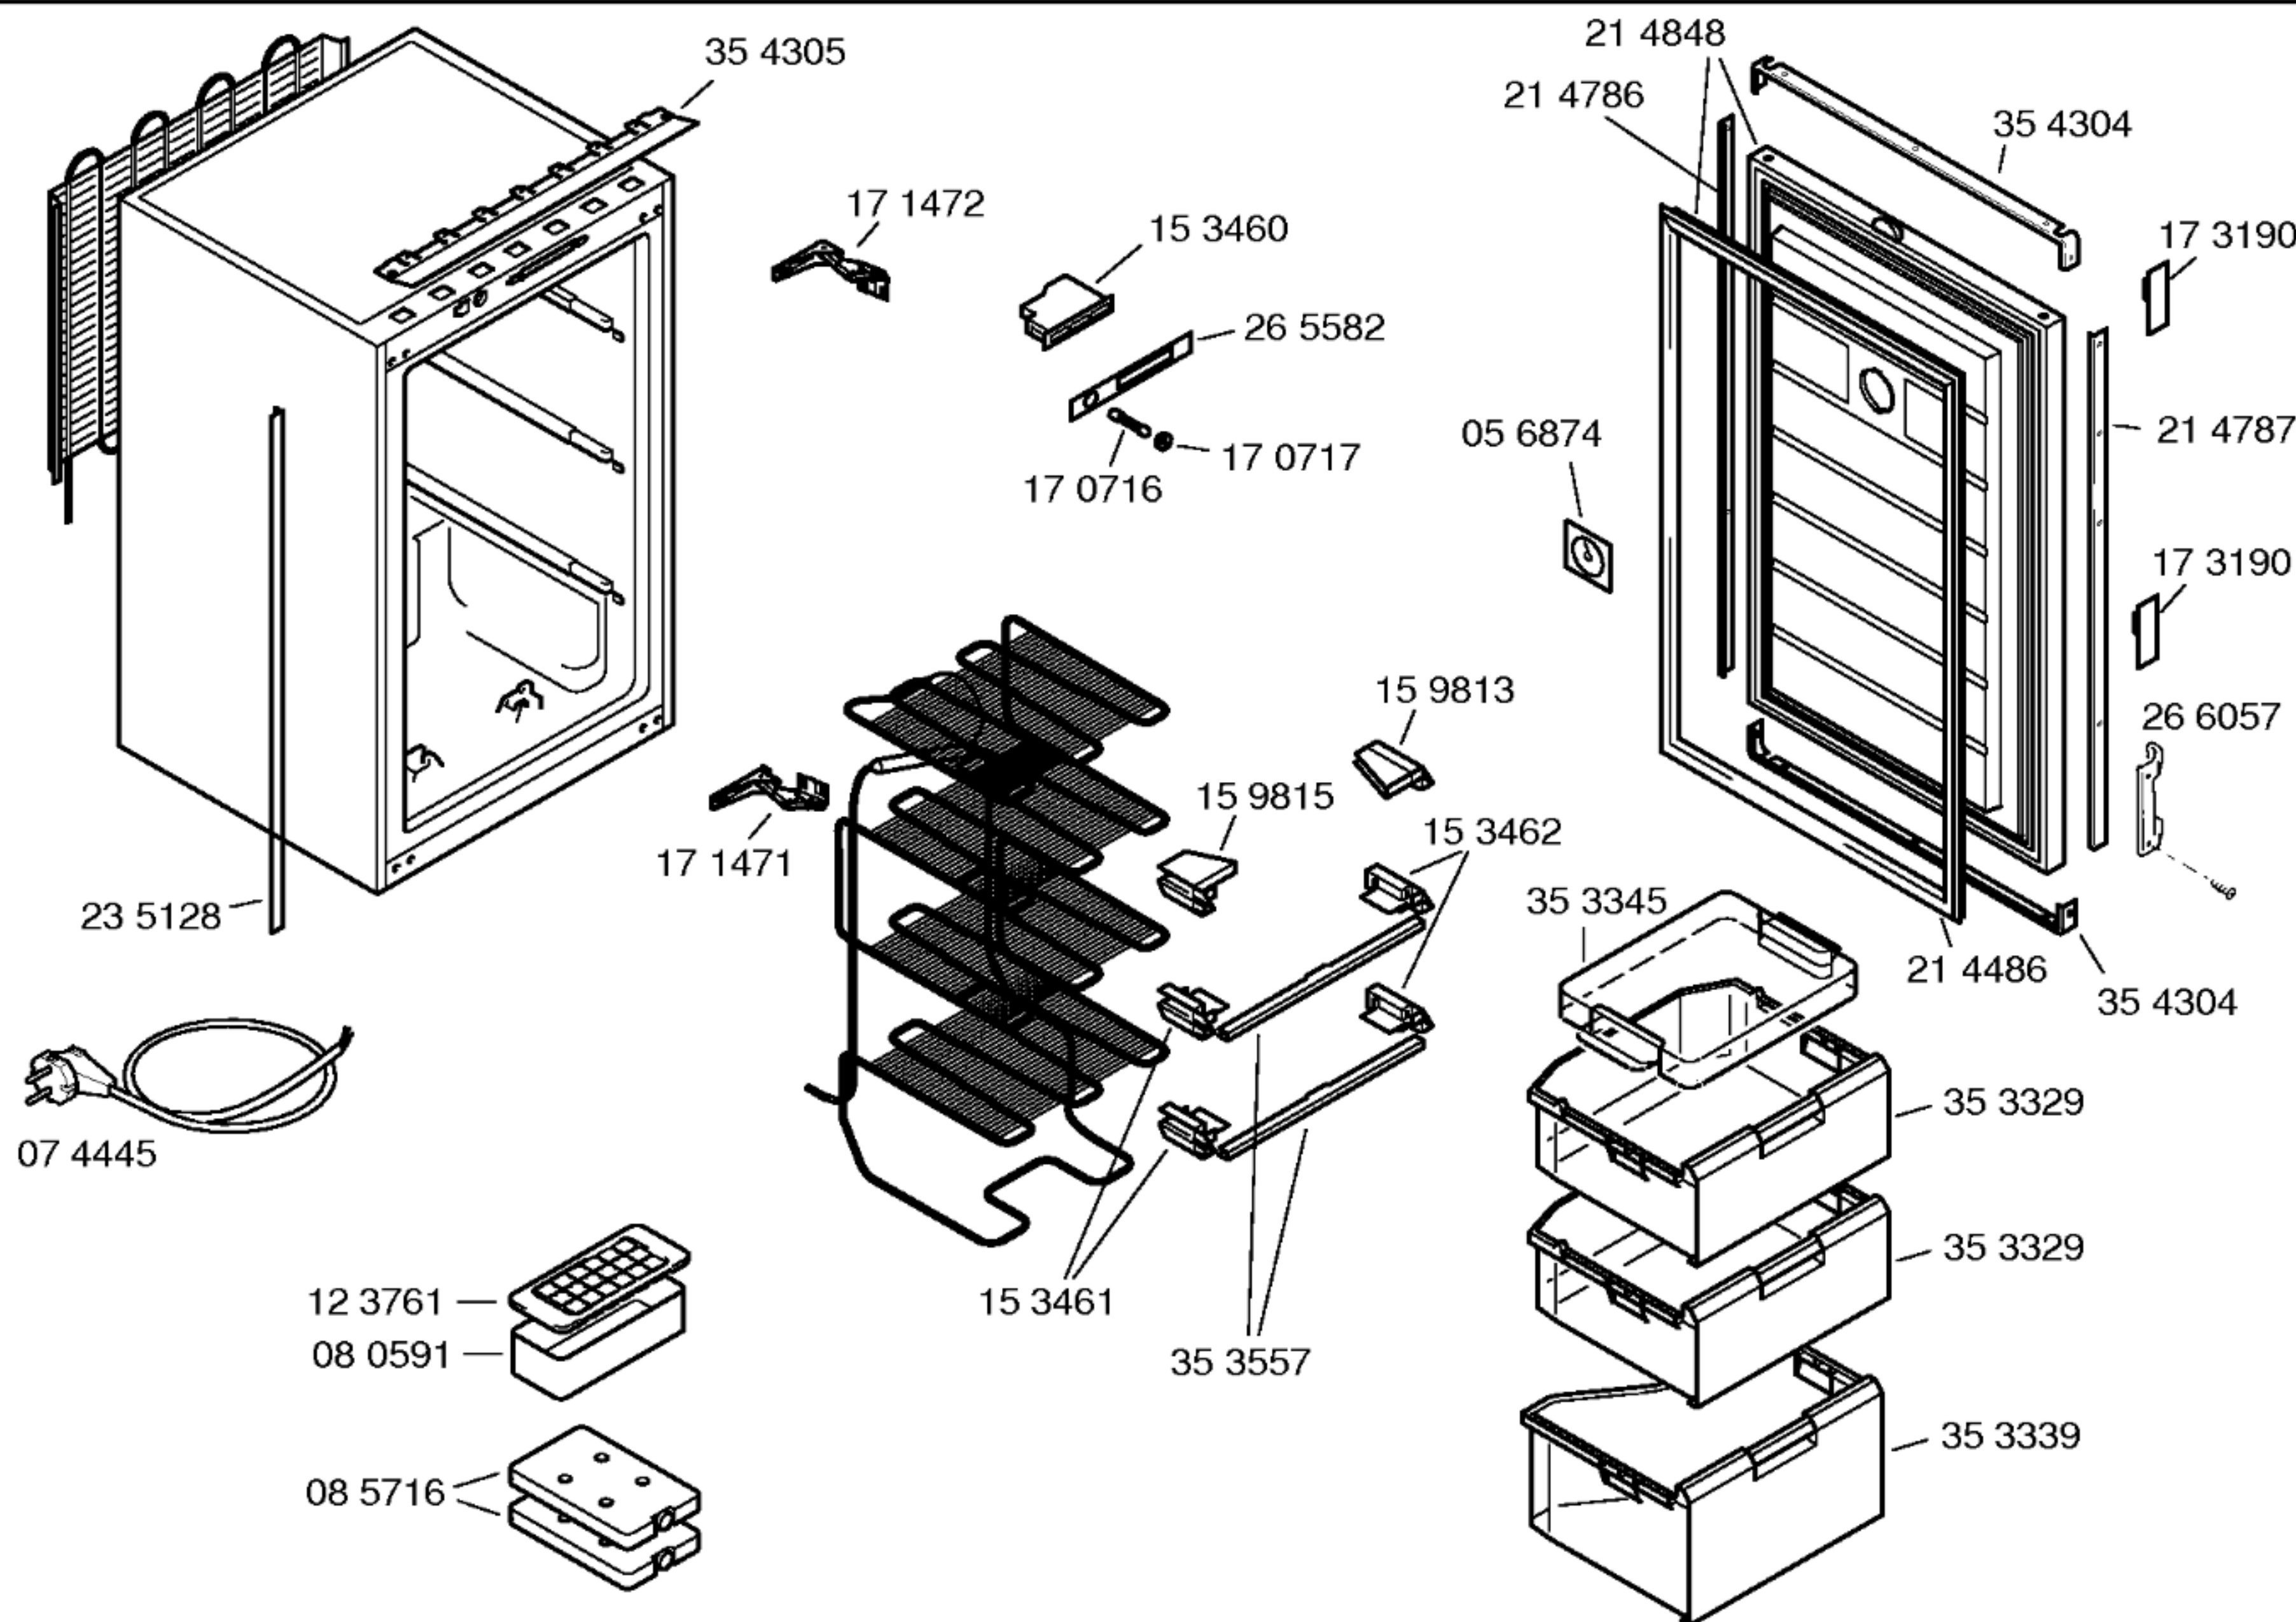

Gebrauchsanweisung
52 2707
(D,GB,F,I,NL)

Montageanleitung
52 3227
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 6056


Temp.-Regler
Rep.-Satz
26 5271

Ausgleichsblenden
braun

KZ12880	37mm
KZ12890	41mm
KZ12800	57mm

ALU	
KZ12810	37mm
KZ12820	41mm
KZ12830	57mm

Torx-Schraube 3,5x16
für Dekorrahmen
17 3166

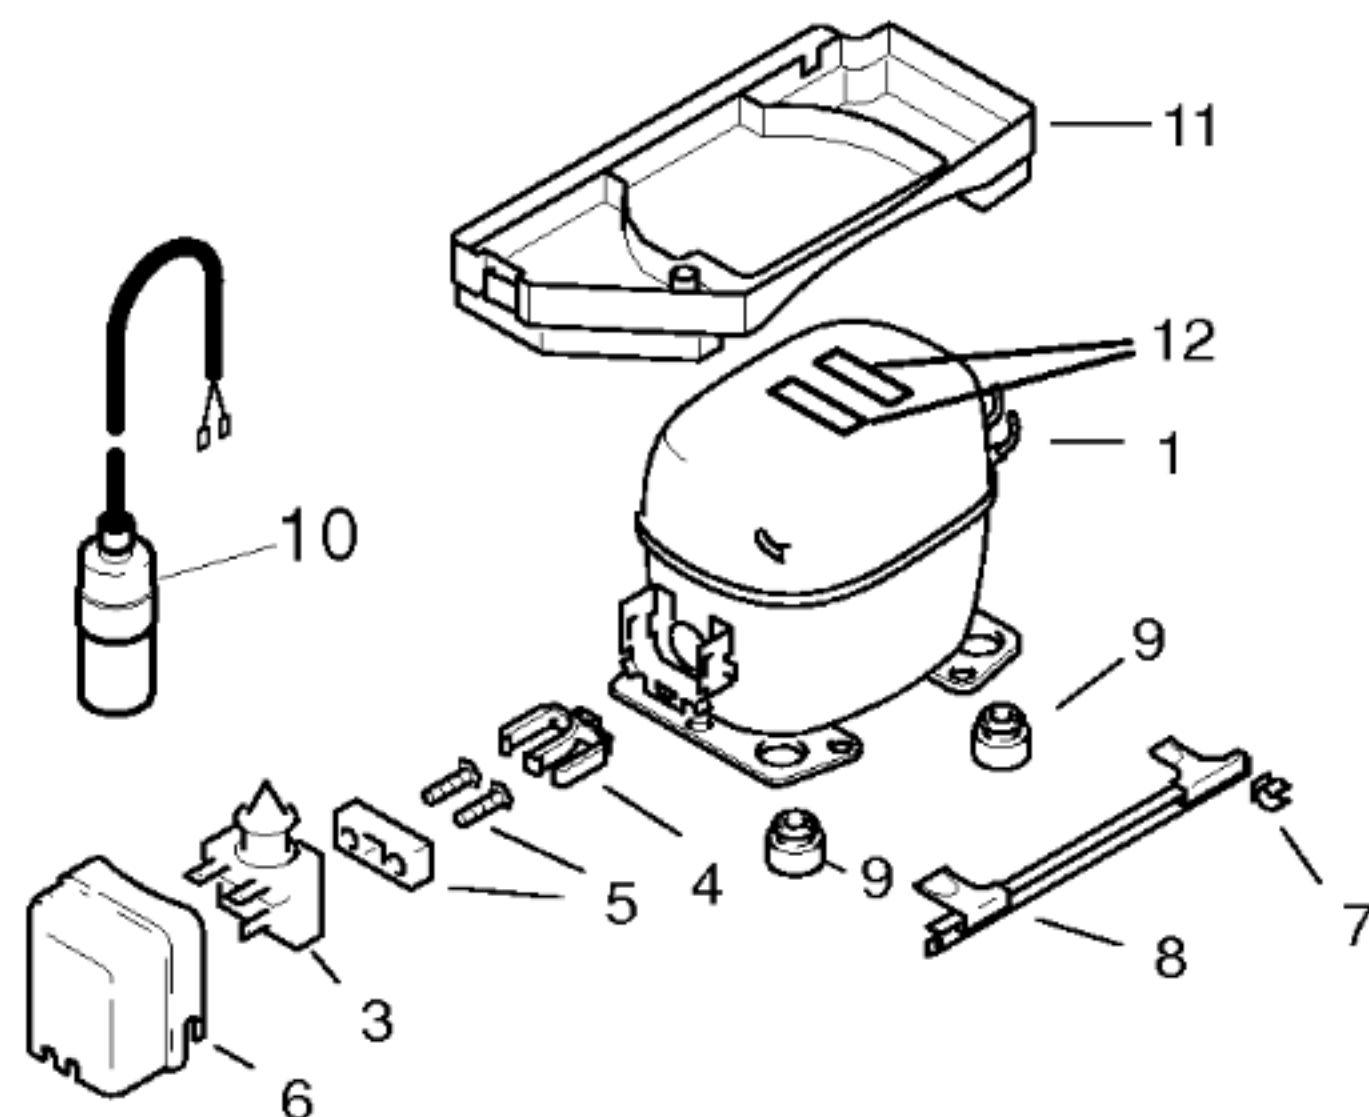

	V01	V02	
Pos.	Danfoss	Goldstar	
	TLY8K	ND69NAEM	
1	14 1657	14 1999	
2			
3	15 1055	17 0743	
4	15 1053	17 0746	
5	15 0760	17 0745	
6	15 1072	17 0744	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	05 0166	05 0166	
10	16 5852		
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss	Goldstar	
Typ/Type		TLY8K	ND69NAEM	
Förderleistung/Delivery/Débit		l/h	1404	1242
Anlaufstrom/Starting current/Cour de démarrage		A	6,4	2,2
Widerstand/Resistance/Résistance Ha/main/prin		Ω	21,6	29,5
Hi/aux		Ω	26,0	21,0
Temp.-Regler/Thermostat		KER		
Typ/Type		RCO		
Regelstellung/Position		kalt	warm	
Schaltwerte/Switching values		ein"	-23,0	-15,0
Valeurs de commutation		aus"	-31,0	-21,0
"alarm"				
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	90	83
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild